



Installation Instructions

JLT Blow Through Air Box (2011-14 Mustang GT 5.0 w/ Vortech or Paxton Supercharger)

#JLTAB-FMGPV-11

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) JLT Flow Tube, (1) 4.5-4" reducer, (2) Clamps (1) 4.5x9 Air Filter, (1) Heat Shield, (1) Hood insert 2013-14 only
2	Gather all of the following tools needed for the installation: 5/16 nut driver, 10mm socket, ratchet, extension, Phillips head screw driver
3	Remove the stock airbox by loosening the clamp at the blower tube and removing the 10mm bolt in airbox. Unplug the MAF (if used) and remove box from vehicle.
4	Remove rubber mounting grommet and metal insert from stock air box and install in JLT Heat Shield. Set JLT shield into stock location, squeeze rubber air inlet and insert into shield and bolt down using stock air box bolt.
	<div style="display: flex; justify-content: space-around;">   </div> <div style="margin-top: 20px;"> <p>Slide snorkel into Fresh air inlet</p>  </div>
5	Install reducer – JLT Flow Tube – Filter on the tube coming from the blower and installation is complete.

2013	<p>2013-14 has an open hood vent that can bring water into the filter area. If this is a concern to you, we have included a plug to keep the water away from your filter and still allow engine heat to escape. Insert foam plug into front section of your hood liner as shown. Position so there is no gap around the front and bottom edge. The foam will expand creating a water tight seal.</p>
------	--



Oil Filter: The frequency you should clean your filter will depend on your driving conditions. It is recommended to check your filter at every oil change or 3,000 miles. If there is a build up of dirt as thick as the wire mesh, then it's time to clean your filter. As dirt builds up on your filter, the restriction of the airflow also increases. More frequent cleanings will improve your fuel economy and your vehicle's performance.

To properly clean your oil filter, we recommend the S&B Precision Cleaning & Oiling Kit (located in the Parts Sold Separately Section of our website, www.JLTtruecoldair.com).

Thanks for the business. If you have any questions, please e-mail info@JLTtruecoldair.com or call 757-335-1940. Our hours are Monday-Friday. 8:00am – 5:00pm Eastern Time.

Warranty: JLT Performance Inc. will repair or replace any part of their product found upon our inspection to be defective in workmanship or material within 1 year from the purchase date for the original purchaser.

Disclaimer: JLT Performance Inc. makes no warranties whatsoever, expressed or implied, oral or written to any purchasers, except the warranty above. JLT Performance Inc. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by JLT Performance Inc. agree to hold harmless and indemnify JLT Performance Inc. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Air Filters will not be accepted for return unless they are in original plastic sealed bag. Please visit www.JLTtruecoldair.com for complete return policy.