

# SEQUENTIAL TAIL LIGHT HARNESS

(2005-2009 MUSTANG)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---


(1) LH Tail Light Harness  
(1) RH Tail Light Harness

### TOOLS REQUIRED

---

10mm Deep Socket  
Ratchet  
Panel Removal Tool

## STEP 1

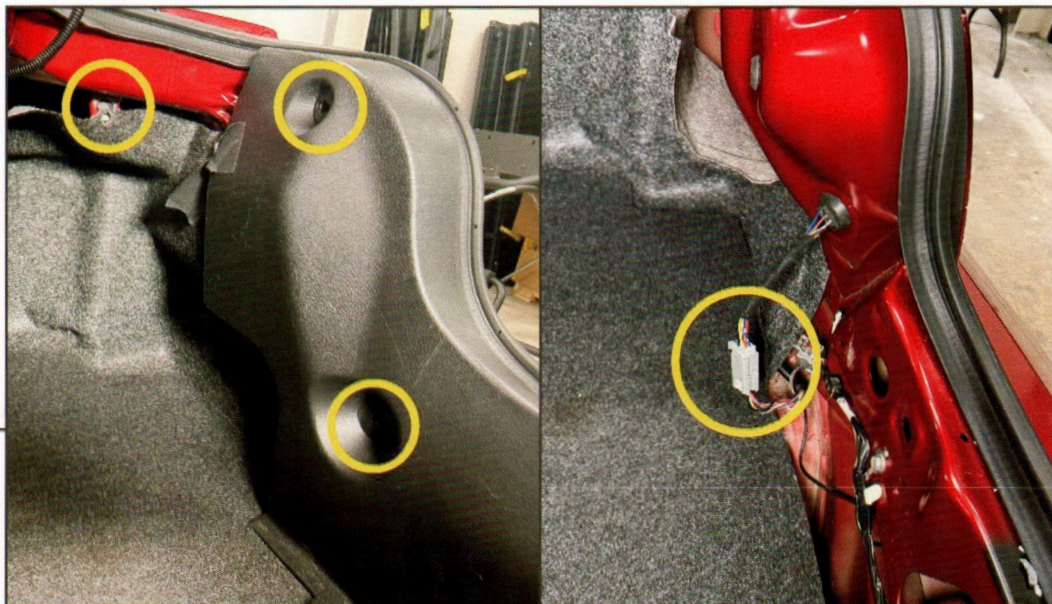

Open the vehicle trunk, and locate the plastic fasteners securing the trunk liners and center plastic trim panel to the vehicle. Remove the fasteners using a pry tool, and move the liners and panel away from the rear of the vehicle to reveal the tail light mounting hardware.

Unplug the tail light harness by lifting the pressing the gray tab, and pulling the harness away from the vehicle body harness.


## STEP 2



Remove (3) 10mm nuts from the tail light mounting studs.

Pull the tail light assembly away from the vehicle body, and place on a soft workable surface facing downwards to remove the wiring harness,




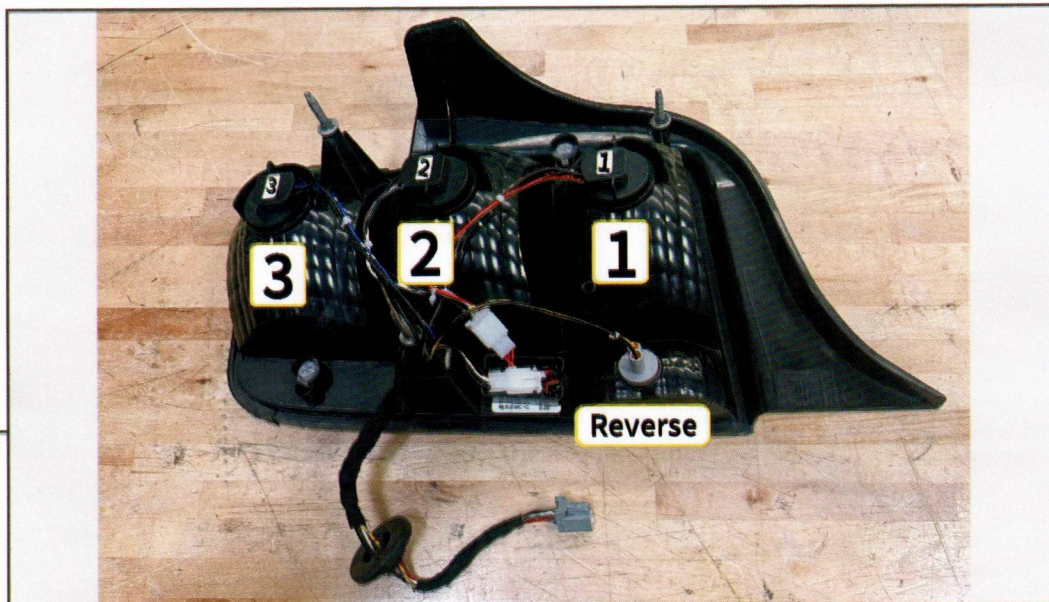

### STEP 3

Remove the light bulb sockets from the housing, and remove the harness from the back of the tail light.

Transfer the light bulbs to the new harness. Use the diagram above to identify the location of each light socket, and secure to the tail light housing. Secure the sequential module to the inside of the light housing using the attached double sided tape.

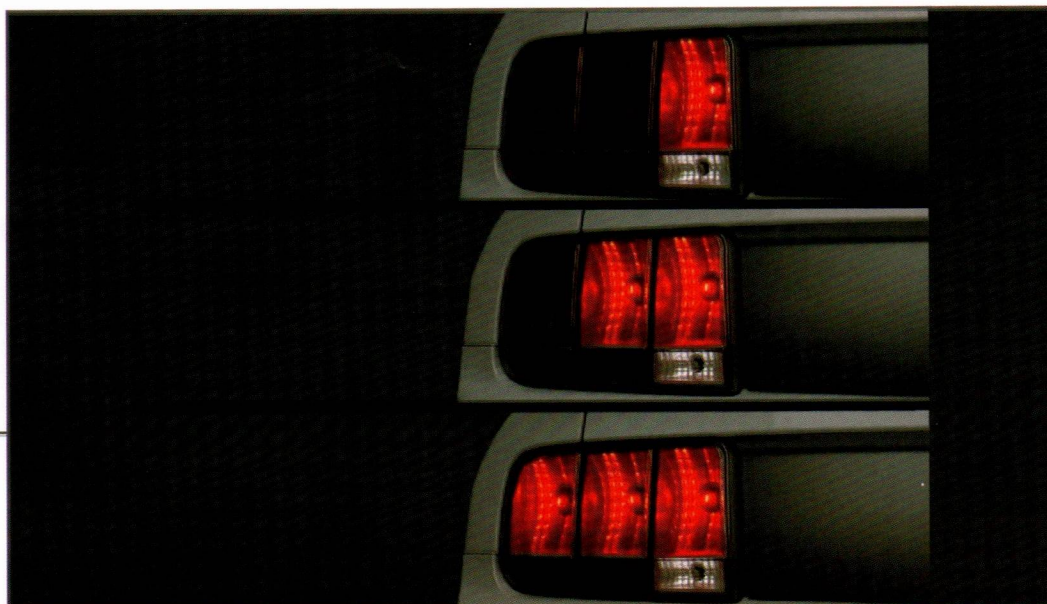

### STEP 4

Re-install the tail light to the vehicle following Steps 1-2 in reverse order. Ensure the rubber grommet is fitted to the vehicle properly to ensure a proper weather-tight seal.

Repeat Steps 1-4 for the remaining tail light.

Installation is now complete.