

Instructions

Front Control Arm Bushing

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Application - Ford Mustang
(Refer current catalogue listing)

Contents - 2x steel outer shells
2x steel tubes 16mm ID
2x steel shells 19mm ID
4x bushings
Grease



1. Raise vehicle evenly and safely support.
2. Proceed to remove front wheels.
3. Locate and un-bolt front control arm.
(Tension link)
4. Press out original bushing including steel outer shell.
5. Proceed to press in supplied steel outer shell - note chamfer on shell to assist with install. Press shell in central.
6. Push in supplied 2-piece bushings into steel shell.
7. Grease bushing ID and face with supplied grease only.
8. Use supplied steel tube that suits your bolt (16 or 19mm).
9. Re-fit arm to vehicle - tighten.
10. Check wheel alignment.



Un-bolt and re-tighten to 90 lb ft.

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.