

Instructions

Front Strut Tower Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Install Guide

1. Raise front of vehicle evenly and safely support under chassis. Check wheels are off the ground.
2. Use addition jack stands to support the front control arms prior to loosening upper Strut Tower nuts.
3. Remove Strut Top nut and the 2 lower clevis bolts - remove strut from vehicle.
4. Secure the vehicle spring as per below - This should only be executed by a qualified trades-person.
5. Disassemble strut top - remove and replace rubber upper and lower bushings.

Re-use plastic boot and steel retainer as per below.

6. Re-fit strut to vehicle and tighten to manufacturers specs.
7. A wheel alignment is recommended immediately after install.


Contents:

2x upper bushings (small)
2x Lower bushings (large)
2x steel tubes



Remove excess rubber from steel boot retainer

Re-use rubber boot

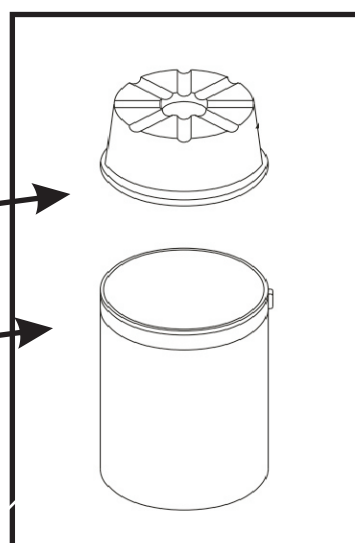

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.