



# How to Determine Coupler Size

## 1. TOOLS NEEDED

Caliper or a ruler and painter's tape.

## 2. DETERMINE WHERE TO MEASURE

If there is a bead or raised ring at the end of the tube, do not use it to determine your measurement. Be sure to measure before or after the raised portion.

## 3. MEASURE (in inches)

Measure the outside diameter of the tube. If you do not have a caliper, wrap a piece of painter's tape around the nipple. Mark where the tape intersects and measure that length using a ruler. Then divide that number by pi (3.14) to determine the outside diameter.

## 4. SIZE

Use the outside diameter to determine the inside diameter of the coupler size you'll need.

