



VENTILATED SEAT COVER WITH MASSAGE

(UNIVERSAL)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Seat Cover
(1) 110v Adapter

TOOLS REQUIRED

N/A

SKU # U11695-AM

STEP 1

Lay out and identify the seat cover mounts.

Head Rest Strap: Un-clip the strap buckle, then fit the strap around the base of the head rest and re-secure.

Seat Base Strap: Un-clip the strap buckle, then fit the strap around the back rest of the seat and re-secure.

Front Hooks: Secure the hooks to the base of the seat. Ensure to avoid any moving components.

STEP 2

Plug the seat cover into the vehicle 12V outlet. If using the seat cover inside, use the included 110V adapter to use a wall outlet.

Locate the seat cover controller in the seat cover base. Use the diagram above to allow the seat cover to function.