




A-ARM SUPPORT – 2005 MUSTANG

Part # AAS001

1. Lift vehicle and support safely with stands placed under the frame rails.
2. Locate the two A-arm bolts on the rear of the K-member and remove the nuts with a 21mm socket.
3. Install the BMR A-arm support, reinstall the OE nuts and tighten to 140 ft/lbs.
4. Lower vehicle.

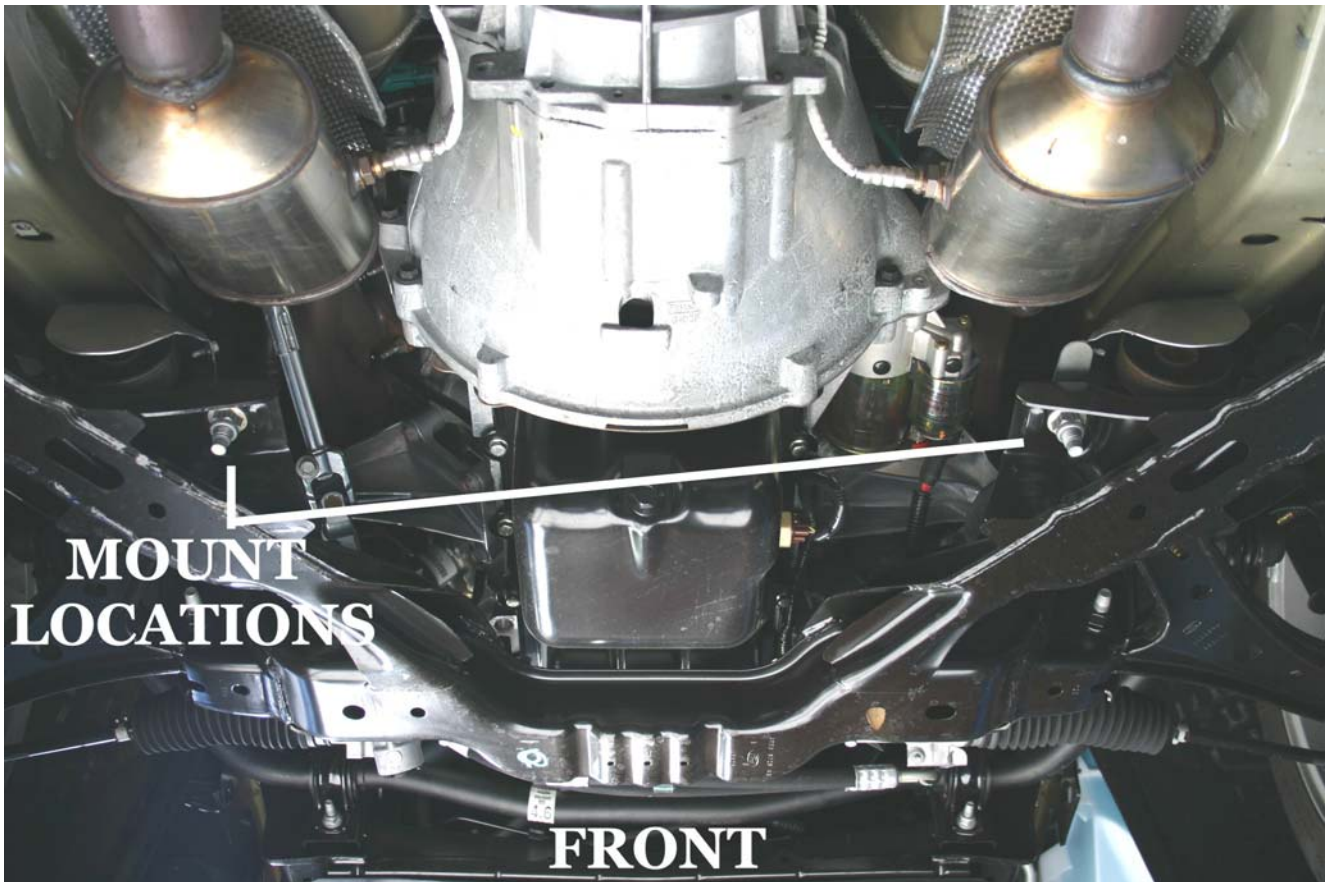

WWW.BMRFABRICATION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to the vehicle/person during installation or use of this product.