

Part #4414 2013-2014 Ford Mustang GT500 Style Lower Grill

**Notice: Install new parts according to these instructions!
Altered Parts are Non-Refundable!**

Step 1

Follow these instructions to remove the front bumper. Remove the 4 plastic push pins and the 4 silver bolts along the top of the bumper. Remove the black plastic radiator cover. Remove 3 screws in each wheel well. Remove the 12 screws along the bottom front edge of the bumper. Lightly pull on the sides of the front bumper where it meets with the fenders this will release the bumper. Now all the hardware has been removed.

DO NOT REMOVE BUMPER UNTIL STEP 2 IS COMPLETE!

Step 2

Pull on the plastic inner wheel wells to gain access to the back side of the fog lights and turn signals. Reach inside and disconnect the light bulb/plug from the light housing. Begin to remove the bumper by pulling upward then pulling forward to clear the foam reinforcement behind the bumper. Now you have gained access to temperature sensor; remove from the lower grill.

Step 3

Once the bumper is completely removed attach the sensor to the rubber shroud as shown in Fig. A.



Fig.A

Step 4

To remove the lower grill push on the bumper opening to release the grill and tap with the palm of you hand pushing the grill forward to loosen it as shown in Fig.B.

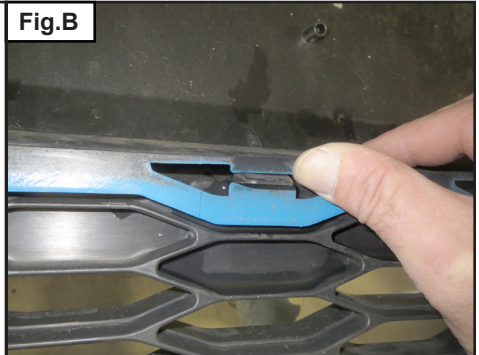



Fig.B



PART #4414		
QTY	DESCRIPTION	HARDWARE #
1	HEXAGON SCREEN	024
8	PHILLIPS SCREWS	10947-01704


Step 5

If you do not have a black car then a small portion of the bumper needs to be painted. This portion of the bumper can be seen after the new grill is installed. Mask up the 4 tabs on the top portion of the bumper opening and paint them black as shown in Fig. C.

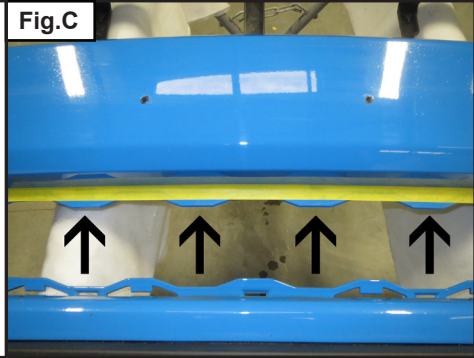


Step 6

Lay the screen into the bumper opening and centered from left to right, apply a small piece of tape to each side of the screen to hold it in place as shown in Fig. D.

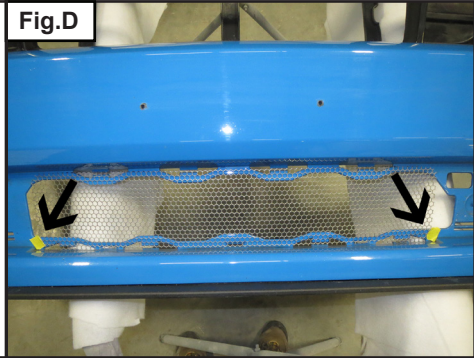

Step 7

Place the new lower grill into place and centered from left to right. Apply 3 pieces of painters tape to hold it in place as shown in Fig.E.

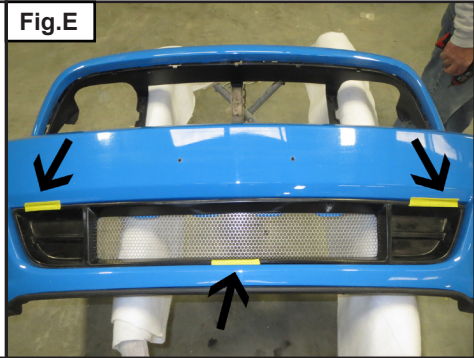

Step 8

Install the 8 screws (4) to hold the screen in place and (4) to secure the grill to the bumper as shown in Fig. F1 and Fig. F2.

