




RADIATOR SUPPORT / SWAYBAR DELETE

Part # RS002

1. Lift vehicle and support safely with stands under frame rails.
2. Using a 18mm socket, remove the sway bar end links from the strut on each side.
3. Using a 15mm socket, remove the sway bar cross member mounts and lower the swaybar/endlink assembly.
4. Locate the plastic bumper cover support and remove the 7 screws using a 7/32" socket. Remove cover.
5. Using a 10mm socket, loosen the nut that retains the AC line clip to the top of the factory radiator cross member.
6. The brake lines are attached in two areas by clips on the cross member. One is located on the vertical section of the passenger side and the other is on the horizontal section of the driver's side. Pop the brake line out of these clips.
7. Place a jack stand under the radiator to prevent it from moving when the cross member is removed.
8. Using a 18mm socket, remove the 4 bolts and lower the cross member.
9. Remove the two rubber isolators from the factory cross member and install them into the BMR cross member.
10. Install the BMR cross member and tighten nuts to 110 ft/lbs.
11. Remove jack stand from under radiator.
12. If using the factory bumper cover support, re-install it to the bumper cover and zip tie the back portion to the new cross member.
Zip tie the brake line in the middle as shown in the image below
13. Lower vehicle.

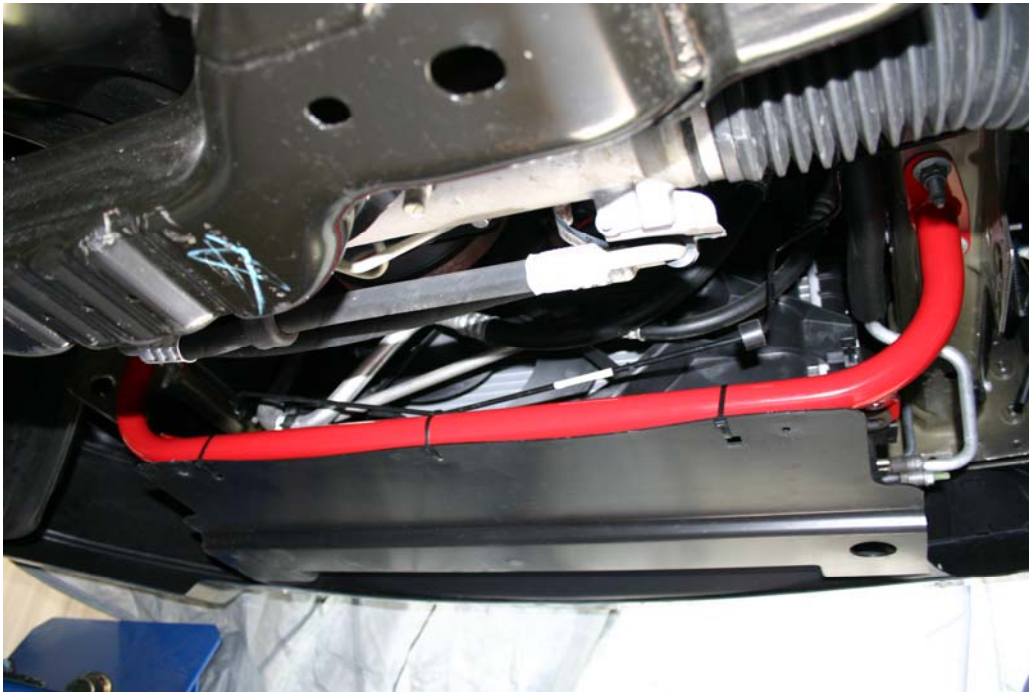

WWW.BMRFABRICATION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to the vehicle/person during installation or use of this product.