




Installation Instructions

Included In Package: 0

- 1- Mustang Street Flare kit
- 1- Roll tape
- 8- 3M Adhesive Promoter sticks
- 4- Defenderworx Oval Emblems

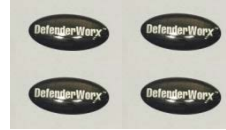

Installation Tools Needed:
3M general all purpose cleaner
Scotchbrite pad
Cleaning cloths



Step 1:

Clean the vehicle where tape will stick with a good wax or grease remover. Use 3M general all purpose adhesive cleaner.



Step 2:

Apply the provided 3M adhesive promoter onto the part and press the tape on.



Step 3:

Install the provided Ford ovals AFTER flares have been painted.



Step 4:

Install large front street flare by aligning front edge to bumper line. Do not remove red backing from tape until fitment is confirmed.



Step 5:

Install bumper street flare by aligning front edge to bumper line. Do not remove red backing from tape until fitment is confirmed.




Step 6:

Install small lower street flare by aligning top edge to fender line. Do not remove red backing from tape until fitment is confirmed.




Included In Package:

- 1- Mustang Street Flare kit
- 1- Roll tape
- 8- 3M Adhesive Promoter sticks
- 4- Defenderworx Oval Emblems

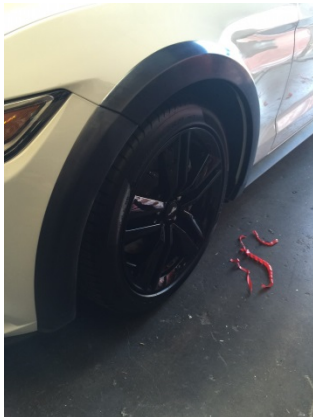


Step 7:

Check that all three street flares are installed securely with clearance for tires before driving vehicle.

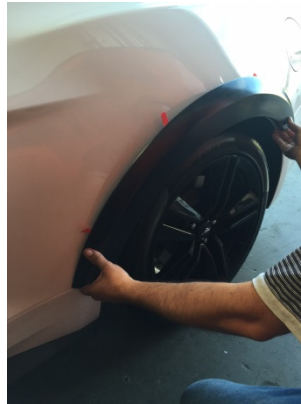

Step 8:

Install large rear street flare by aligning front edge to lower fender line. Do not remove red backing from tape until fitment is confirmed.

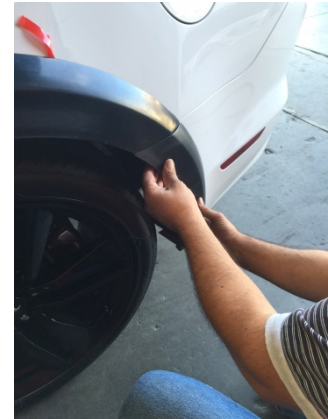

Step 9:

Install bumper street flare by aligning front edge to bumper line. Do not remove red backing from tape until fitment is confirmed.




Step 10:

Install small lower street flare by aligning top edge to fender line. Do not remove red backing from tape until fitment is confirmed.



Step 11:

Check that all three street flares are installed securely with clearance for tires before driving vehicle.

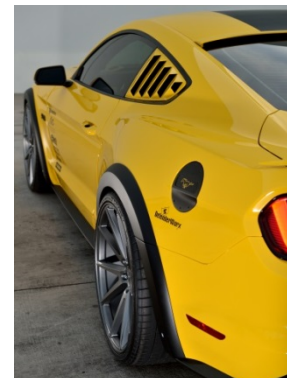

Install Tip:

If using stock 18" wheels, we recommend using a 1.5" wheel adaptor. If using aftermarket wheels a low offset +15 to +20 front and +25 rear to give a more aggressive look.



URETHANE PART PAINT PREPARATION

***Note-** Please consult a professional paint shop for any questions on painting of parts

- Wash the paintable surfaces and the tape ledge with heavy duty detergent degreaser (purple stuff, red hot and USP90 scuff available at most paint suppliers), use a gray scuff pad until dull and rinse thoroughly.
- Sand across item with 400 grit sandpaper or finer. Check for imperfections and repair as needed. Repair with “Evercoat Metal Glaze”, sku #100416 and 2 part polyester putty.
- Re-wash with heavy detergent degreaser and USP90 scuff using gray scuff pad to remove residue. Rinse thoroughly and wipe dry with a lint free towel.
- Spray item with plastic adhesion promoter
- Spray item with sealer base coat and then apply clear coat
- Do NOT oven bake this part above 100 degrees F for no more than 2 hours. This part should have support during the oven baking process to avoid warping the part.