


Prosport Inc.

EVO Series Boost Gauge

Green/White Display

Digital Boost

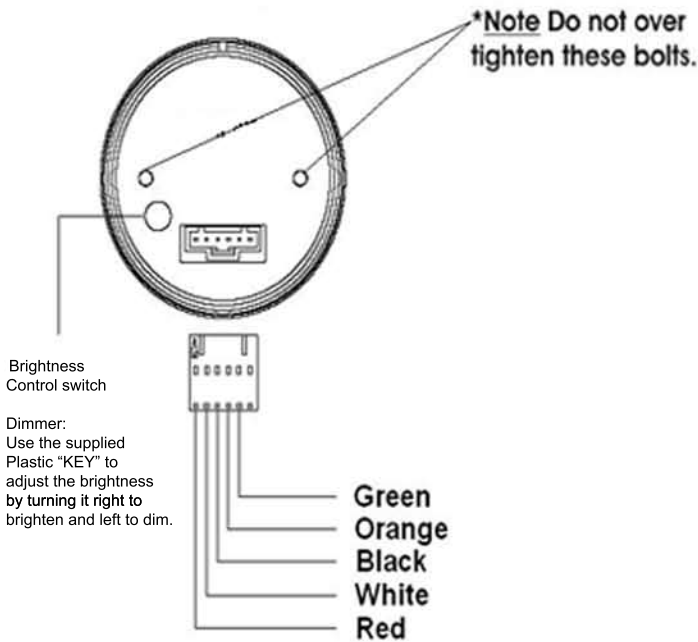


Wiring Instructions

- Red Wire-** 12v Accessory Power
- White Wire-** 12v Accessory Power
- Black Wire-** Ground
- Orange Wire-** 12v Headlight Switched Power (This is a power source that only gets power when headlights are on)
- Green Wire-** Connects to the White wire from the boost sender


Lighting Options

Day Time	Night Time	Installation
White	White	White-- Connect to acc. Power Orange-- Do not connect
Green	Green	White-- Do not connect Orange-- Connect to acc. Power
White	Green	White-- Connect to acc. Power Orange-- Connect to Headlight Switched Power
Green	White	White-- Connect to Headlight Switched Power Orange-- Connect to acc. Power

Cut boost line and install supplied plastic "T" fitting. Connect "T" fitting to In-Line Filter with supplied hose. Then connect In-Line Filter to sender with supplied hose.

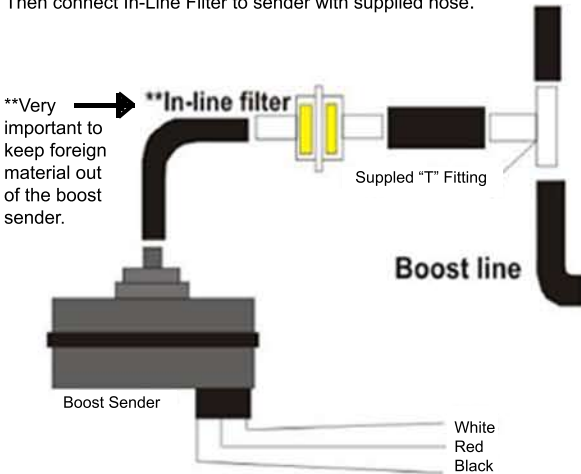

- Black-** Ground
- Red-** 12v Accessory Power
- White-** Green wire from gauge

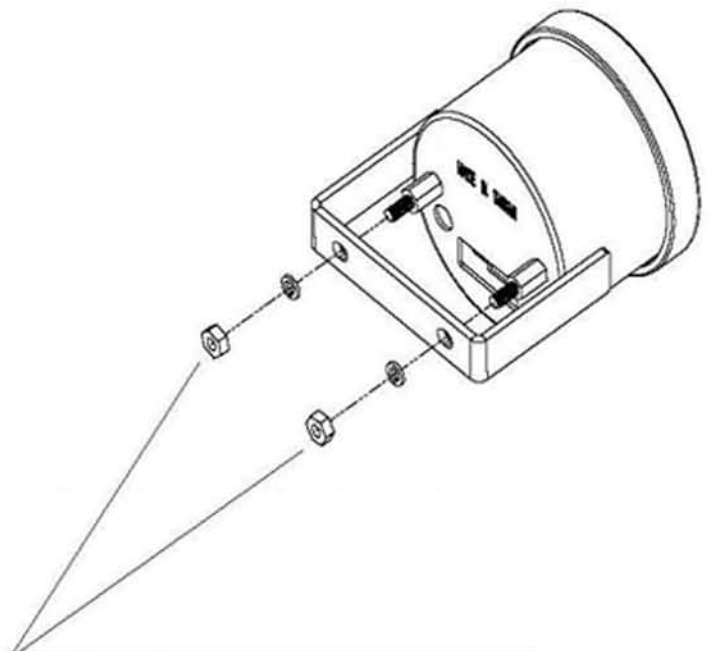

Do not over tighten bolts when installing U bracket. Doing so will cause damage to movement inside.