




AMERICAN CAR CRAFT INSTRUCTIONS

2005-2009 MUSTANG BCM COVER

PART#273003 patent pending

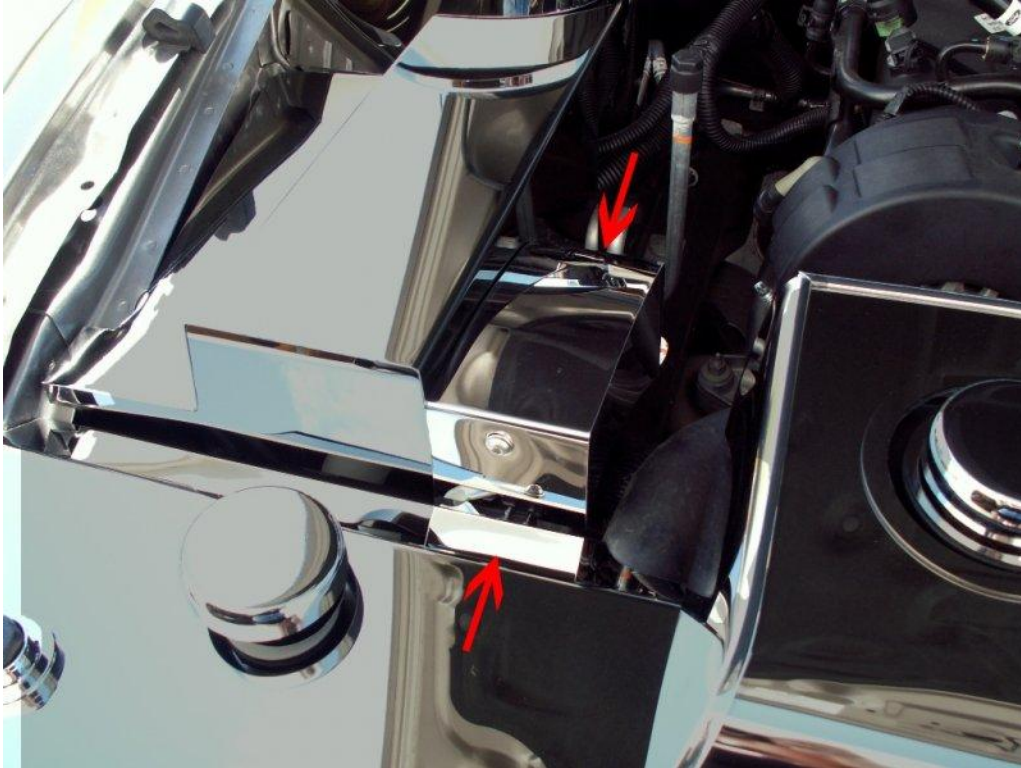

PARTS INCLUDED:

- 1-Stainless BCM Cover
- 2-Stainless Allen Bolts 6mm
- 2-Stainless Washers

Your new cover comes to you with a protective liner. Do not remove liner until prompted by instructions.

1. Remove the factory bolts in the front and in the back of the BCM unit. NOTE: These factory bolts will not be reused.

2. Place the new cover over the BCM and line up the two holes you just exposed. Remove the protective liner then bolt the new cover in place using the two stainless replacement Allen bolts and washers provided.

Note: Care must be taken when cleaning your cover. It is a good idea to lightly dust your cover with a clean soft cloth first in order to prevent any particles from scratching it. Then wipe (using a new clean soft cloth) with a good quality streak free glass cleaner.

If any questions occur during installation, please contact American Car Craft at

727-861-1500.

Thank you and enjoy your new purchase.

**AMERICAN CAR CRAFT
18924 SAKERA ROAD-HUDSON FLORIDA 34667
Phone # 727-861-1500 Fax # 727-861-1520
www.americancarcraft.com**