



DECKLID PANEL

(2015-2017 MUSTANG ALL)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Decklid Panel
- (1) LH Tail Light Cover
- (1) RH Tail Light Cover
- (2) Alcohol Prep Pads
- (2) Adhesion Promoter

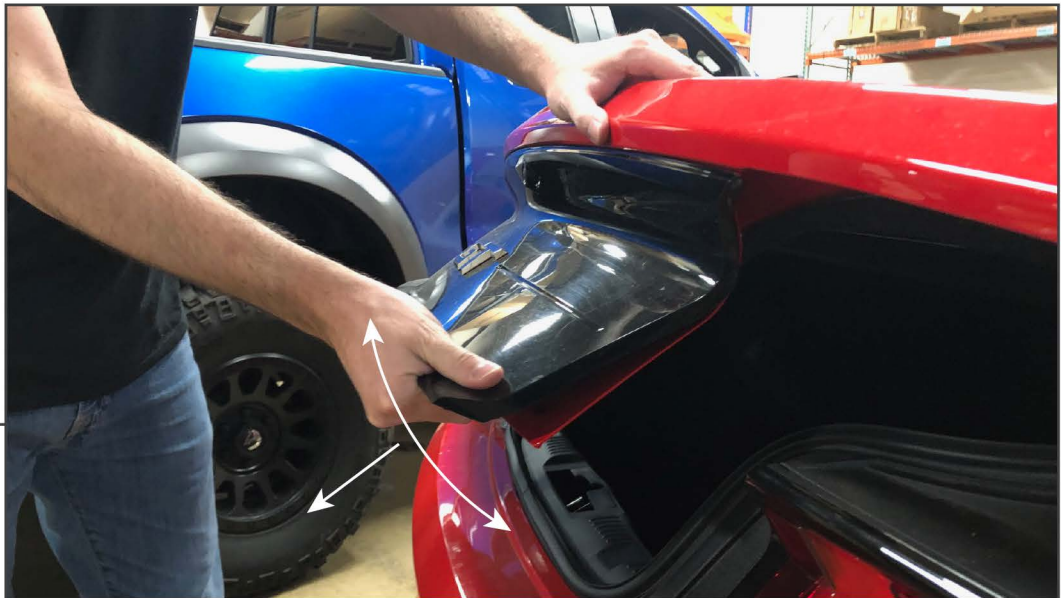
TOOLS REQUIRED

- Automotive Soap
- Microfiber Towel
- Trim Panel Removal Tool
- Flat Head Screwdriver
- 5.5mm, 7mm, 8mm, 10mm Sockets
- Ratchet & Extension
- Pliers

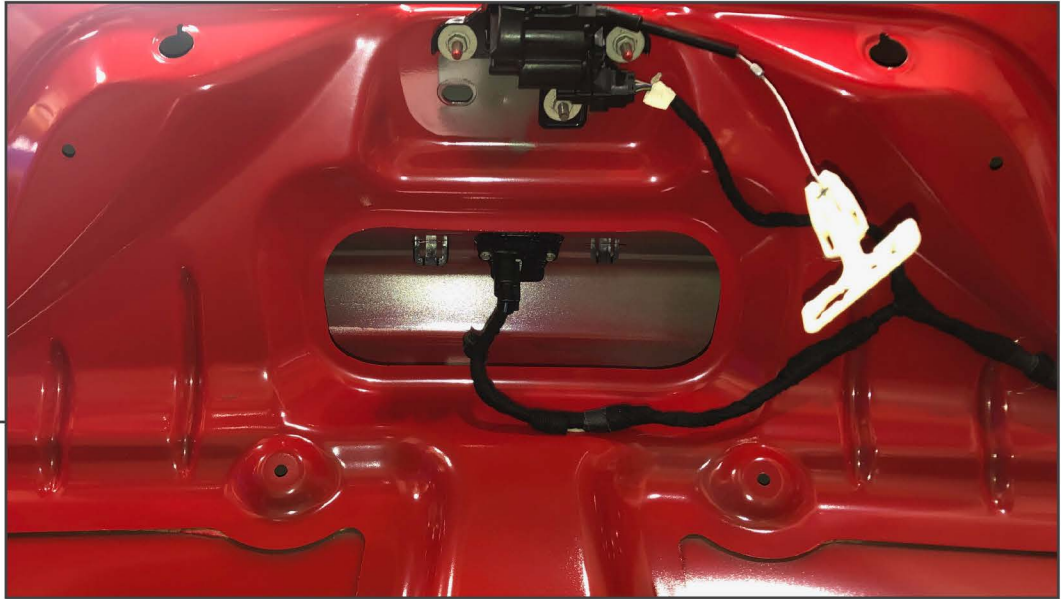
SKU # 408126

STEP 1

Using the Trim Panel Removal Tool, gently remove the caps covering the decklid panel bolts. Remove the (4) 7mm bolts, taking your time so they don't accidentally fall between inner and outer layers of the panel.

STEP 2

To release the top clips of the decklid panel, start on the left or right hand side and grab the bottom edge of the panel, which should be loose since you've removed the (4) 7mm bolts. Gently rotate the panel up and down while pulling light towards you, gradually increase pulling force as necessary. This process will release the (4) metal clips at the top of the decklid panel, but there are still (2) plastic clips directly next to the reverse camera that will need to be release by removing the trunk lid liner in the next step. **AGGRESSIVE PULLING CAN CAUSE THE SHEET METAL AROUND THE CLIP LOCATIONS TO BEND, SO PLEASE TAKE YOUR TIME.**

**STEP 3**

Remove the (9) push rivets, (2) rubber bumpers, and trunk latch trim to remove the trunk lid liner. Once the liner is removed you will have access to the (2) remaining clips holding the decklid panel and the reverse camera wiring harness. Release the clips, unplug the harness, and remove the decklid panel from the vehicle.

**STEP 4**

Remove the (2) 5.5mm bolts on either side of the reverse camera and reinstall the assembly onto the Saleen decklid panel, reusing the factory bolts. Make sure you keep the same camera orientation or the image will be upside down.



STEP 5

Using a flat head screw driver, remove the metal clips from the factory decklid panel and reinstall them on the Saleen decklid panel.



STEP 6

Reconnect the camera harness and install the Saleen decklid panel using the factory screws. **TRUNK/TAIL LIGHT ALIGNMENT CAN VARY BETWEEN VEHICLES. IF THERE ARE ALIGNMENT ISSUES BETWEEN THE TAIL LIGHT COVER AND THE DECKLID PANEL, PLEASE REFER TO THE TROUBLESHOOT SECTION.**



STEP 7

Wash the taillight with soap and water and dry thoroughly. Clean the inner taillight section with the supplied alcohol pad to remove any remaining contaminants. Once dry, treat the same section with the supplied adhesion promoter.



STEP 8

Dry fit the taillight to get a clear idea of how the cover should fit on the tail light. Next, align and install the cover, pressing firmly to seat the adhesive. Repeat this step for the opposite side to complete the installation. **TRUNK/TAIL LIGHT ALIGNMENT CAN VARY BETWEEN VEHICLES. IF THERE ARE ALIGNMENT ISSUES BETWEEN THE TAIL LIGHT COVER AND THE DECKLID PANEL, PLEASE REFER TO THE TROUBLESHOOT SECTION.**



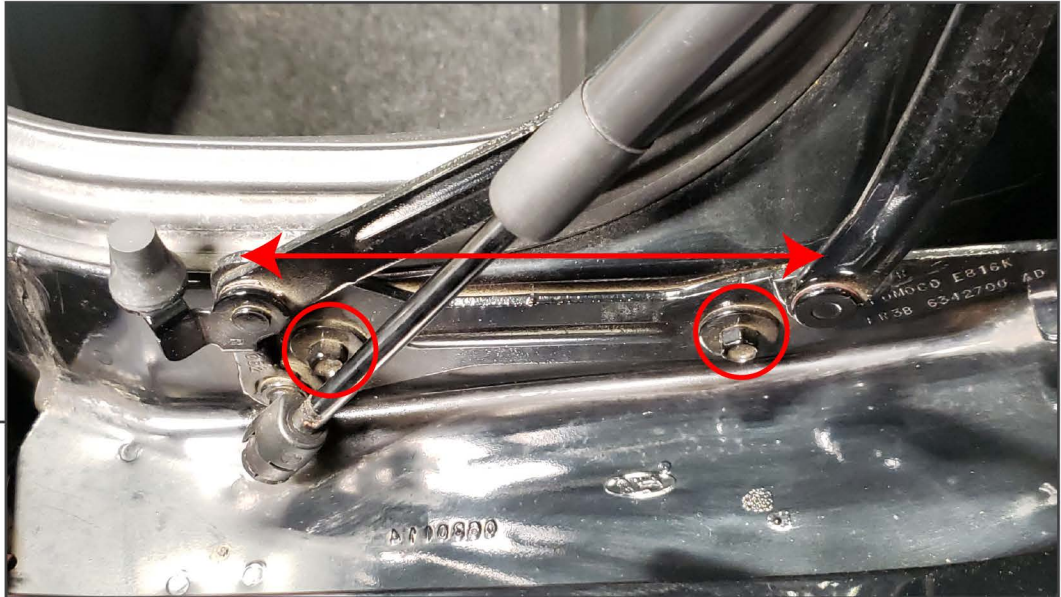
TROUBLESHOOTING

If the gap between the decklid and both tail light covers is not the same, loosen the (4) 7mm screws on the bottom of the decklid panel and shift the panel as needed.



TROUBLESHOOTING

If the tail light covers are sticking out further than the decklid panel, remove the screws and use the supplied washers as spacers to adjust the panel outward as needed.



TROUBLESHOOTING

If the tail light covers and the decklid panel still do not align properly after the installing the washers, loosen the (2) 10mm trunk lid hinge bolts and carefully shift the trunk lid in or out as needed.



TROUBLESHOOTING

If the taillight cover bars and the decklid panel bars do not align properly, you can remove your inner trunk lid panel, loosen the 8mm bolt, and adjust your trunk lid catch up or down as needed.