



HOOD VENTS

(2015-2017 MUSTANG GT)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Hood Vent Scoop
- (1) RH Hood Vent Scoop

TOOLS REQUIRED

- 9mm Socket & Ratchet
- Trim Panel Removal Tool
- Flat Head Screwdriver


SKU #408127

STEP 1




Remove the hood liner push pins and hold back the liner to gain access to the factory hood vent mounting nuts.

STEP 2

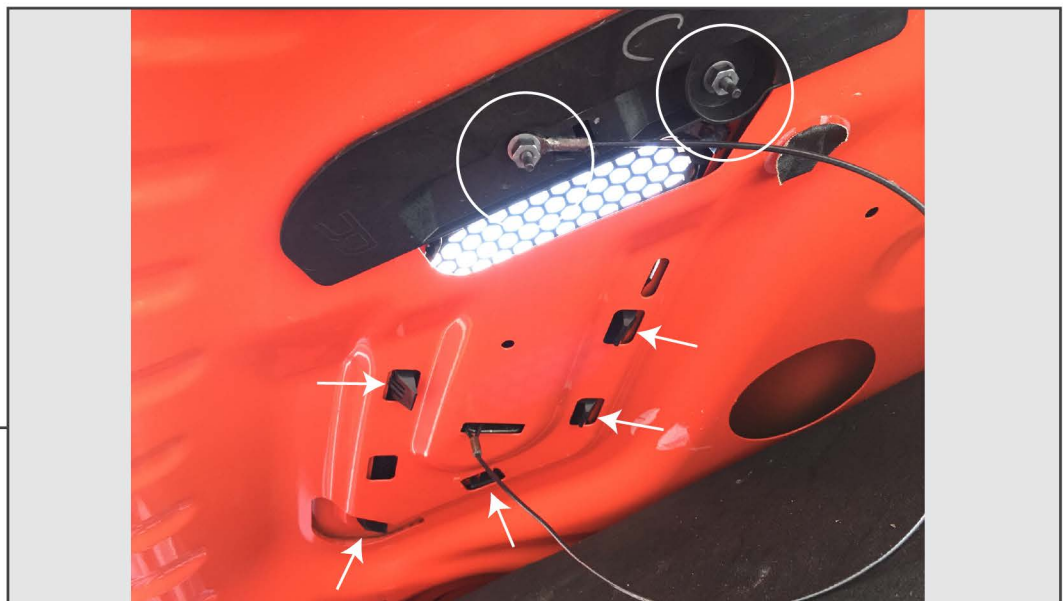

Remove the (2) 9mm nuts holding the factory vent in place. Then, using a small flat head screw driver, depress the vent clips on the underside to remove. It is important to hold the vent while releasing the clips to prevent the vent from popping out unexpectedly and scratching your hood.

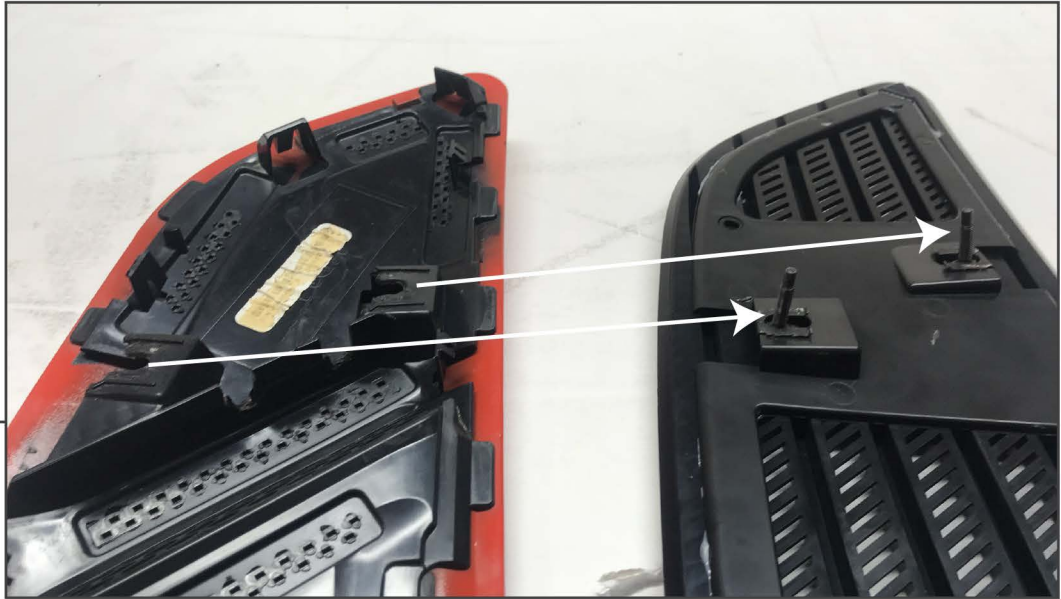

STEP 3


Remove and transfer the (2) studs from the original vent to the Saleen vent. Lightly pry on the base and slide the clip out of the vent, install by sliding on Saleen vent.



STEP 4

OPTIONAL: Tape off the hood vent (inside the dashed white lines above) and apply a black, removable paint, such as plasti-dip. This will prevent the body color to show through the vent opening. It is recommended that you apply 4-5 medium coats for ease of future removal.

STEP 5

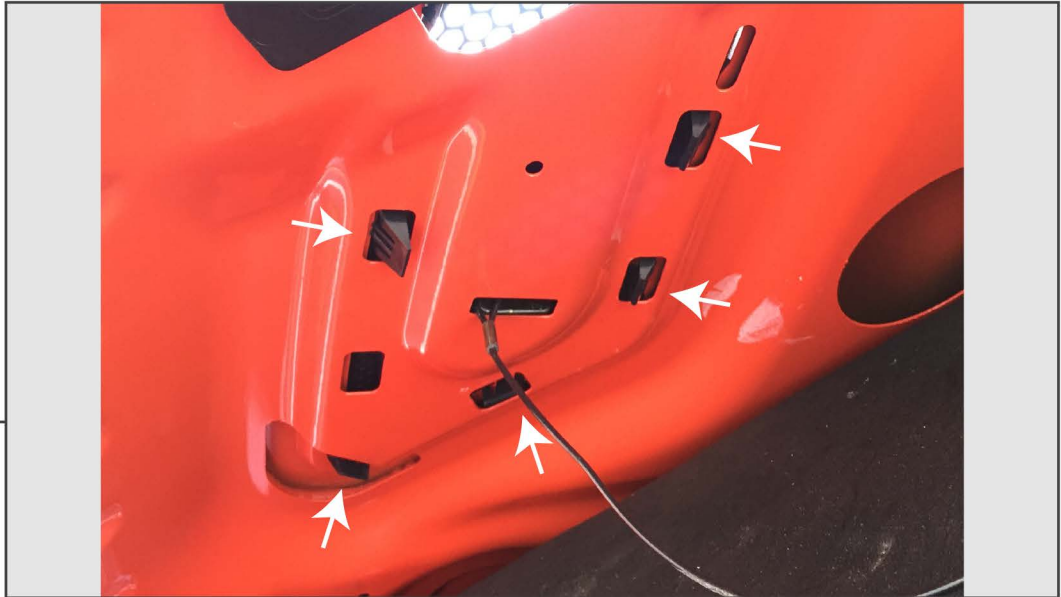

Install the Saleen vent in using the factory clip locations. Press firmly to ensure each clip is fully seated. The vents are intended to fit tightly, it may be necessary to apply light pressure on the sheet metal to help the clips snap into place.

STEP 6



Reinstall the (2) 9mm factory nuts to secure the front of each vents. Reinstall the hood liner push pins to complete the installation.