



SMOKED TAIL LIGHT COVERS

(2018+ MUSTANG ALL)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Tail Light Trim Set
- (1) RH Tail Light Trim Set
- (2) Alcohol Prep Pads

TOOLS REQUIRED


- Automotive Soap/Detailer
- Microfiber Towel

STEP 1



Begin by cleaning the rear end of the vehicle with automotive soap and water, dry thoroughly. Use a supplied alcohol prep pad to clean the areas of the tail light lens where the Velcro adhesive will make contact.

STEP 2

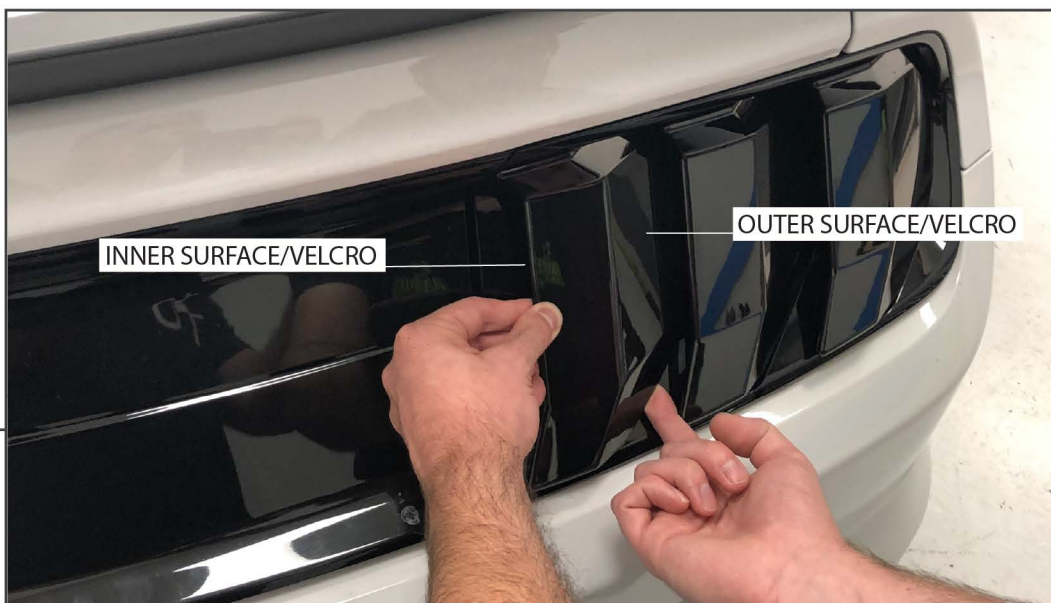

To install the tail light covers, slide the cover over the lens as far as you can before the inner/outer Velcro adhesive makes contact with the lens. Keep one finger under the bottom edge of the lens so the outer Velcro adhesive doesn't prematurely make contact, as shown. **PRACTICE THIS INSTALLATION METHOD BEFORE REMOVING THE ADHESIVE BACKING.**

**STEP 3**

Next, press firmly on the outer edge (GREEN) and adhere the inner Velcro adhesive to the lens surface. When the inner surface of the cover is seated in place, remove the finger and the outer surface/adhesive strip will fall into place. Press firmly on both Velcro locations to seat the adhesive. **PRACTICE THIS INSTALLATION METHOD BEFORE REMOVING THE ADHESIVE BACKING.**

**STEP 4**

Repeat these steps for the remaining tail light covers. **IF THE COVERS NEED TO BE REMOVED AT ANY POINT FOR CLEANING, USE A PLASTIC TRIM REMOVAL TOOL OR SQUEEGEE TO RELEASE THE VELCRO. BE CAREFUL NOT TO PRY AGAINST THE TAIL LIGHT SURFACE WHEN REMOVING THE COVERS. IF THIS IS UNAVOIDABLE, LAY A COUPLE STRIPS OF MASKING TAPE DOWN TO PREVENT SCRATCHES.**