



LED REAR SIDEMARKER LIGHTS

(1999-2004 MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH LED Light
- (1) RH LED Light
- (4) Scotchlok Connectors
- (4) Zip Ties

TOOLS REQUIRED

- Soft Pry Tool
- 10, 11mm Deep Socket
- Socket Wrench
- Phillips Head Screw Driver
- Razor Knife



STEP 1

Using a pry tool, remove the (6) plastic push pins securing the trunk trim to the vehicle. Remove the trim from the vehicle.



STEP 2


Fold back the left and right side trunk trim to gain access to the (2) 11mm nuts securing the bumper to the rear quarter panel.

STEP 3



Remove the (2) Phillips head screws on the inside of the wheel well.

STEP 4

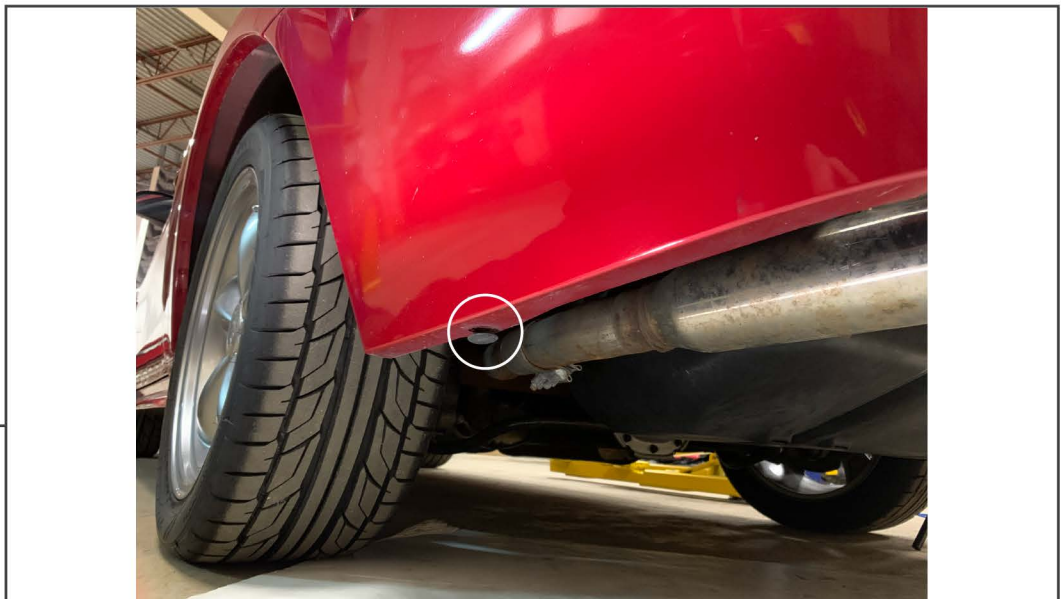

Using a pry tool, remove the push clip on the bottom of the bumper.




STEP 5

Using a 10mm deep socket, remove the (2) nuts securing the factory reflector to the vehicle. Then remove the reflector from the vehicle.




STEP 6


Align the LED reflector with the bumper. Then feed the green and black wires through their respective mounting holes.

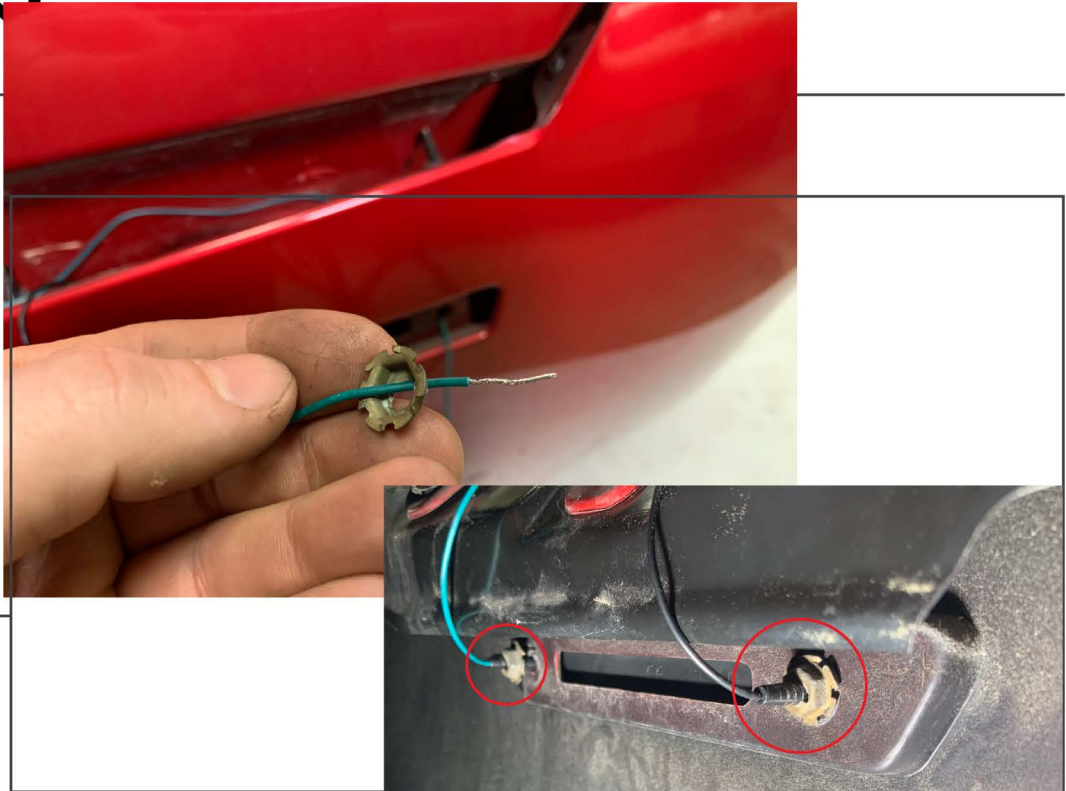**STEP 7**

Slide the original nuts over the wires as shown. Secure the LED reflector to the bumper by tightening the nuts using a 10mm wrench.

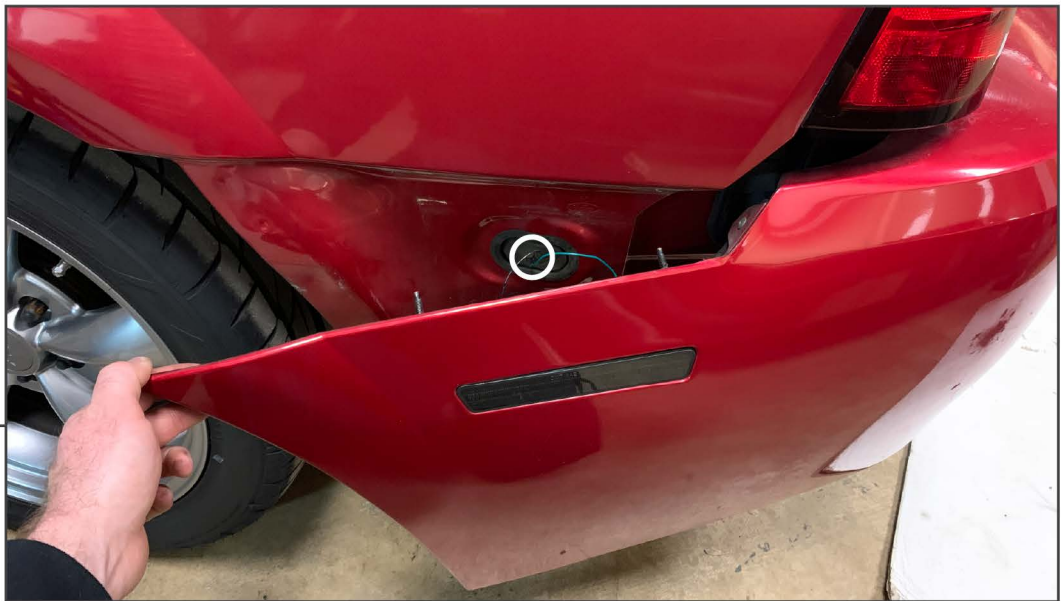**STEP 8**


Using a razor blade, cut a small hole into the body grommet behind the LED reflector. Insert the wiring through the body grommet. Feed the wiring up to the tail light wiring connector.

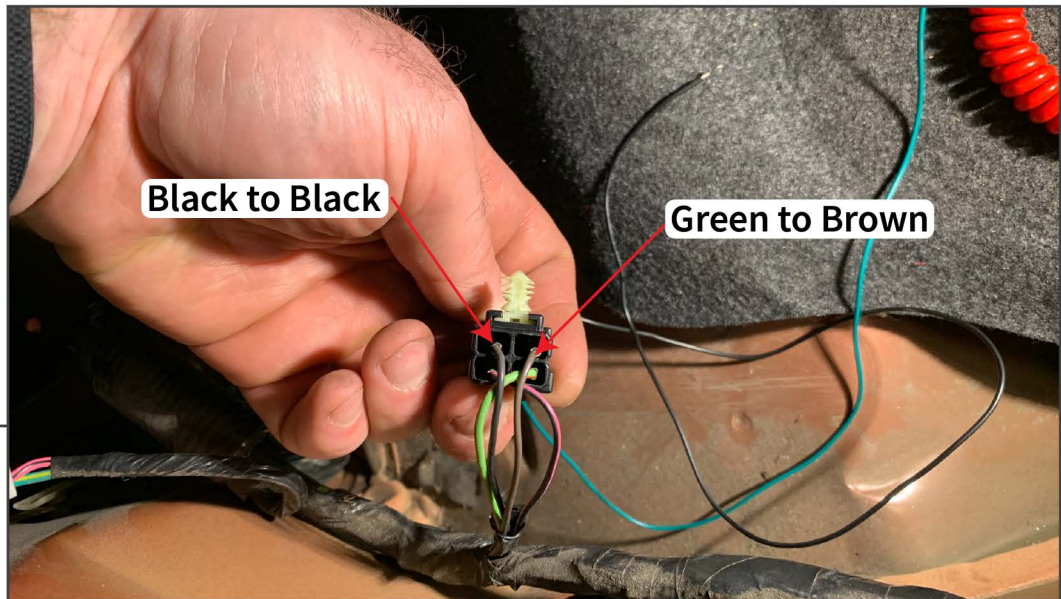

STEP 9

Using the supplied Scotchlok connectors connect LED reflector wiring to the factory tail light harness.

LED Reflector Wiring Color	-	Factory Wiring Harness
Green	-	Brown (12v + Running Lights)
Black	-	Black(Ground)

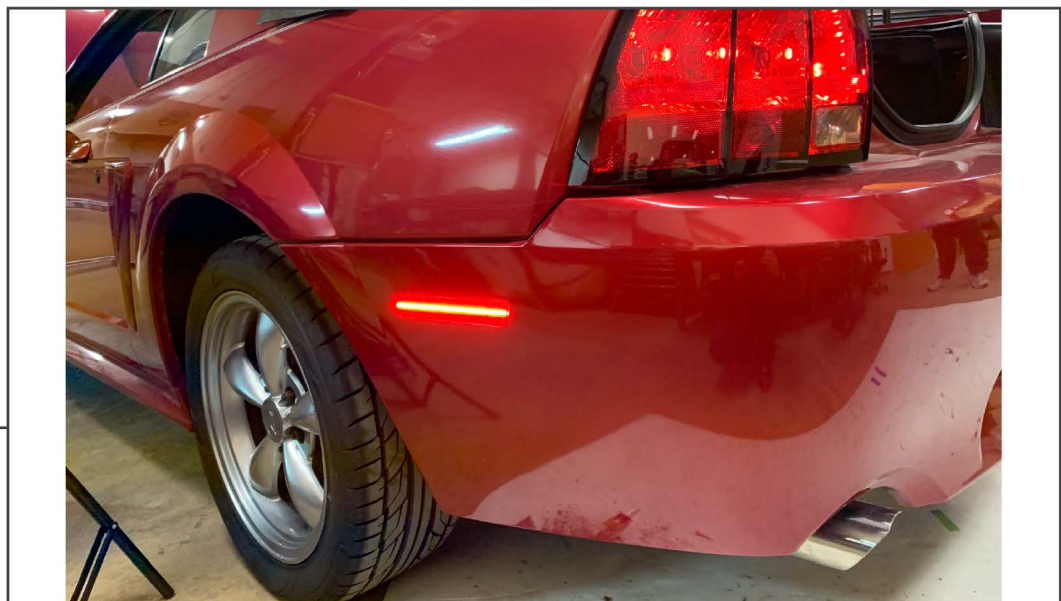

STEP 10

Test the LED reflector by turning on the running lights. If the lights do not turn on, test the wiring connection. Repeat the process on the other side of the vehicle. Reinstall the bumper following Steps 1-4 in reverse order. Installation is now complete.