



REAR UPPER CONTROL ARM MOUNT

(2011-2014 MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Upper Control Arm Mount
- (1) Bolt
- (1) Nylon Lock Nut

TOOLS REQUIRED

- 18mm Deep and Shallow Sockets
- 21mm Deep and Shallow Sockets
- 24mm Socket
- 25mm Socket
- 27mm Socket
- Impact Gun/Ratchets
- Jack & Jack Stands

SKU # 410880/410881




STEP 1



Remove the rear seat cushion by pushing in on the release on both sides of the seat, then pulling up firmly.

STEP 2

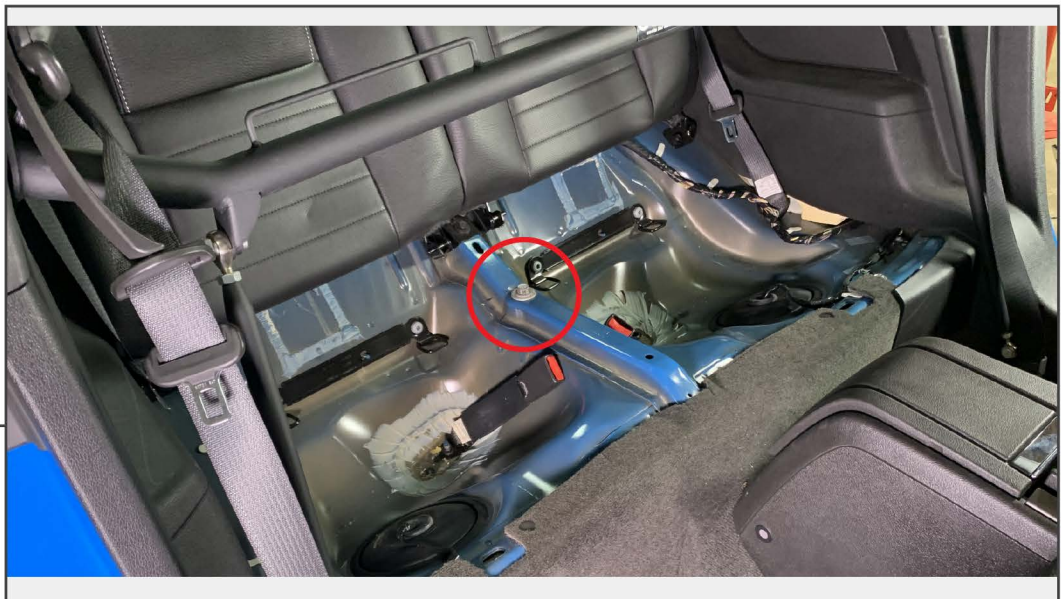

Remove (1) 24mm bolt located in the middle of the vehicle.




STEP 3



Securely lift the rear of the vehicle and support with jack stands. Loosen the 21mm bolt securing the upper control arm to the axle.

Note: Jack up the axle slightly to relieve pressure to remove the bolt from the control arm.

STEP 4

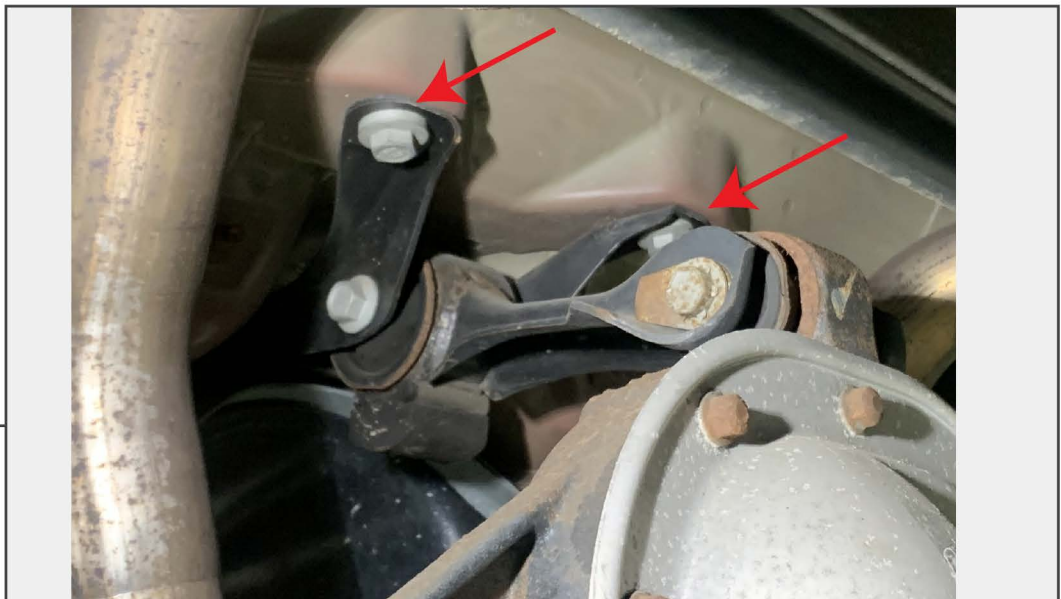

Remove the (2) 18mm bolts from the chassis of the vehicle. Remove control arm bracket and control arm out from vehicle together.



STEP 5



Unbolt the control arm from the bracket out of the vehicle using 25mm and 27mm Sockets.

STEP 6



Install the control arm into the new bracket using provided hardware. Reinstall bracket and control arm into vehicle following steps 1-4 in reverse order.

Installation is now complete.