



REAR UPPER CONTROL ARM

(2005-2010 MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Upper Control Arm

TOOLS REQUIRED

18mm Deep and Shallow Sockets
21mm Deep and Shallow Sockets
24mm Socket
25mm Socket
27mm Socket
Impact Gun/Ratchets
Jack & Jack Stands

SKU #410884/410885



STEP 1

Remove the rear seat cushion by pushing in on the release on both sides of the seat, then pulling up firmly.



STEP 2

Remove (1) 24mm bolt located in the middle of the vehicle.




STEP 3



Securely lift the rear of the vehicle and support with jack stands. Loosen the 21mm bolt securing the upper control arm to the axle.

Note: Jack up the axle slightly to relieve pressure to remove the bolt from the control arm.

STEP 4

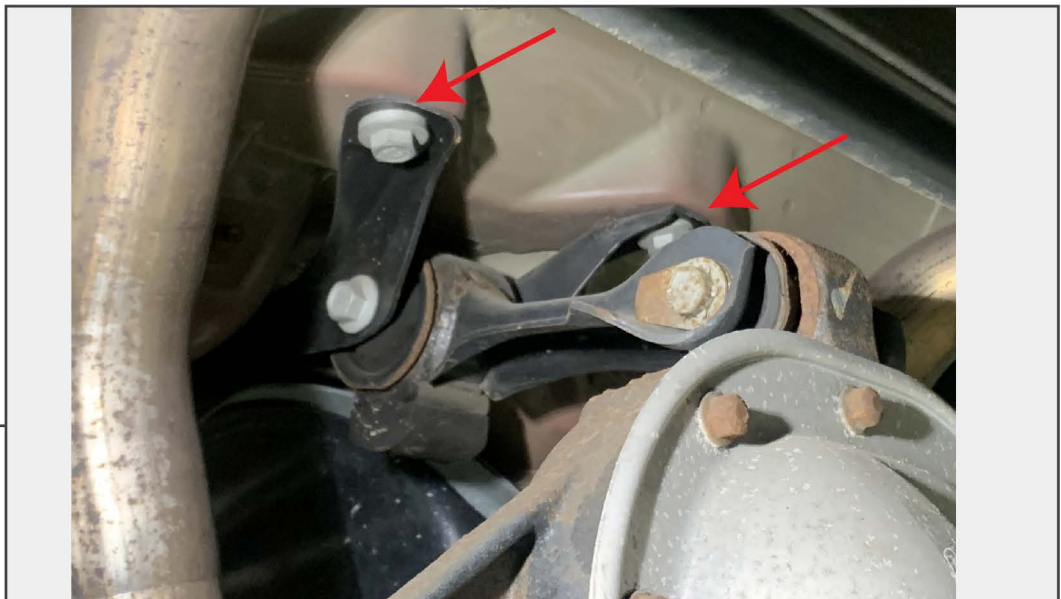

Remove the (2) 18mm bolts from the chassis of the vehicle. Remove control arm bracket and control arm out from vehicle together.



STEP 5



Unbolt the control arm from the bracket out of the vehicle using 25mm and 27mm Sockets.

STEP 6



Grease the bushings in the control arm at the Zerk fittings. Fill with grease until it is visible from the sides. Spread grease along the face of the bushings to prevent bushing noise. Reinstall control arm into bracket, and reinstall into vehicle using steps 1-5 in reverse order. Grease control arm bushings with every oil change.

Installation is now complete.