



ADJUSTABLE PANHARD BAR

(2005-2014 MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Adjustable Panhard Bar


TOOLS REQUIRED

18mm Socket
Socket Wrench

SKU #410886/410887



STEP 1

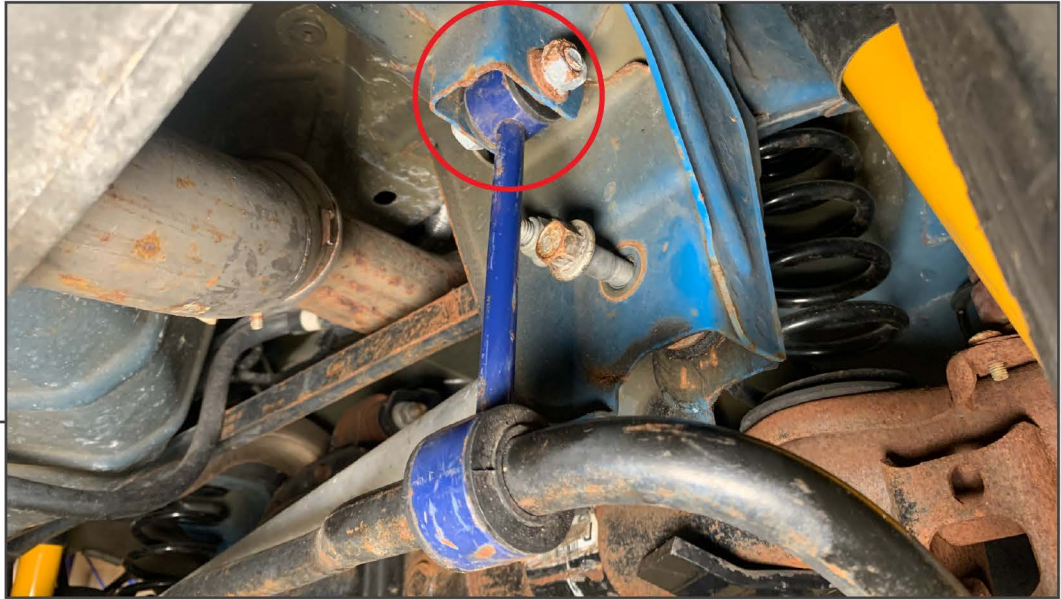

Raise and support the vehicle using a jack and jack stands under the body lifting points. Support the axle with a jack. Unbolt the sway bar links from the body on both sides.

STEP 2



Pull the sway bar down and out of the way.




STEP 3

Locate the chassis side panhard bar bolt. Using a 18mm socket, remove the bolt.




STEP 4

Locate the axle side panhard bolt, using a 18mm socket, remove the bolt.

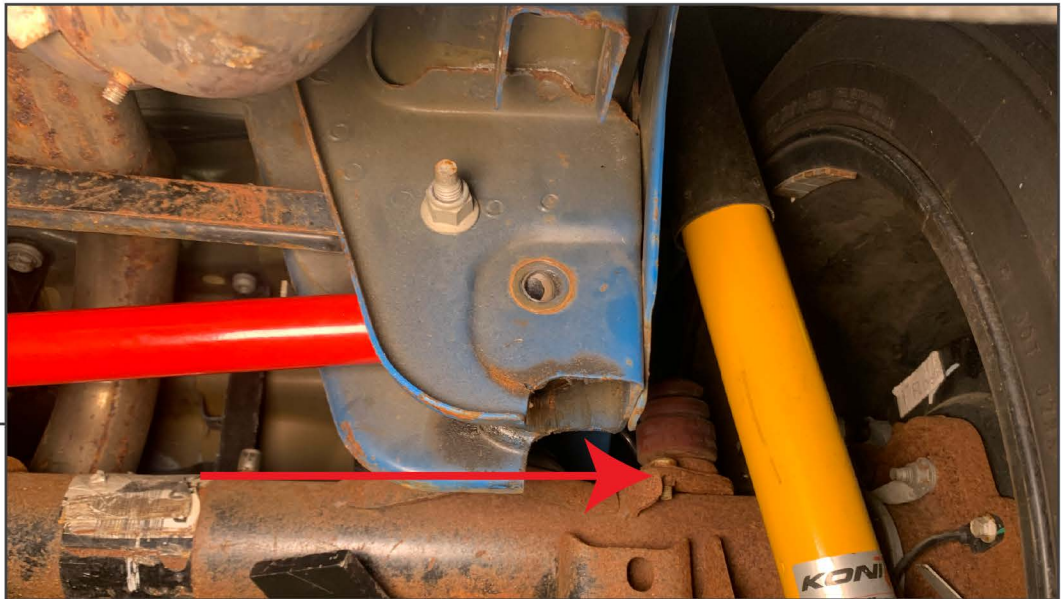

STEP 5

Adjust the panhard bar so that it is the same length as the panhard bar removed from the vehicle. Loosely install the panhard bar onto the axle using factory hardware. Then move the axle left or right and install the chassis side bolt. In the photo above the axle has to be moved to the right to align the holes.

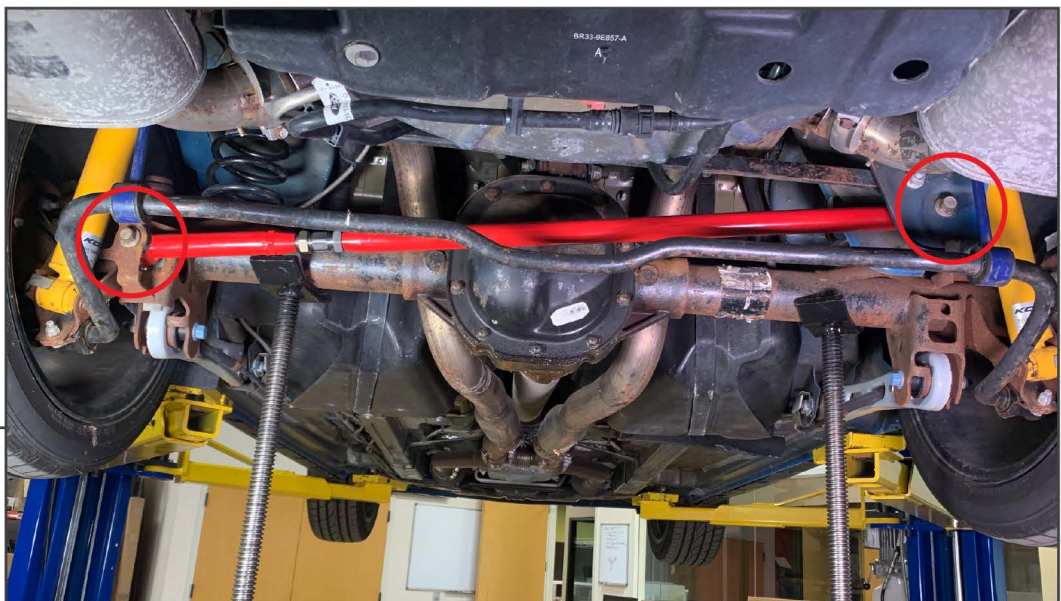

STEP 6

With the vehicle off the jack and jack stands, at ride height, tighten the pan hard bolts to 129 ft-lbs. Adjust the panhard bar as needed to center the axle under the vehicle. Tighten the locking nuts to complete the installation.