



FRONT AND REAR LED SIDE MARKER LIGHTS

(2010-2014 MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Pair of Front Marker Lights
(1) Pair of Rear Marker Lights

TOOLS REQUIRED

7mm, 10mm Sockets
7mm, 10mm Wrenches
Phillips Screwdriver
Floor Jack
Jack Stands

STEP 1 (FRONT)




Begin by lifting and supporting the front of the vehicle. Turn the wheel to the side to gain better access to the fender liner bolts. Remove the various fasteners securing the outer edge of the fender liner to the bumper cover. Peel the fender liner back to gain access to the nuts securing the marker light to the bumper.

STEP 2



Unplug the marker light, then using a 10mm wrench or socket, remove the (2) nuts securing the factory marker light to the bumper. Remove the light from the bumper.

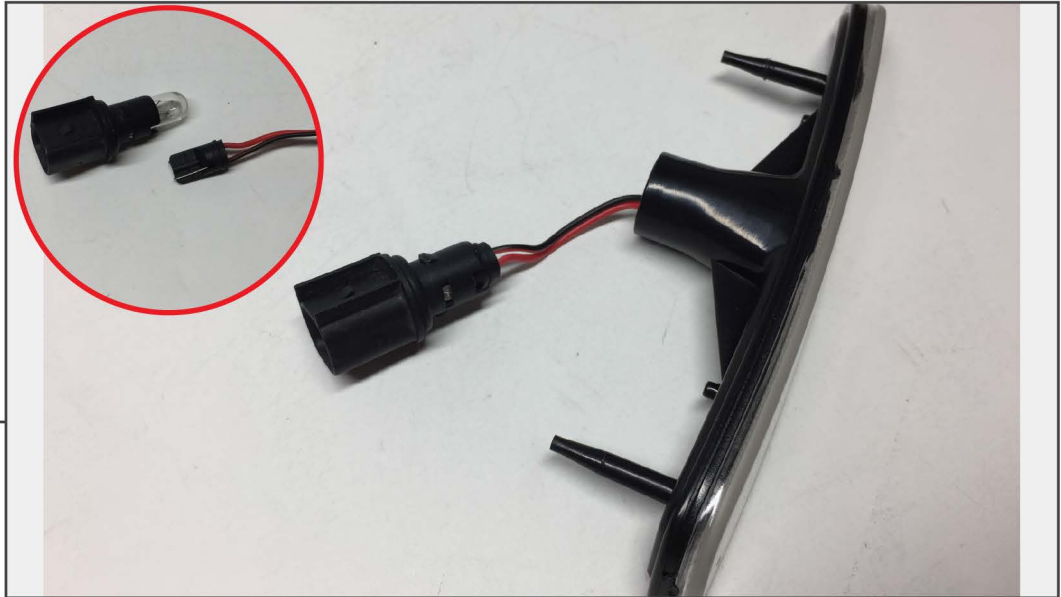

STEP 3

Remove the bulb socket from the original side marker housing. Remove the original light bulb. Plug the new LED marker light into the light socket in place of the light bulb.



STEP 4

Re-assemble vehicle following steps 1-2 in reverse order. Repeat this procedure to the opposite side.

**STEP 5
(REAR)**




Lift and support the rear of the vehicle. Remove the (3) fasteners securing the outer edge of the fender liner to the bumper cover.

STEP 6



Pull the bumper cover away from the vehicle. Depress the marker light clip to remove the light from the bumper. Unclip the wiring harness from the light.

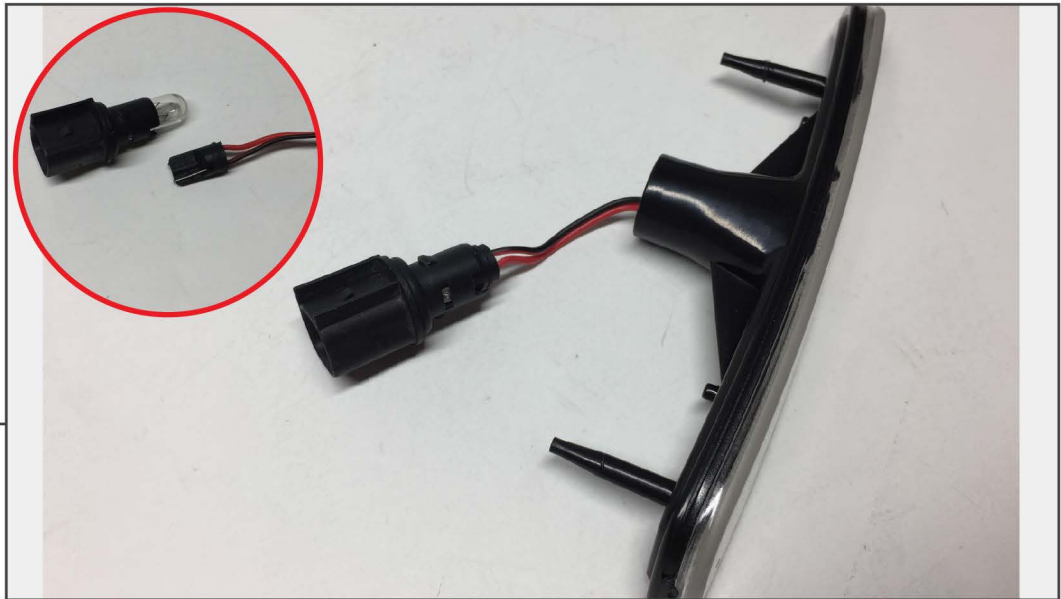

STEP 7

Remove the bulb socket from the original side marker housing. Remove the original light bulb. Plug the new LED marker light into the light socket in place of the light bulb.



STEP 8

Re-assemble vehicle following steps 1-2 in reverse order. Repeat this procedure to the opposite side.

Installation is now complete.