



---

# LED DIFFUSER MARKER LIGHTS

(2018-2021 MUSTANG)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (2) Diffuser LED Lights
- (4) Scotchlok Connectors

### TOOLS REQUIRED

---

- Jack and Jack Stands
- 10mm Socket
- Socket Wrench
- Cleaning Solution
- Electrical Tape
- Zip Ties

SKU # 412521

**STEP 1**



Carefully support the vehicle using a jack & jack stands, or a lift. Once the vehicle is properly supported, locate and remove the 10mm nut securing the rear diffuser reflector in place. Then apply firm pressure on the tabs to release the deflector from the diffuser.

**STEP 2**



Thoroughly clean the reflector cavity prior to installing the new light.

**STEP 3**

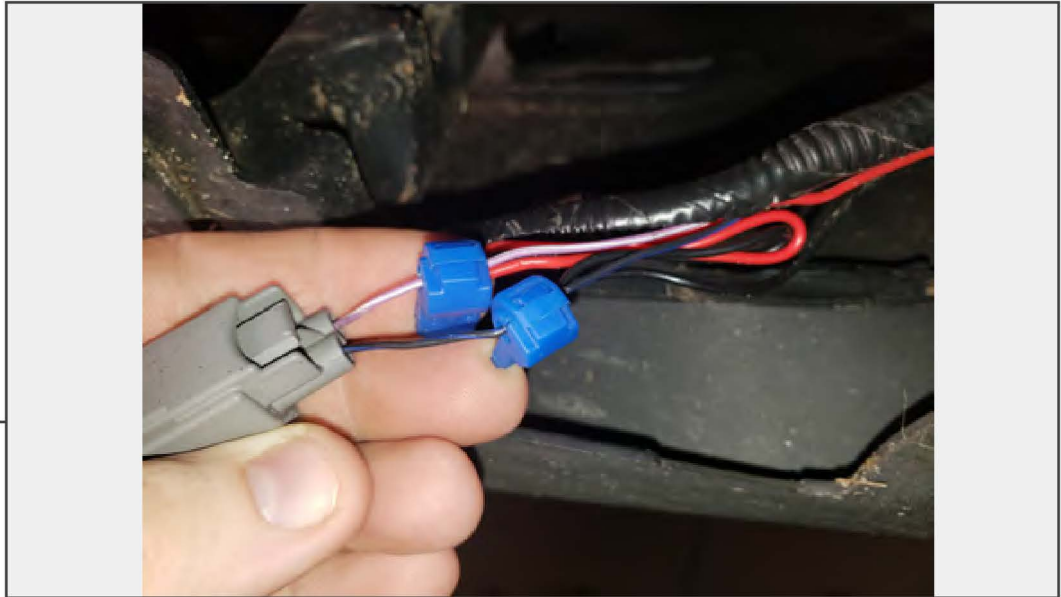


Insert the new MP Concepts light and wiring through the factory diffuser hole making sure the light clips into place. Then using the factory nut from Step 1, secure the light into place.

**STEP 4**



Locate, and unplug the rear side marker wiring harness.

**STEP 5**

Carefully remove the factory electrical tape, and expose the factory two wires of the side marker harness. Using the supplied scotch locks, splice the 12+ volt Red wire from the MP Concepts light to the White w/Purple stripe wire from the factory side marker light. Then splice the Black ground wire from the MP Concepts light into the Black wire from the factory side marker light.

**STEP 6**

Re-wrap the factory harness with the added wiring in electrical tape to protect it from road debris. Reconnect the marker light and zip tie and loose wiring out of the way.



---

**STEP 7**

Test the lights for proper function. Installation is now complete.