



### Contents:

- (1) Shift Knob Assembly
- (1) Plastic Collar
- (2) Screws
- (2) Lock Washers

### Tools Needed:

- Phillips Head Screw Driver

406734-406736  
414383/414384

# Automatic Shifter (15-21)




#### Step1\\

Apply firm pressure to the front edge of the shifter bezel. Several clips secure it to the center console.



#### Step2\\

Remove the plug located at the left front of the bezel.

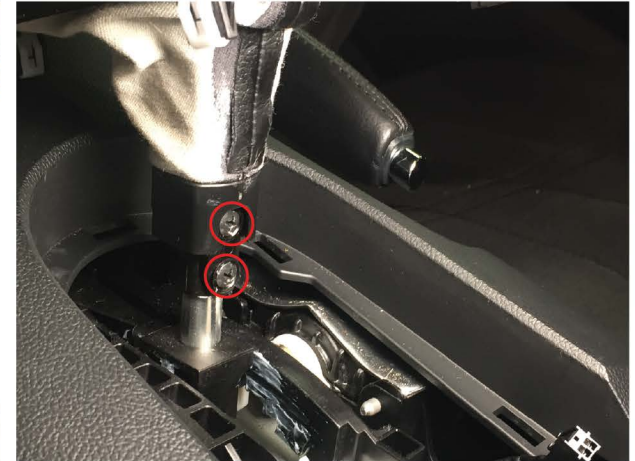

#### Step3\\

Press the start button but Do Not start the vehicle. With the vehicle off, put the shifter in "S". Raise the shift bezel to expose the (2) Phillips screws securing the stock shift knob. Remove the screws and stock shifter.



#### Step4\\

Pull the stock shift knob away from the shift boot. The stock knob will not be reused.



#### Step5\\

Wrap the painted portion of the shift knob in the foam bag it was shipped in to protect it from damage during install. Push the knob into the factory shift boot. Slide the supplied plastic collar onto the assembly aligning the holes. Install the shift knob onto the vehicle using the supplied screws and lock washers.



#### Step6\\

Before reinstalling the shifter bezel, ensure the shifter operates correctly. Place the shifter in all the gears. Once tested, reinstall the electrical connection at the front left of the bezel and press the bezel back into the console. Enjoy.