



---

# REAR WINDOW LOUVER

(2015-2021 MUSTANG)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) Window Louver
- (5) Foam Pads
- (10) Pieces of 3M Tape
- (10) Mounting Pads with Nuts

### TOOLS REQUIRED

---

- 8mm Socket
- Ratchet
- Isopropyl Alcohol
- Microfiber Cloth

SKU # 414652



**STEP 1**

Clean the rear window glass using isopropyl alcohol and a microfiber cloth. Ensure all dirt and debris are removed.



**STEP 2**

Install the tape to the mounting pads. Peel off the paper backing from the supplied 3M tape leaving the red 3M layer visible.



**STEP 3**

Remove the 8mm nuts for the mounting pads and install the mounting pads to rear window louver. Test fit the louver to the rear window prior to removing the tape backing. Familiarize yourself with how the louver fits. Center the louver side to side. Align the top edge with the top of the glass.

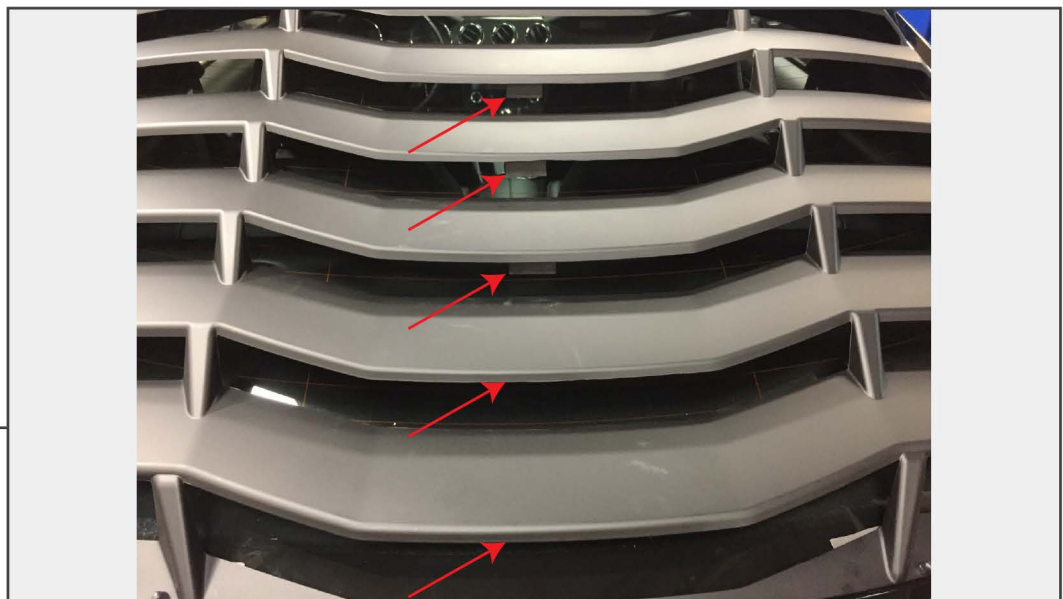


**STEP 4**

Once the rear window is clean/dry and free of contaminants, remove the tape backing and set the louver onto the window.

**STEP 5**

Remove the 8mm nuts and carefully remove the louver from the window. You want to make sure all of the mounting pads stick to the glass. Once the louver is removed, apply firm even pressure on all mounting pads to ensure proper adhesion to the window. Reinstall the window louver.

**STEP 6**

Install the supplied foam pads to prevent the louver from rattling against the window glass at high speeds. It is recommended to install the foam with the louver already installed to ensure proper placement. Remove the tape back and install the foam so that the louver does not touch the glass.

Installation is now complete.