



GT350 TRACK PACK STYLE REAR SPOILER

(2015-2020 MUSTANG FASTBACK)

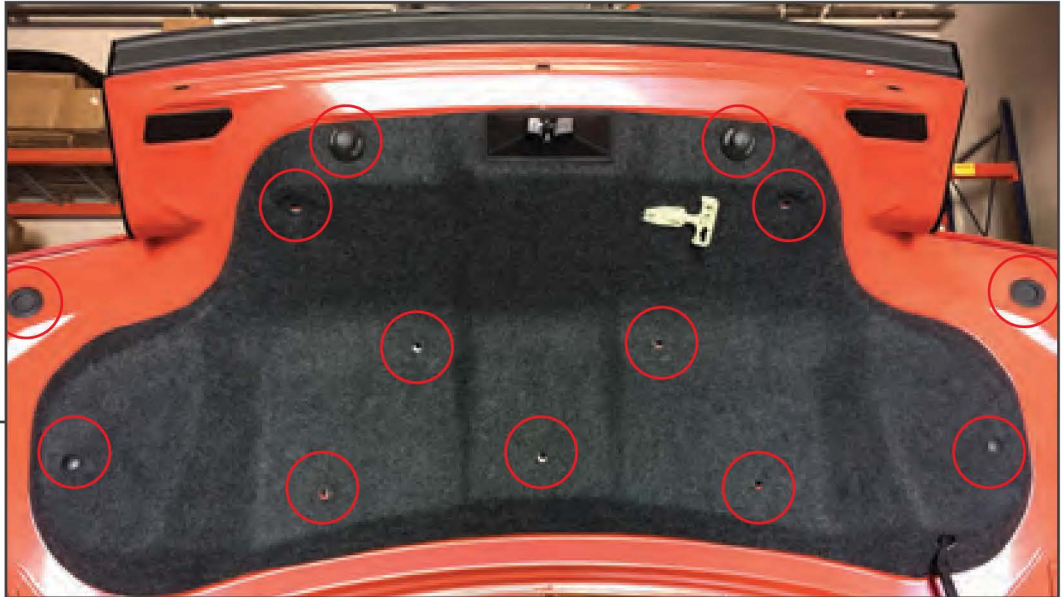
INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Rear Spoiler
- (4) M6 Screws
- (4) M6 Washers
- (4) Drill Templates
- (2) Alcohol Pads
- (1) Roll of Double Sided Tape

TOOLS REQUIRED

- 7/32 Drill Bit
- Drill
- Trim Panel Removal Tool
- Painters Tape

**STEP 1**

Remove the inner trunk panel by removing the (9) plastic push rivets, (2) rubber bumpers, and the plastic trim around the latch assembly. There are also (2) rubber plugs on the far left and right of the trunk lid that will need to be removed to gain access to the factory bolt locations. If your vehicle came equipped with a factory spoiler, carefully remove it using adhesive remover and a soft pry tool. NOTE: Convertibles with stock spoilers will still require drilling.

**STEP 2**

Remove the adhesive backing on the provided drill templates. Place the adhesive side on the spoiler, centering it over the bolt hole.



STEP 3

Center all 4 drilling templates over each of the 4 mounting points



STEP 4

Test fit the spoiler and center it on the decklid. Then tape the templates to the decklid where they lay. Carefully remove the spoiler from the templates. This step is extremely important and will determine the final fitment of the spoiler. Please take your time and ensure the spoiler is seated properly before taping down the drill templates to the decklid.

STEP 5



Once the spoiler is removed, carefully drill the center of the template holes. Finish with a 7/32's drill bit. Use clear nail polish to cover any exposed metal to prevent rusting.

STEP 6



Place the supplied foam pads over the mounting holes on the spoiler, trim as needed.



STEP 7

Place the spoiler on a soft surface face down. Clean the underside of the spoiler thoroughly using an alcohol wipe. Once dry, apply double sided tape along the perimeter of the spoiler where the spoiler will meet the decklid panel.



STEP 8

Peel back the double sided tape backing, then adhere the spoiler to the decklid. Install the (4) M6 screws and (4) M6 washers into the spoiler through the underside of the decklid panel.

Installation is now complete.