



---

# GT500 STYLE REAR SPOILER

(2010-2014 MUSTANG ALL)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) Rear Spoiler
- (2) Alcohol Prep Pads
- (4) M6 x 1.0 Screws
- (4) M6 Washers
- (1) Roll of Double Sided Tape

### TOOLS REQUIRED


---

- Flat Head Screwdriver
- Phillips Head Screwdriver
- 10mm Socket & Ratchet
- Plastic Putty Knife/Squeegee
- Adhesive Remover
- Heat Gun/Hair Dryer



**STEP 1**

Remove the 13 plastic clips holding the trunk liner to the trunk lid. Simply pull out on them and they will pop right out. Once loose, remove the trunk liner.

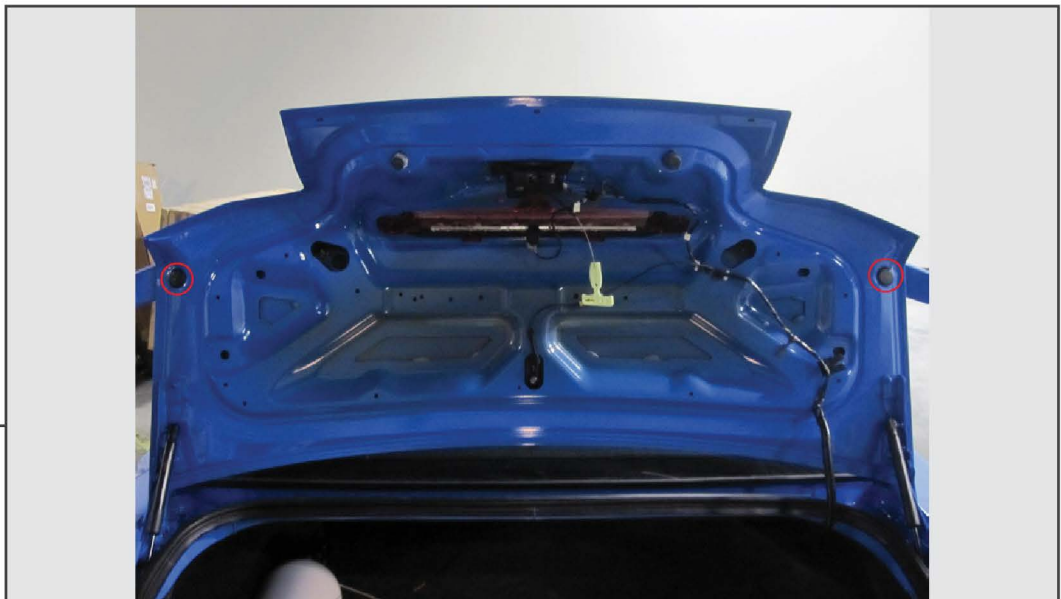


**STEP 2**

Use a flat head screwdriver to remove the two plastic cap shown below.



**STEP 3**

Use a 10mm socket to remove the (4) nuts holding the factory spoiler to the vehicle.

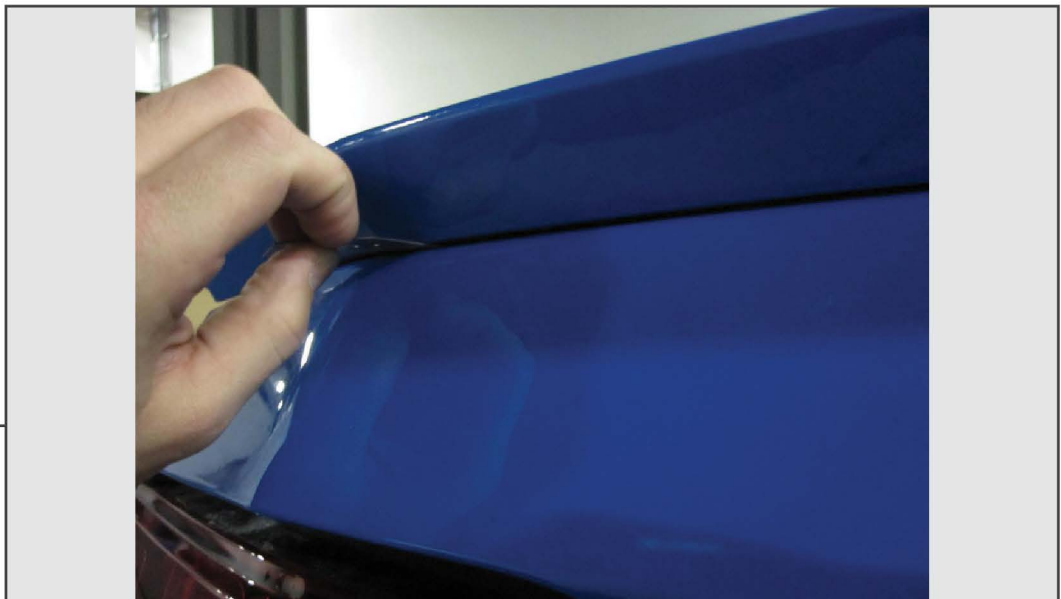

**STEP 4**

Use a heat gun or hair dryer around the edges of the factory spoiler to loosen the adhesive. It may also help to gently pry the spoiler up and run around the edges with a razor blade as shown. Once the adhesive is loose, remove the factory spoiler from the vehicle. Overheating the paint surfaces can cause damage, use minimal heat.

**STEP 5**



Use a quality adhesive remover and plastic putty knife or squeegee to remove the leftover adhesive.

**STEP 6**



Place the new spoiler face down on a soft surface. Using (1) alcohol prep pad, clean the underside of the spoiler where the spoiler will adhere the trunk lid. Once dry, place and adhere the provided double sided tape to the perimeter of the spoiler mounting area.

**STEP 7**




Wipe down any areas where the new spoiler's tape will adhere with (1) alcohol prep pad.

**STEP 8**




Place the spoiler on the trunk lid, but do not press down yet to seat the adhesive. Lift the trunk lid while supporting the spoiler so you can install the (4) supplied Phillips head screws and washers as shown.

**STEP 9**

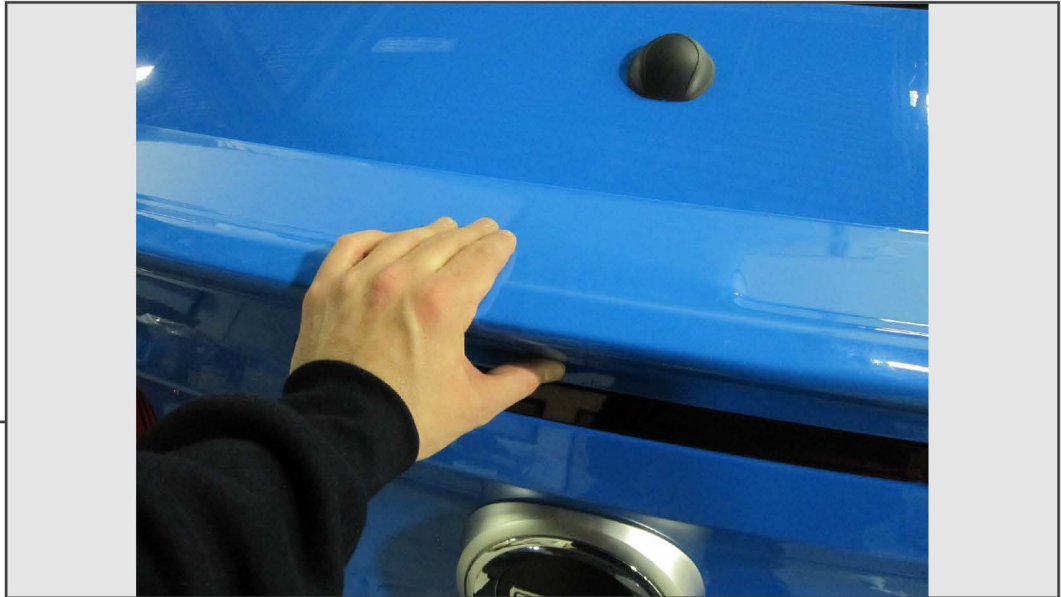

Once the spoiler is properly positioned and the screws are tightened, press down firmly on the spoiler to fully seat the adhesive. Re-install the trunk liner that was removed in Step 1.

**STEP 10**

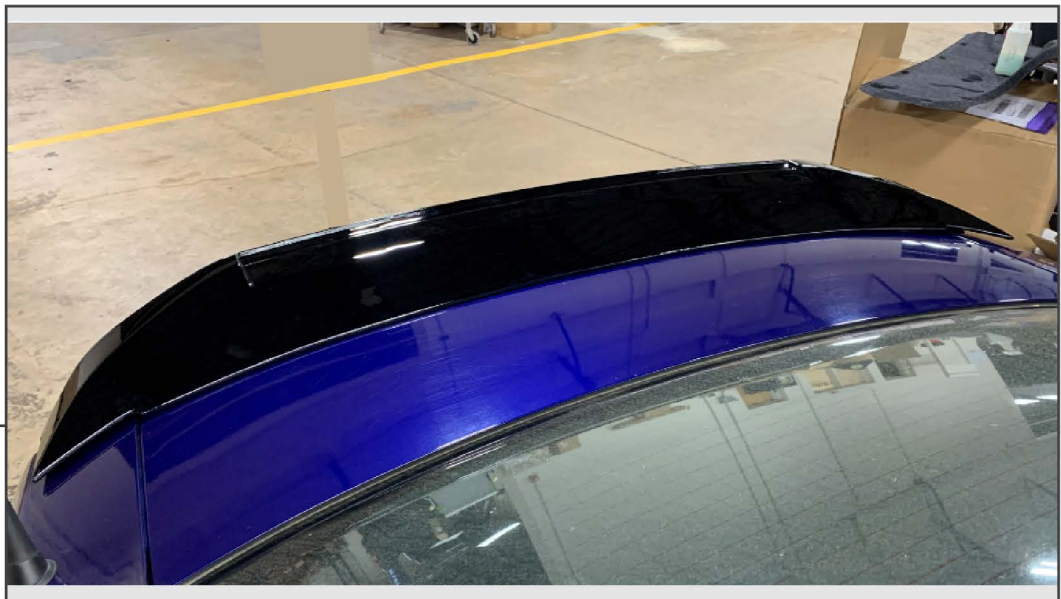

Installation is now complete.