



DUCKTAIL REAR SPOILER

(2005-2009 MUSTANG ALL)

INSTALLATION INSTRUCTIONS


CONTENTS

- (1) Ducktail Spoiler
- (2) M6 x 1.0 Screws
- (2) M6 Washers
- (1) Roll of Double Sided Tape

TOOLS REQUIRED

- 10mm Socket & Ratchet
- Trim Panel Removal Tool
- Heat Gun or Hair Dryer
- Phillips Head Screw Driver

STEP 1

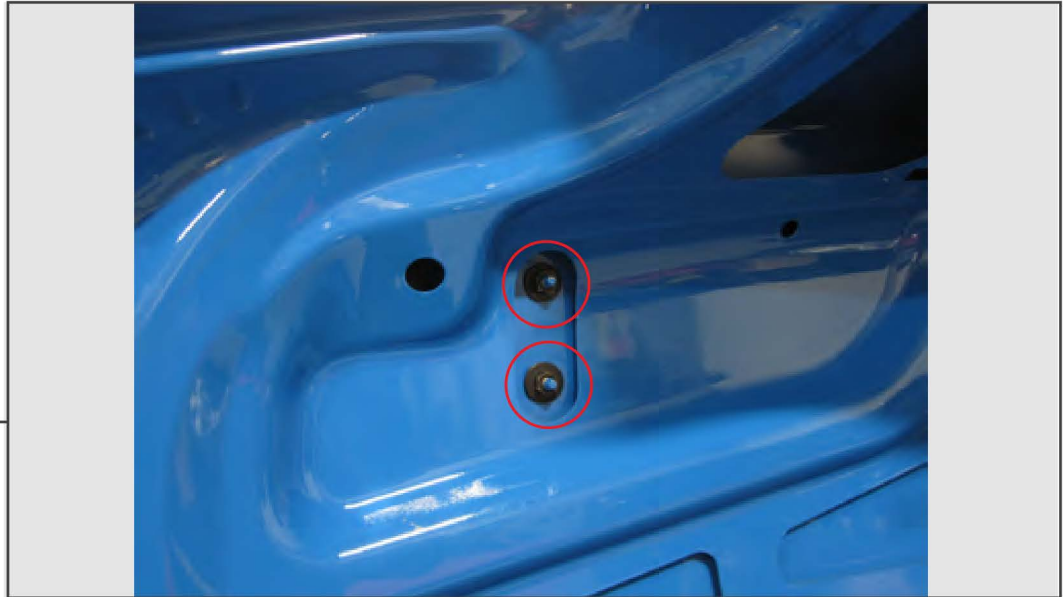

Open the trunk lid and remove the four 10mm nuts securing the factory spoiler to the trunk lid. **BE SURE TO HAVE SOMEONE HOLDING THE SPOILER SO IT DOES NOT DROP AND HIT THE VEHICLE ONCE THE NUTS ARE REMOVED.**

STEP 2



Close the lid and use a plastic pry tool that will not scratch your paint and remove the spoiler from the decklid. Do not pry against the decklid, it will dent/crease. Only use pry tool to gently wedge between the spoiler and decklid surface. Once the spoiler is removed, use adhesive remover to clean up any residue left by the factory adhesive tape. A heat gun or hair dryer can help soften the tape and make removal easier. Overheating the surface can cause paint damage, use minimal heat.



STEP 3

Using the provided roll of double sided tape, adhere the tape to the designated area of the spoiler. Clean the spoiler using (1) alcohol prep pad. Once dry, adhere the tape to the spoiler.




STEP 4

Wipe down the decklid surface with the supplied alcohol prep pads as shown. Be sure to wipe all areas that the adhesive on the new spoiler will come in contact with.

STEP 5

Peel the backing from the adhesive tape on the underside of the new spoiler. Place the spoiler on the decklid while lining the threaded inserts with the factory spoiler holes, but do not press down to seat the adhesive at this point. Using the supplied Phillips Head screws & washers, secure the spoiler to the decklid as shown. Once both screws are installed and the spoiler is secure, press down firmly around all edges of the spoiler to fully seat the adhesive tape.

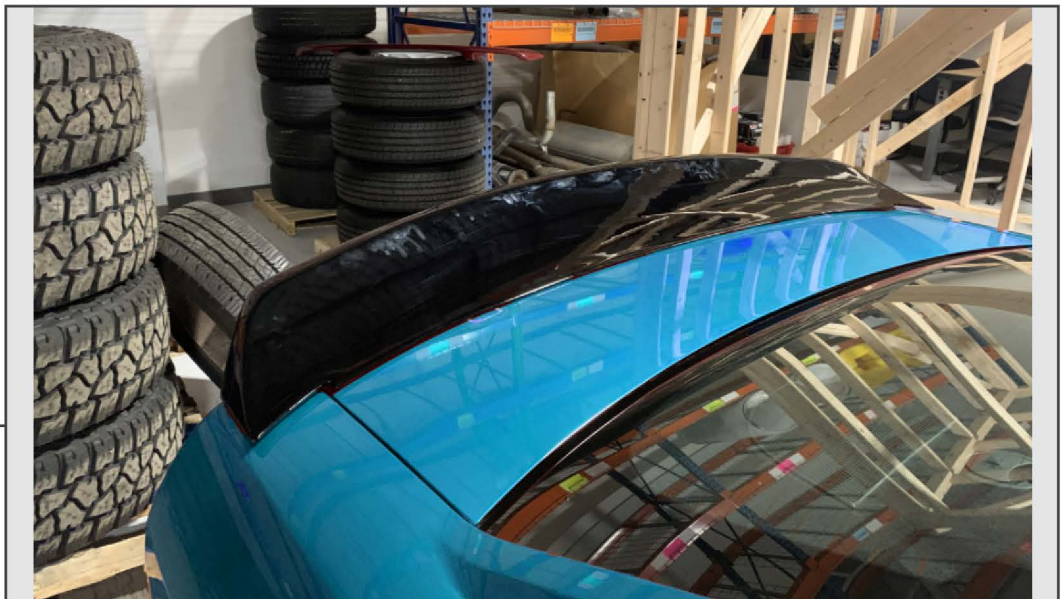STEP 6

Installation is now complete.