



MIRROR COVERS

(2010-2014 MUSTANG V6)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Mirror Cover
- (1) RH Mirror Cover

TOOLS REQUIRED


Flathead Screwdriver

SKU # 415413



STEP 1

Gently pull forward on the factory black mirror cover to remove it from the vehicle. If the original cover does not come off right away, gently pry around the edge with a wide-blade, flat head screwdriver.

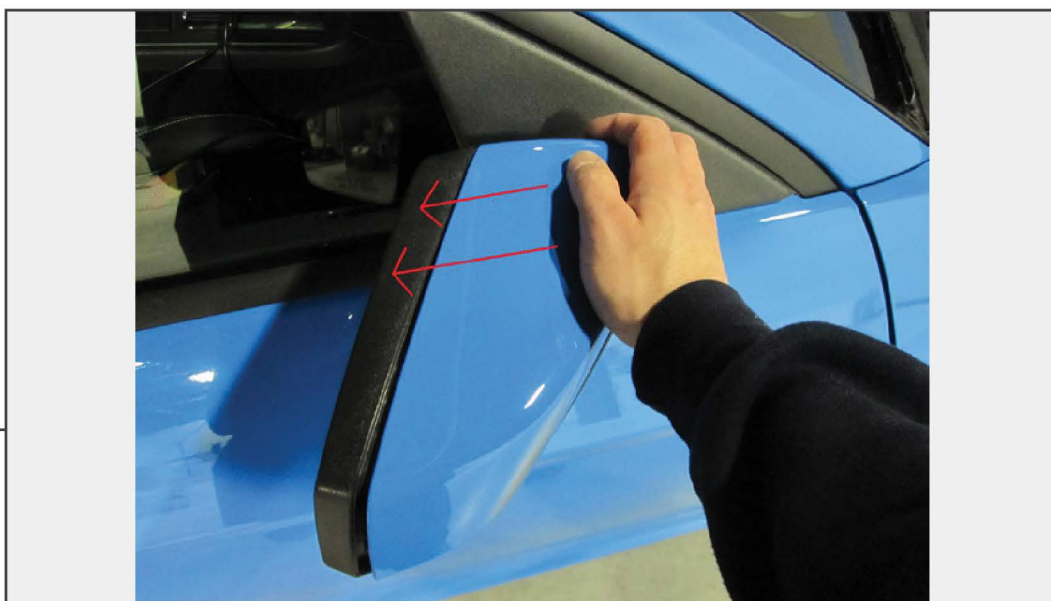

STEP 2

Push the painted mirror cover over the factory mirror as shown. Be sure to align the clip before pushing cover all the way on. Repeat steps 1-2 to the opposite side.

Installation is now complete.