



---

# ADJUSTABLE REAR TOE LINK SET

(2015+ MUSTANG)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

(1) Pair Rear Camber Arm

### TOOLS REQUIRED

---


18, 21mm Wrench  
21mm Socket  
Socket Wrench

SKU # 424454



### STEP 1

Raise and support the rear of the vehicle.

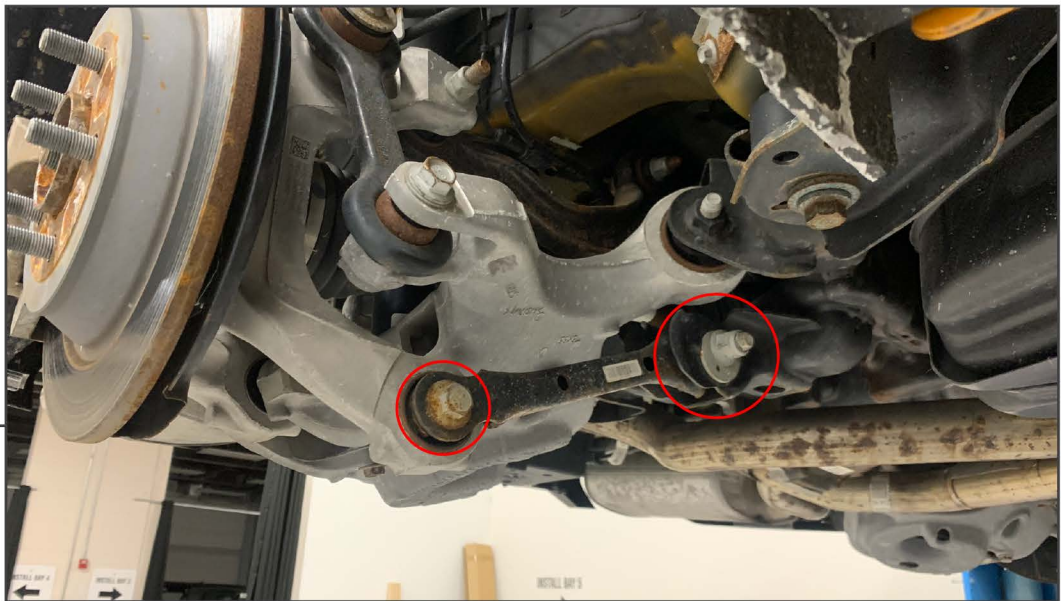

### STEP 2

Remove the inner sub-frame camber bolt. Then, remove the outer toe arm bolt, these have thread locker, use heat as needed.



---

**STEP 3**



Evenly adjust the toe arm to match the length of the factory toe arm.

---


**STEP 4**



Install the sub-frame side of the toe arm using the factory camber bolt. Install the toe arm to the knuckle using the supplied bolt. With the suspension loaded, torque the bolts to factory specifications.

Toe arm to sub-frame- 129Ft.Lbs

Toe arm to Knuckle- 129Ft.Lbs

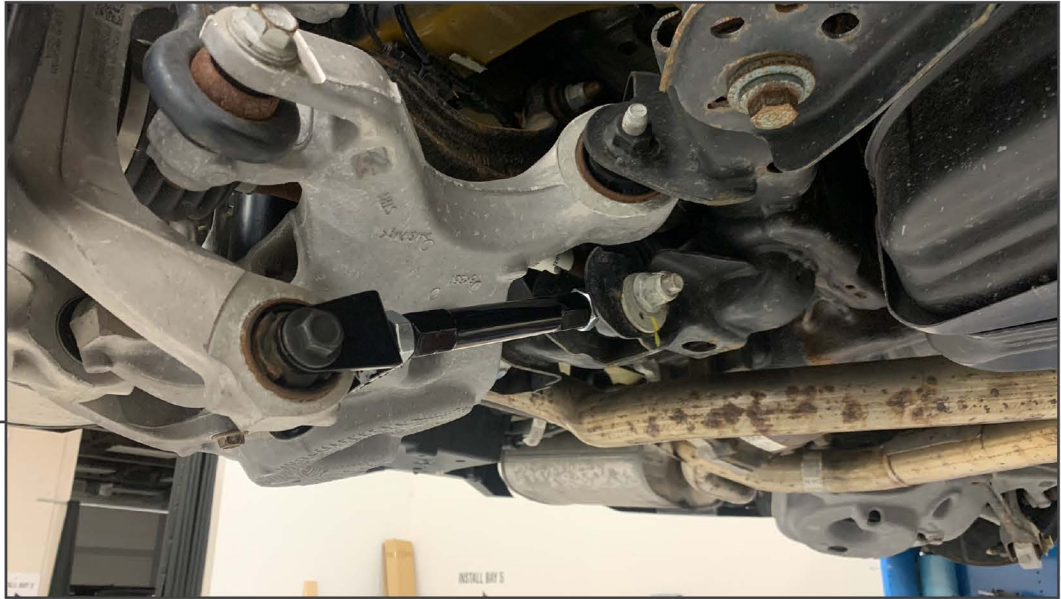

## STEP 5

Adjust the toe arm by rotating the center portion of the arm in or out as needed. Tighten jam nuts before driving the vehicle. Reinstall wheels and torque the lug nuts to 150Ft.Lbs.