



CHIN SPOILER

(2015-2017 MUSTANG - EXCLUDING PERFORMANCE PACK)


INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Left Panel
- (1) Center Panel
- (1) Right Panel
- (16) Large Screws

TOOLS REQUIRED

Phillips Head Screw Driver

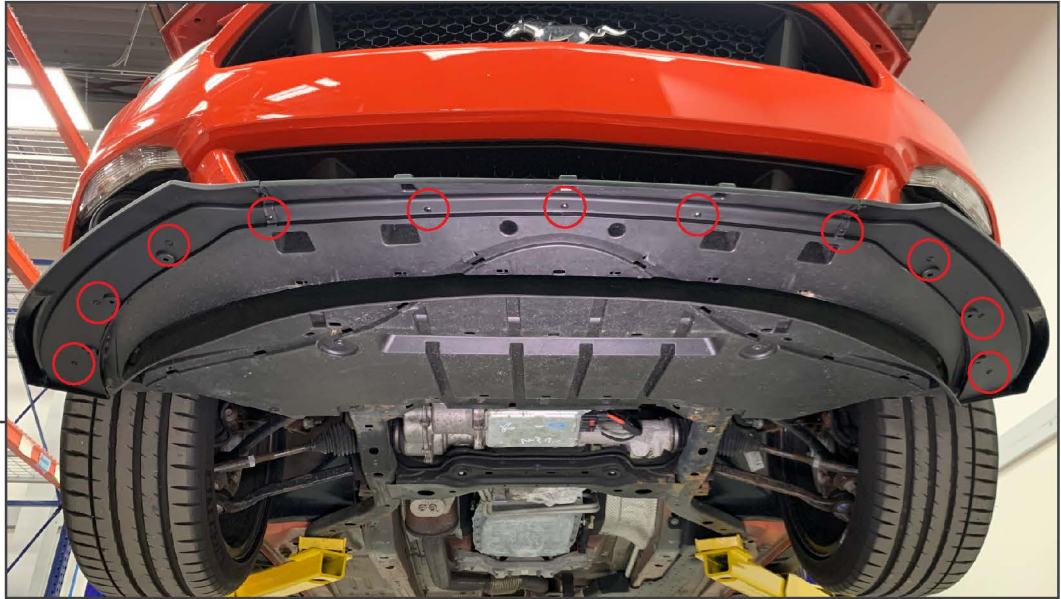

STEP 1

Raise and support the front of the vehicle to allow better access to the under side of the front bumper. With a helper, align the chin spoiler panels to the factory chin spoiler. Secure each panel using the included Phillips screws.

**Note: this chin spoiler will not work on performance pack equipped vehicles.



STEP 2

Installation is now complete.