

## SRD Handbrake

### Universal fitment

*Master Cylinder Options:*


*5/8 Integral Reservoir*

*5/8 Remote Reservoir*

*3/4 Integral Reservoir*

*3/4 Remote Reservoir*



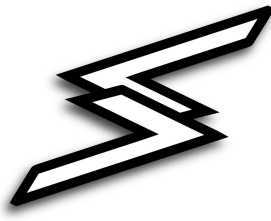

### **Whats Included:**

1. (1x) SRD Handbrake (including Master Cylinder of your choice)

### **NOTES:**

- The mounting holes are 5/16" in diameter and 4" center to center.
- It is advised to use a mounting plate of .125" or thicker to prevent flexing during use.

### **Disassembly:**


1. Remove any interior pieces that may be in the way of your desired install location.

### **Installation preparation:**

1. Make sure your handbrake lines reach your desired install location and that the handbrake lever is free of obstruction throughout its full pull.
2. If a pre-made mounting bracket is not being used, mark your handbrake location and drill/weld as needed to create a mounting location.

### **Installation:**

1. Secure the handbrake using either 8mm or 5/16" bolts. It is advised to use washers or a mounting plate to provide as much surface area as possible. The handbrake exhibits a significant force against its mounting structure.
2. Connect the handbrake lines to the master cylinder output fitting.
3. Once the full handbrake system is installed, bleed the handbrake in a similar fashion to bleeding regular brakes. For quicker bleeding, follow the following process:
  - A) Open the bleeder on one caliper with the handbrake released

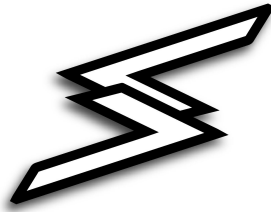

- B) Pull and hold the handbrake and let the fluid pass through. Do not let go of the handbrake.
- C) Close the bleeder
- D) Pump the handbrake a few times slowly
- E) Repeat the process until no air is seen at the caliper. Repeat for the other side

**KEEP THE FLUID RESERVOIR FULL AT ALL TIMES DURING BLEEDING**

**4.** SEND IT!