



---

# QUARTER WINDOW SCOOPS

(2024+ MUSTANG - EXCLUDING CONVERTIBLE)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) LH Quarter Window Scoop
- (1) RH Quarter Window Scoop
- (1) LH Large Insert
- (1) RH Large Insert
- (1) LH Small Insert
- (1) RH Small Insert
- (2) Rolls of Double Sided Tape
- (1) LH Die Cut Tape
- (1) RH Die Cut Tape
- (4) Alcohol Prep Pads
- (4) Adhesion Promoter Prep Pads

### TOOLS REQUIRED

---

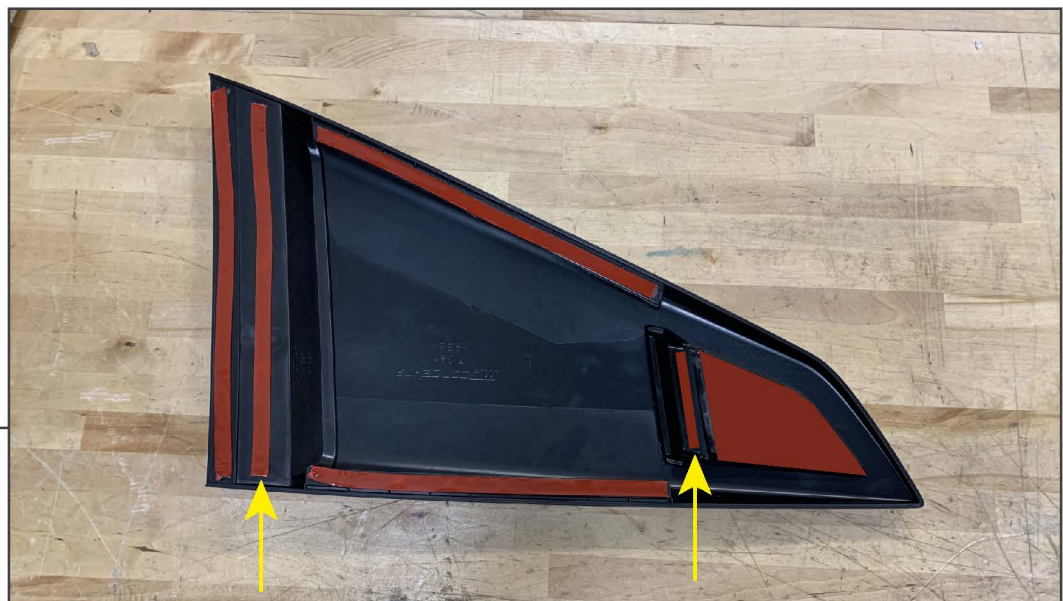
- Window Cleaner
- Microfiber Cloth

**STEP 1**

Clean the window louver outer perimeter using (1) alcohol prep pad, and allow to fully dry. Then, clean the window louver outer perimeter using (1) adhesion promoter prep pad, and allow to fully dry.

Apply the included double sided tape onto the window louver. Firmly press the tape into place to ensure proper adhesion.

Apply the (1) designated die cut tape piece to the rear section of the louver. Remove the white tape backing, and adhere the tape piece to the louver.

**STEP 2**

Peel the double sided tape from the insert sections of the louver, and adhere the appropriate window louver inserts to the louver. Press firmly to encourage adhesion. Then, place double sided tape onto the louver inserts.

**STEP 3**

Clean the entire quarter window with window cleaner and a microfiber cloth. Allow the window to fully dry. Then, clean the outer perimeter of the window using (1) alcohol prep pad and allow to fully dry. Then, clean the outer perimeter of the window using (1) adhesion promoter prep pad and allow to fully dry.

**STEP 4**

Test fit the quarter window louver to the vehicle before removing the tape backing.

Once familiar with fitment, peel the red tape backing and firmly press the louver to the quarter window. Apply firm and even pressure to ensure proper adhesion.

Repeat steps 1-4 for the remaining window louver. Installation is now complete.