



REAR WINDOW LOUVER

(2005-2014 MUSTANG COUPE)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Rear Window Louver
- (15) Stud Plates w/ Cap Nuts
- (15) Tape Pads
- (10) Foam Blocks
- (2) Alcohol Prep Pads
- (1) Adhesion Promoter

TOOLS REQUIRED

- Glass Cleaner
- Microfiber Towel
- 8mm Socket or Wrench

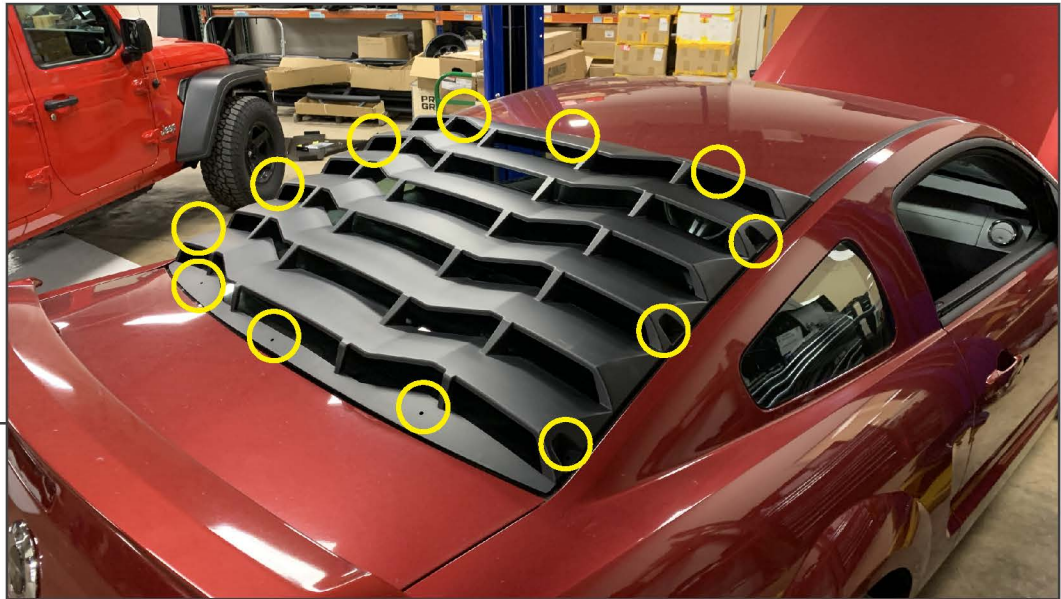
SKU # 439056

**STEP 1**

Before beginning the installation, thoroughly clean the rear window glass. This will ensure the adhesive tape adheres to the glass properly. Using the supplied alcohol prep pads, wipe down the outer edge of the glass where the brackets will adhere. Once the alcohol has dried on the glass, repeat this process using the included Adhesion Promoter.

**STEP 2**

Lay the louvers upside down on a surface that will not scratch the finish. Install the (12) brackets as shown and install the nuts finger tight. You just want to tighten the brackets enough so they stay in place; there is no need to fully tighten them at this point.

**STEP 3**

Peel the backing from the adhesive tape on the brackets and apply some of the Adhesion Promoter to the tape. Begin by opening the trunk. Using a partner, place the louvers over the rear window aligning the top edge of the louver with the top edge of the glass.

Once the louver is centered on the rear glass, press down firmly on all brackets to seat the adhesive tape.

**STEP 4**

Press on each louver fin gently towards the vehicle glass to check clearance. If the louver's fin easily touches the glass, label the fin interference location using masking tape.

Remove the nuts from the brackets and carefully remove the louvers from the vehicle. Press down on all the brackets again to make sure they are fully adhered, and add foam blocks to the louver as necessary. Trim the blocks to size if necessary.

If desired, use clear silicone around each adhesive brackets to promote weather resistance.



STEP 5

Use an 8mm socket and ¼ drive ratchet to install the nuts just past finger tight.

Cleaning: To clean the rear window glass, simply remove the 8mm nuts/washers and remove the louver from the vehicle. Be sure to open your trunk when removing the louvers.

Installation is now complete.