



---

# DECKLID PANEL

(2015-2023 MUSTANG)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

(1) Decklid Panel

### TOOLS REQUIRED

---

7/32", 7mm Socket  
Ratchet  
Plastic Pry Tool  
Small Flathead Screwdriver  
Pliers

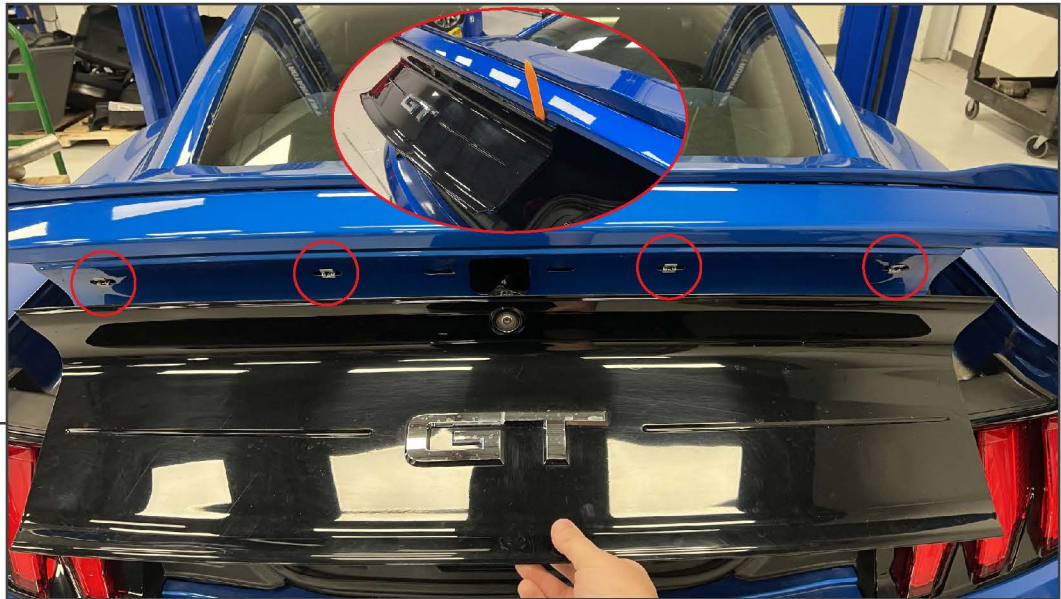
SKU # 441442

**STEP 1**

Open the vehicle trunk. Remove the (2) plastic covers from each end of the trunk lid behind the decklid panel.

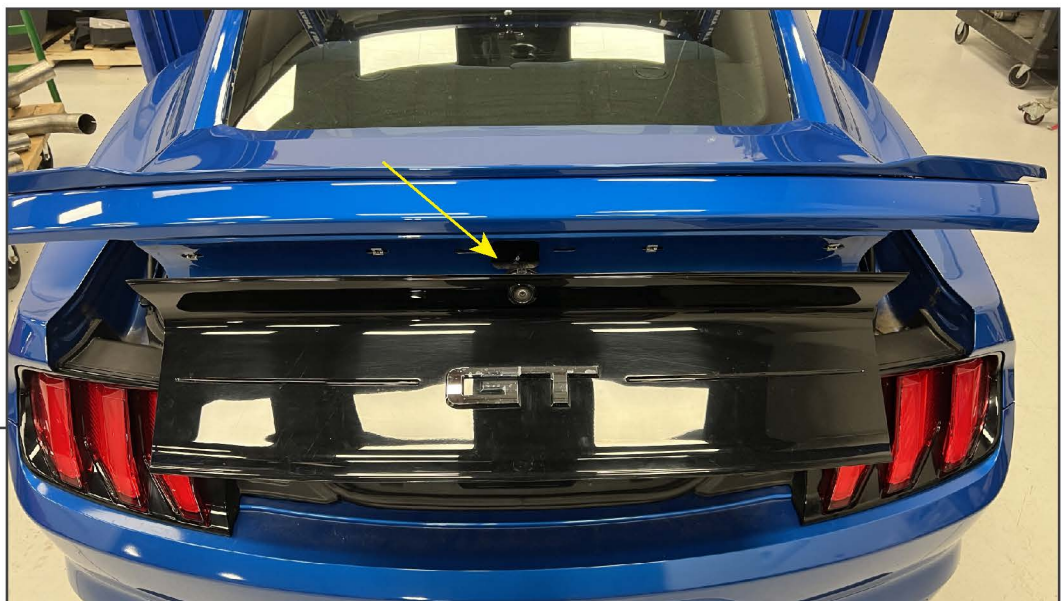
**STEP 2**

Remove (2) 7mm screws from each side of the decklid panel.

**STEP 3**

Using a plastic pry tool, firmly pry the decklid panel downwards to disengage the (4) metal retaining clips. Transfer the clips to the new decklid panel.

Note: If the metal retaining clips remained in the trunk after the decklid was removed, carefully remove the clips using a pry tool.

**STEP 4**

Un-plug the camera electrical connector from the decklid panel. Set the decklid panel on a soft surface for disassembly.



**STEP 5**

Remove (2) 7/32" screws from the rear camera assembly. Transfer the camera to the new decklid panel reusing the original screws.

Note: Ensure the camera is in the same orientation as removal during installation.

**STEP 6**

Remove the (4) screw insert clips fitted to the decklid panel using a small flathead screwdriver. Once removed, transfer the clips to the new decklid panel. Use pliers to adjust the clip engagement ears, if necessary.

Note: The clips are tightly fitted to the decklid panel. Take your time during removal.



---

**STEP 7**

Align the decklid panel to the vehicle, and plug the rear camera harness into the camera assembly. Press the new decklid panel into the vehicle trunk lid, and secure into place using the original hardware. Re-install the OEM trunk lid plastic covers over the hardware holes.

Installation is now complete.