


MISHIMOTO

1. REMOVE THE STOCK PCV HOSE.
2. INSTALL THE FITTINGS ONTO THE CATCH CAN.
3. INSTALL HOSE 1 TO THE FITTING ON THE "IN" SIDE OF THE CATCH CAN USING A PROVIDED WORM GEAR CLAMP.
4. INSTALL HOSE 2 TO THE FITTING ON THE "OUT" SIDE OF THE CATCH CAN USING A PROVIDED WORM GEAR CLAMP.
5. FASTEN THE BRACKET TO THE CATCH CAN USING THE PROVIDED M4 BOLTS.
6. CONNECT HOSE 1 TO THE PCV VALVE LOCATED ON THE TOP OF THE ENGINE.
7. CONNECT HOSE 2 TO THE INTAKE MANIFOLD PORT.
8. INSTALL THE BRACKET TO THE TWO EXPOSED STUDS ON THE DRIVER-SIDE STRUT TOWER USING THE PROVIDED M10 NUTS. IF THE VEHICLE IS EQUIPPED WITH A FACTORY STRUT TOWER BRACE, PLACE THE BRACKET UNDERNEATH THE BRACE ON THE DRIVER-SIDE AND PLACE THE PROVIDED SPACERS UNDERNEATH THE BRACE ON THE PASSENGER-SIDE.

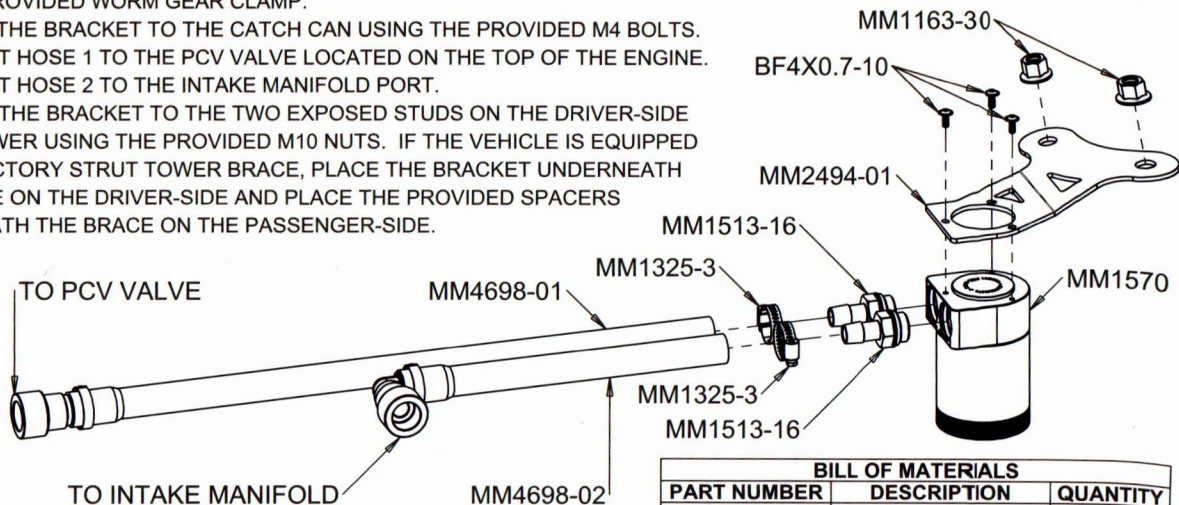

BILL OF MATERIALS

PART NUMBER	DESCRIPTION	QUANTITY
MM1570	CATCH CAN	1
MM1513-16	FITTING	2
MM4698-01	HOSE 1	1
MM4698-02	HOSE 2	1
MM1325-3	WORM GEAR CLAMP	2
MM2494-01	BRACKET	1
MM2494-02	SPACER	2
BF4X0.7-10	M4 BOLT	3
MM1163-30	M10 NUT	2