



3-PIECE CHIN SPOILER

(2024+ MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) LH Side Spoiler Panel
(1) RH Side Spoiler Panel
(1) Center Spoiler Panel
(14) 15mm Phillips Screws
(4) 5mm Phillips Screws

TOOLS REQUIRED

Drill
Phillips Screw Bit

SKU # 441683

**STEP 1**

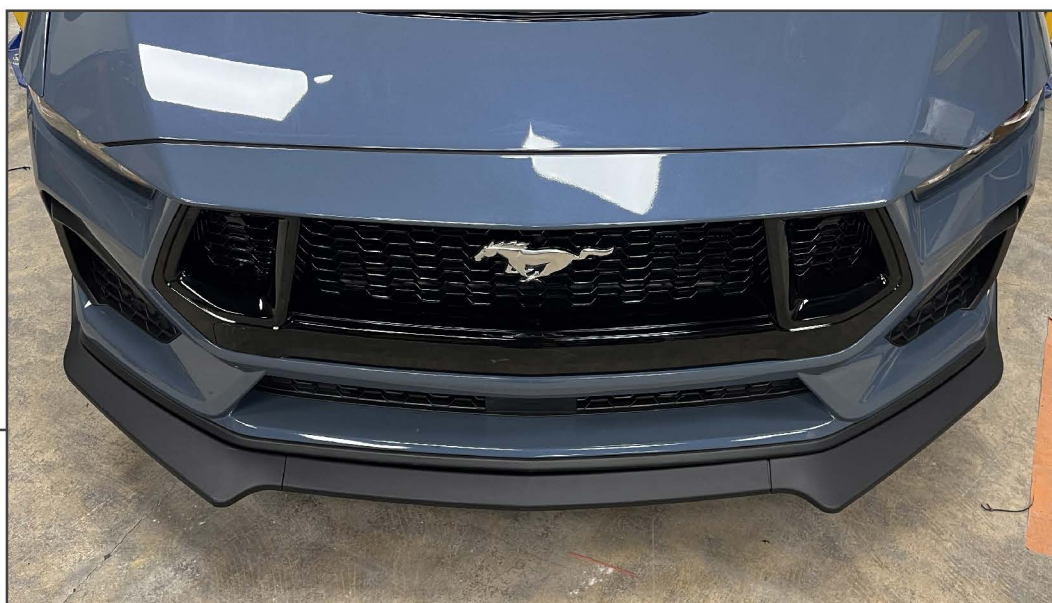
Loosely assemble the chin spoiler by attaching both sides to the center section using the provided small Phillips head screws. Allow the screws to remain loose until adjusted to the vehicle.

**STEP 2**

With a helper, align the chin spoiler to the front bumper. Ensure each side of the spoiler is even, then tighten the (4) previously fitted screws to secure the adjustment.

**STEP 3**

Using a screw-gun, attach the chin spoiler to the bumper using the provided (14) Phillips screws at the indicated screw locations.

**STEP 4**

Installation is now complete.