



BILLET ALUMINUM RADIATOR CAP COVER

(2024+ MUSTANG)

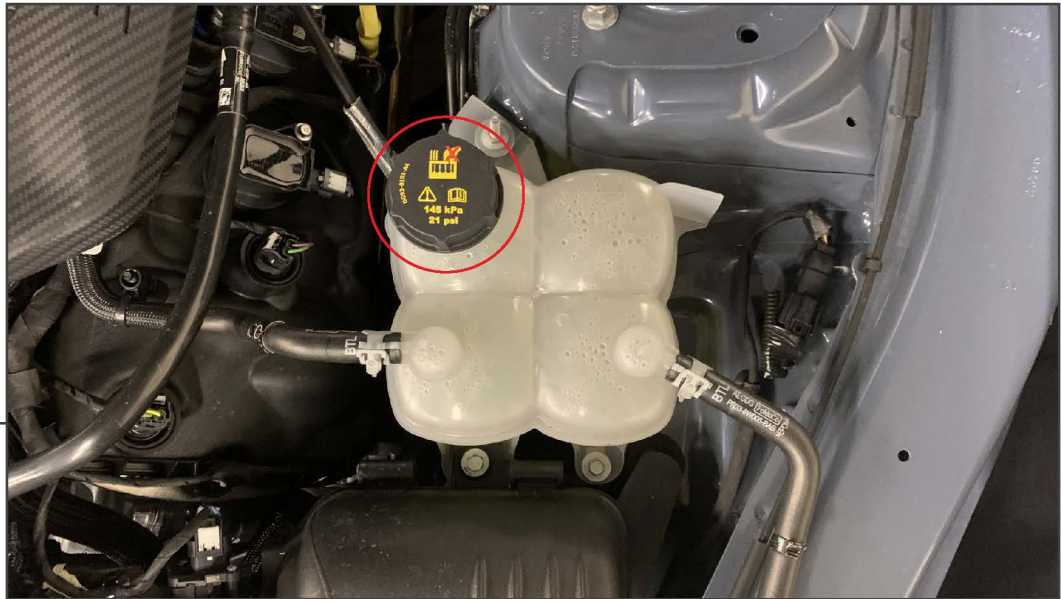
INSTALLATION INSTRUCTIONS

CONTENTS

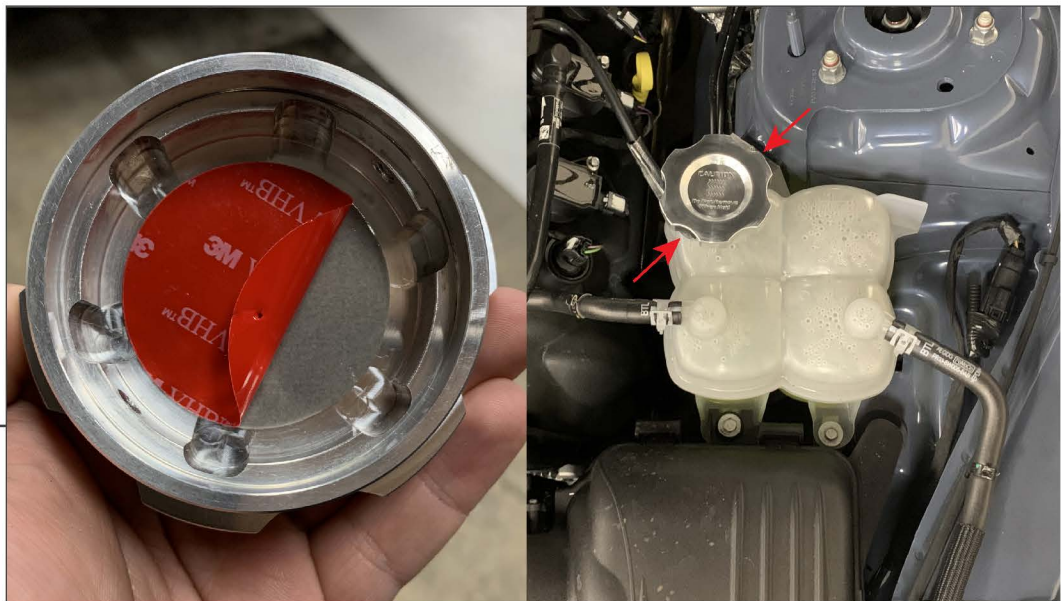
(1) Radiator Cap Cover
(1) Alcohol Prep Pad

TOOLS REQUIRED

2.5mm Allen Key

**STEP 1**

Locate the vehicle coolant overflow tank. Clean the overflow tank cap using the (1) alcohol prep pad.

**STEP 2**

Before removing the red tape backing, test fit the cap cover to the vehicle cap. Once familiar with fitment, remove the red tape backing from the bottom of the cover and adhere the cover into place. Once adhered, tighten the (2) set screws on the cover to fully secure the cover to the cap.



STEP 3

Installation is now complete.