



ROOF SPOILER

(2024+ MUSTANG)


INSTALLATION INSTRUCTIONS

CONTENTS

(1) Roof Spoiler

TOOLS REQUIRED

Isopropyl Alcohol
Microfiber Cloth

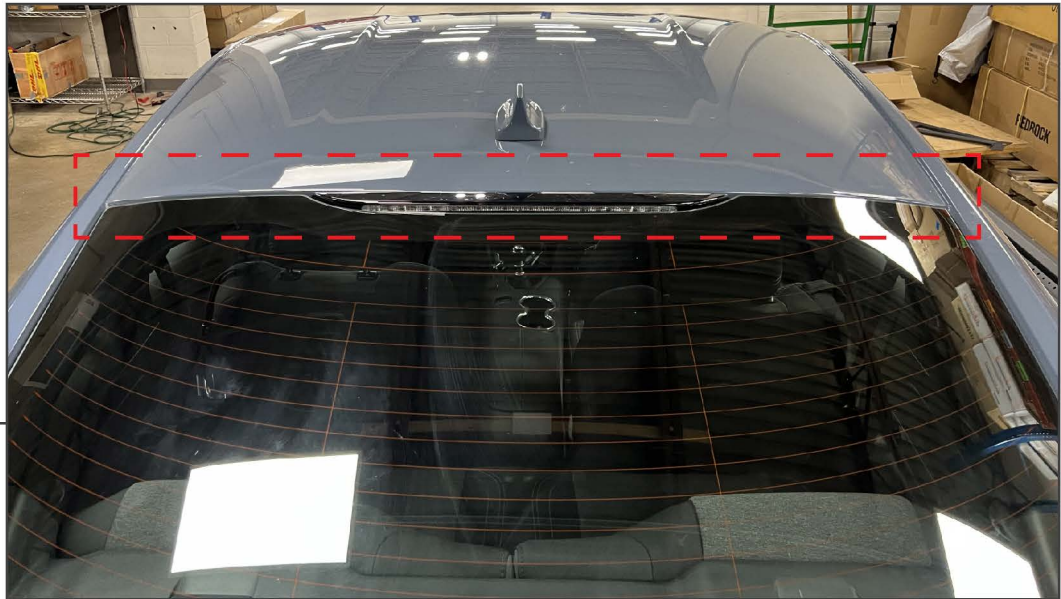

STEP 1

Clean the rear of the vehicle roof using isopropyl alcohol and a microfiber cloth. Allow the roof to fully dry.



STEP 2

Before removing the tape backing, test fit the roof spoiler to familiarize fitment. Once familiar with fitment, remove the tape backing and fit the spoiler to the vehicle roof. Press firmly in all locations to ensure tape adhesion.

Installation is now complete.