



---

# CARBON FIBER GT500 STYLE REAR SPOILER

(2010-2014 MUSTANG)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

(1) Rear Spoiler  
(4) M6 x 1.0 Bolts  
(4) M6 Washers  
(4) Drill Templates

### TOOLS REQUIRED

---


Flat Head Screwdriver  
Phillips Head Screwdriver  
10mm Socket & Ratchet  
Plastic Putty Knife/Squeegee  
Adhesive Remover  
Heat Gun/Hair Dryer

## **STEP 1**



Remove the (13) plastic clips holding the trunk liner to the trunk lid. Once loose, remove the trunk liner and set aside.

## **STEP 2**

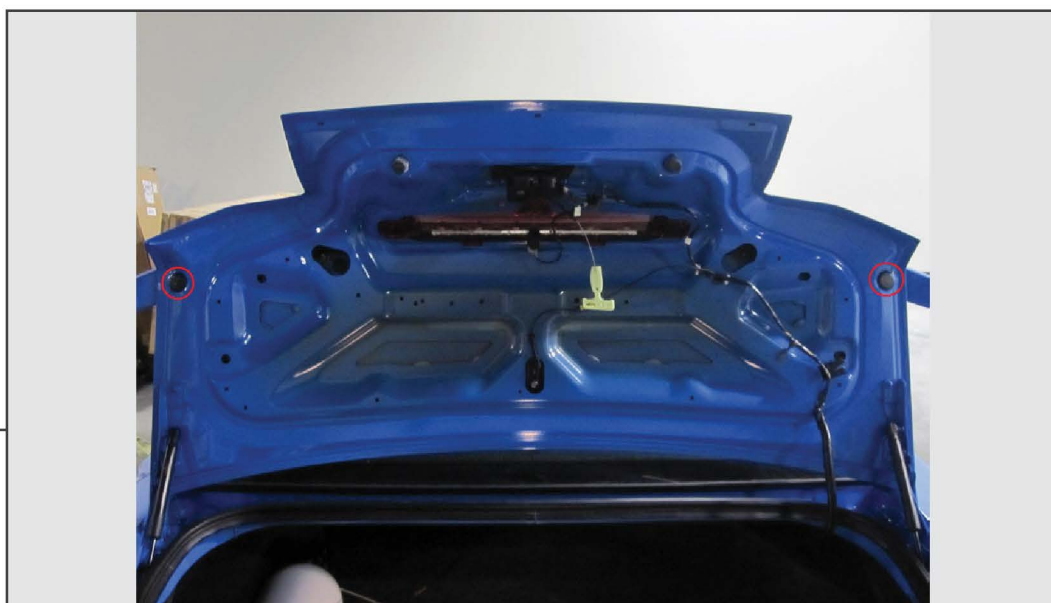


Use a pry tool to remove the (2) plastic caps on each end of the trunk lid.

## **STEP 3**



Use a 10mm socket to remove the (4) nuts securing the factory spoiler to the vehicle.

## **STEP 4**

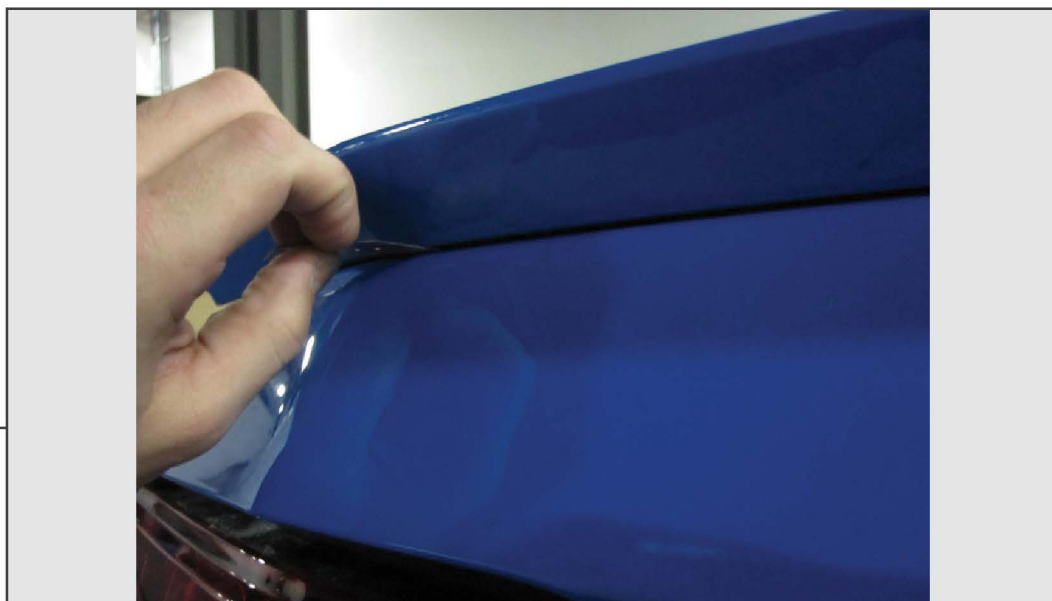


Use a heat gun or hair dryer around the edges of the factory spoiler to loosen the adhesive. It may also help to gently pry the spoiler up and run around the edges with a razor blade as shown. Once the adhesive is loose, remove the factory spoiler from the vehicle. Overheating the paint surfaces can cause damage, use minimal heat.

## **STEP 5**



Use a quality adhesive remover and plastic putty knife or squeegee to remove the leftover adhesive.

## **STEP 6**

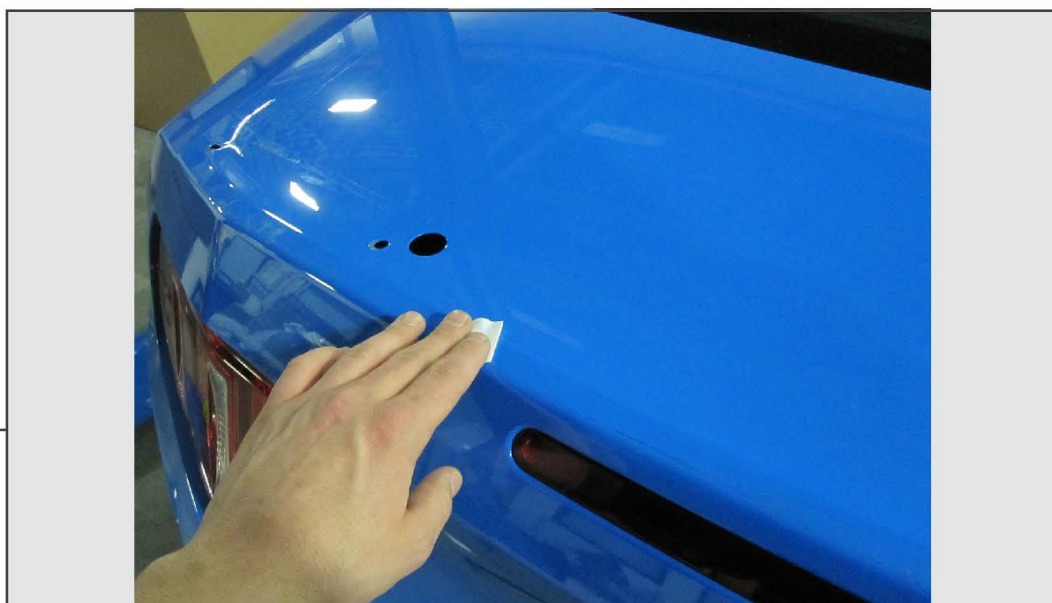

Once the trunk lid is free of adhesive, wipe down any areas where the new spoiler's tape will adhere with the supplied Alcohol Prep Pads.

## **STEP 7**




Peel the backing from the tape on the spoiler as shown.

## **STEP 8**




Place the spoiler on the trunk lid, but do not press down yet to seat the adhesive. Lift the trunk lid while supporting the spoiler to install the (4) supplied Phillips head screws and washers as shown.

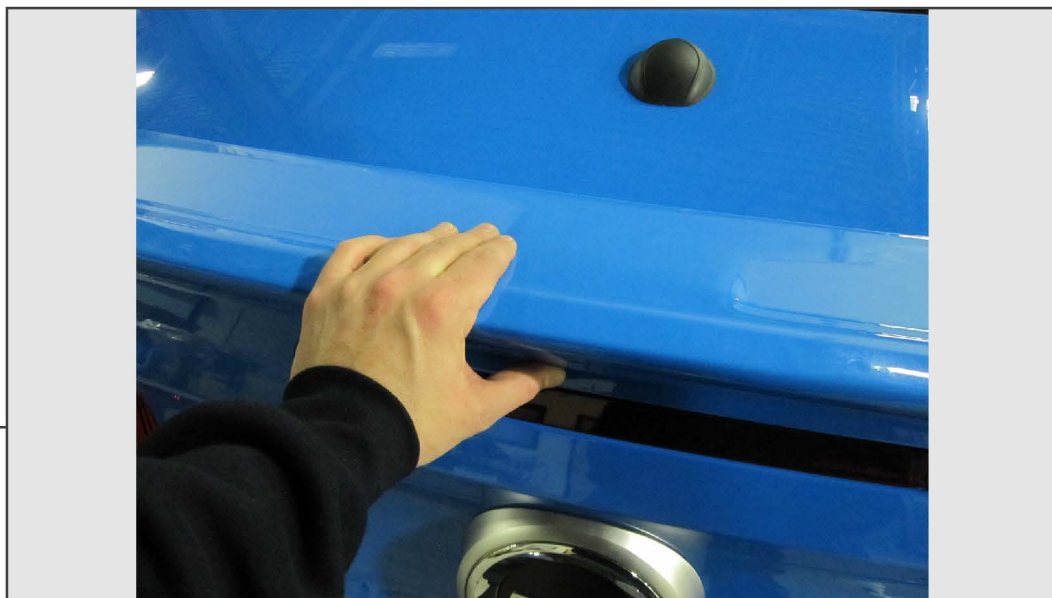

**STEP 9**

Once the spoiler is properly positioned and the screws are tightened, press down firmly on the spoiler to fully seat the adhesive. Re-install the trunk liner that was removed in Step 1.

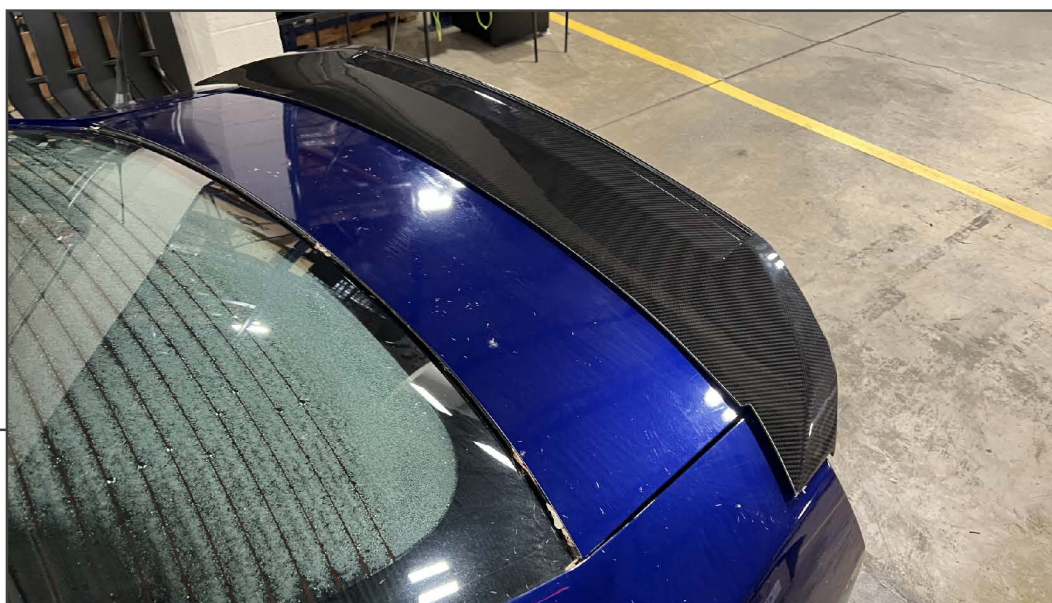**STEP 10**

Installation is now complete.