

SIDE SKIRTS

(2024+ MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Side Skirt
- (1) RH Side Skirt
- (1) LH Mud Guard
- (1) RH Mud Guard
- (=)
- (1) LH Grille Panel
- (1) RH Grille Panel
- (1) Roll of Double Sided Tape
- (1) Adhesion Promoter Applicator
- (24) Plastic Clips

TOOLS REQUIRED

T-15 Torx Socket/Bit Ratchet

Plastic Trim Removal Tool

SKU # 443694 Edited: 06/13/2024



Safely lift and support the vehicle off the ground. Inside the front wheel well, remove (3) plastic push clips from the fender liner/side skirt.




STEP 2

Inside the rear wheel well, remove (4) plastic push clips from the fender liner/side skirt.




From under the vehicle, remove (8) rectangular push clips. Using a pry tool, lift the rectangular clip towards the ground to release the clip.

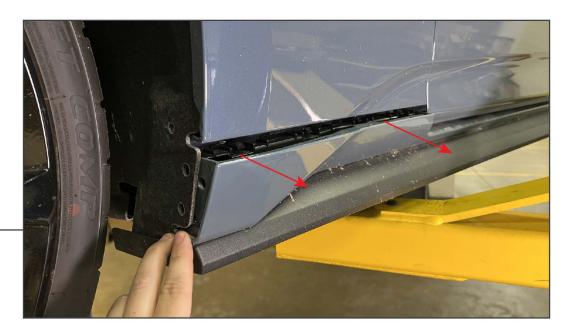

STEP 4

Firmly pull back on the top of the side skirt to release the side skirt from the vehicle fender.

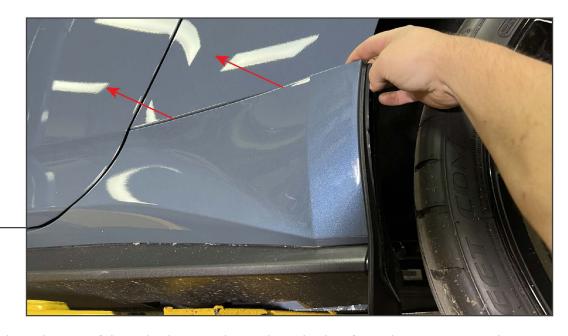

Firmly pull back on the top of the side skirt to release the side skirt from the quarter panel.




STEP 6

STEP 5

Firmly pull the side skirt away from the vehicle to dislodge the (8) plastic retaining clips. The OEM retaining clips will likely break during removal, the new side skirt includes new clips.

If the clips break from the side skirt and remain in the vehicle body, use a pry tool to remove the clips. If the clip falls into the rocker panel during removal, the plastic can be retrieved through the drain holes in the rocker panel.

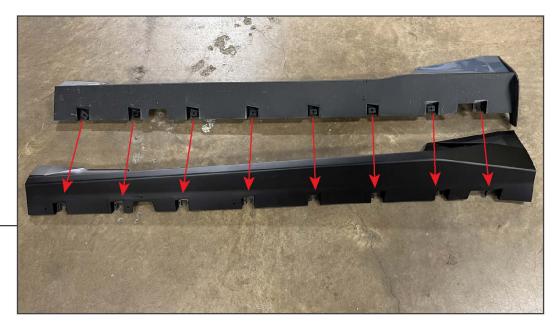

Place the new side skirt and the original side skirt on a soft workable surface.

Transfer the rectangular push clips from the original side skirt to the new side skirt.



STEP 8

Install (8) new plastic retaining clips into the new side skirt.



Test fit the included grille panel to the side skirt, and familiarize the flat portion of the grille fitment in relation to the side skirt. Once familiar with fitment, apply the included adhesion promoter to the grille flat panels and the side skirt.



STEP 10

Using the included roll of double sided tape, secure the grille panel to the inside of the side skirt. Press firmly to encourage adhesion.



Remove (4) T-15 Torx screws from the OEM mud guard on the side skirt. With the mud guard removed, remove the screw retainers from the side skirt.

Transfer the screw retainers to the new mud guard, and secure the new mud guard to the new side skirt using the original (4) T-15 Torx screws.



STEP 12

Begin to fit the new side skirt assembly to the vehicle. Begin by fitting the rear most side of the side skirt into the vehicle quarter panel, then press the side skirt in the middle to engage the (8) retaining clips. Once the clips are secure, fit the front of the side skirt to the fender. Ensure the front fender liner is on the inside of the side skirt, while the rear liner is on the outside of the sire skirt.

Note: To allow for additional maliability, place the side skirt in the sun before attempting installation to allow the material to flex to the vehicle better.





Secure the bottom of the side skirt to the vehicle rocker panels using the (8) original rectangular push clips. Secure the fender liners to the vehicle reusing the original hardware.

Repeat steps 1-13 for the remaining side skirt.

Installation is now complete.