


SPEEDFORM

STEP 5

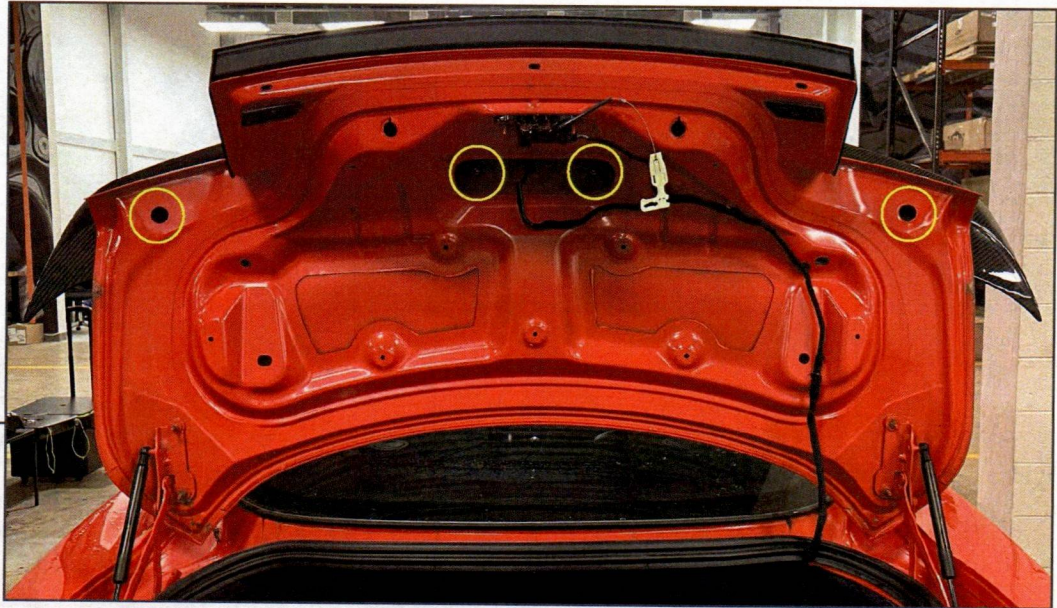

Peel the double sided tape backing from the spoiler tape, and align the spoiler to the vehicle. Do not fully press the tape down. Fit and evenly secure the spoiler to the trunk lid using the (4) M6 bolts. Once the bolts are secure, press the tape down firmly to encourage adhesion.


STEP 6



Re-install the trunk panel liner and interior trim.

Installation is now complete.


SPEEDFORM

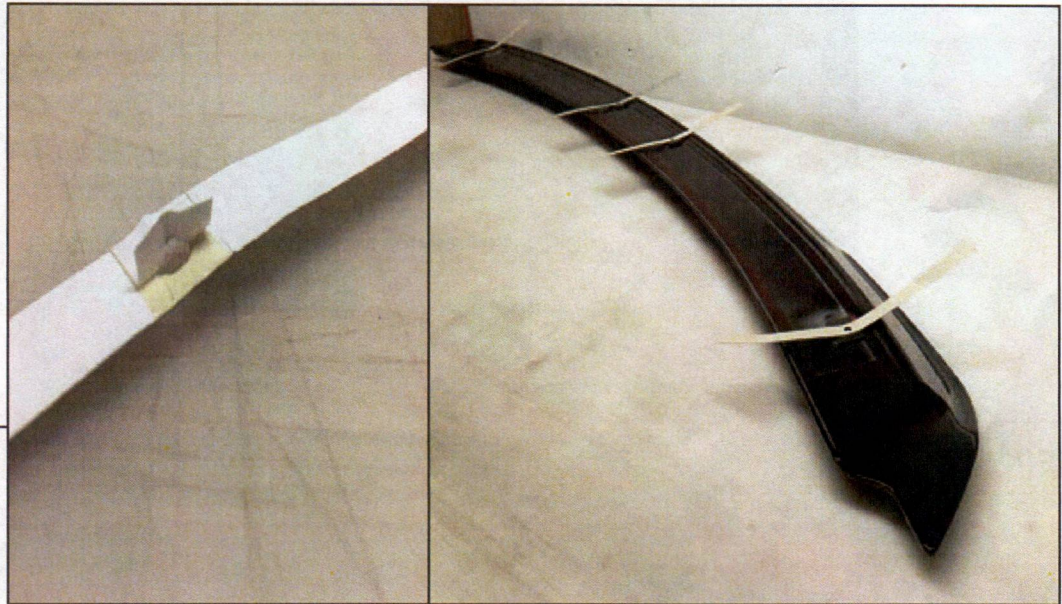

STEP 3

The spoiler is designed to reuse the original coupe spoiler bolt holes. If necessary, fit the drilling templates to the spoiler using the attached tape.

If equipped with the original coupe spoiler, skip to step 5.

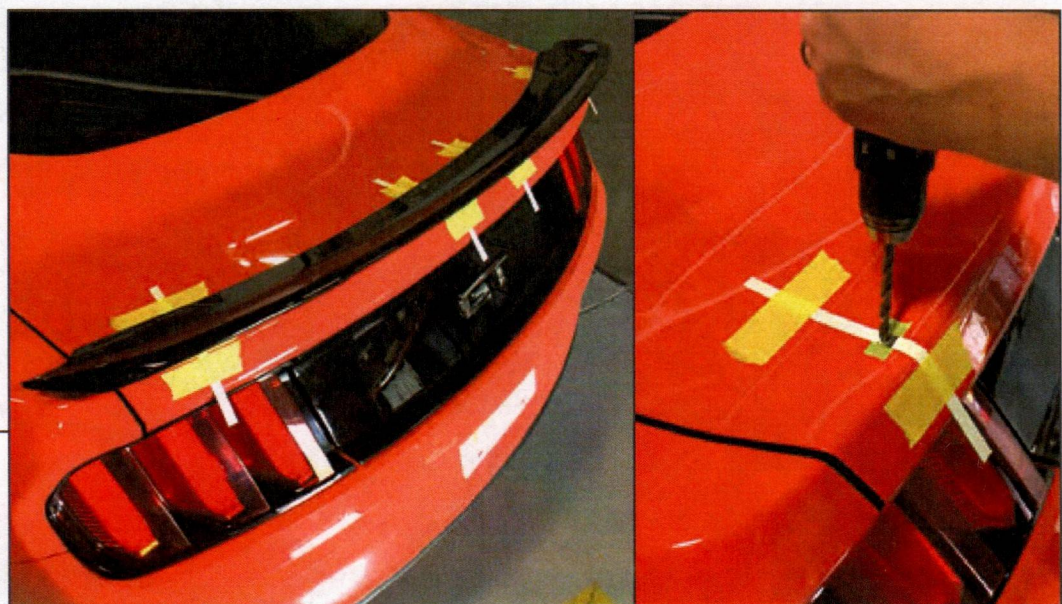


STEP 4

Fit the spoiler to the vehicle, and center into place. Use masking tape to secure the drill templates to the trunk lid, and lift the spoiler away from the vehicle. Drill the holes in the trunk lid using a 7/32" drill bit.


Clean the vehicle trunk lid using exterior detailer, followed by the included prep pads.

SPEEDFORM

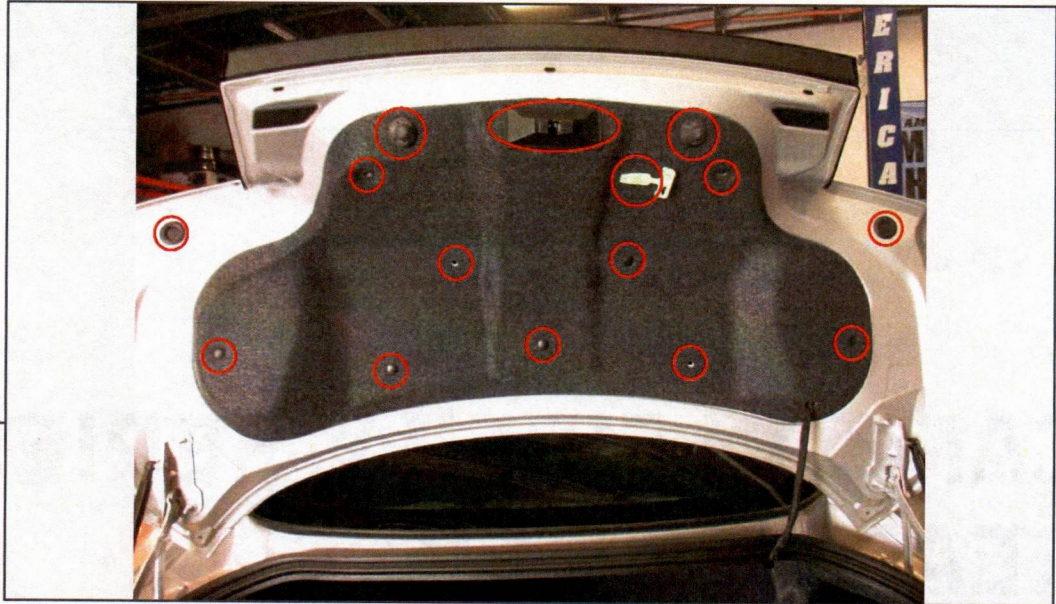

STEP 1

Remove the inner trunk panel by removing the (9) plastic push rivets, (2) rubber bumpers, and the plastic trim around the latch assembly. There are also (2) rubber plugs on the far left and right of the trunk lid that will need to be removed to gain access to the factory bolt locations.

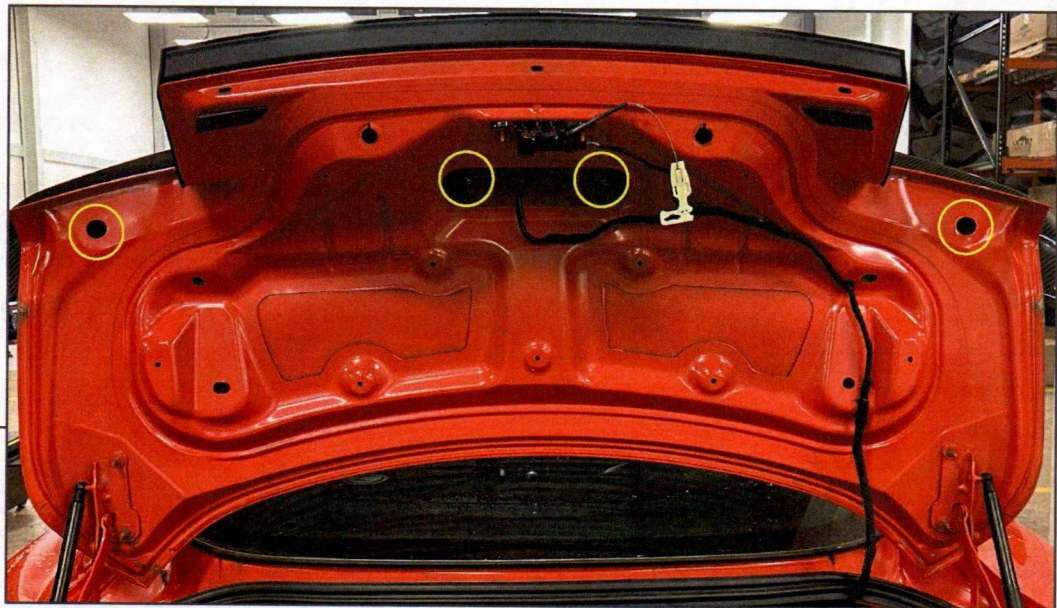

STEP 2

Remove the (4) bolts securing the spoiler to the trunk lid. Then, carefully remove the spoiler using adhesive remover and a soft pry tool.

SPEEDFORM

CARBON FIBER V-SERIES REAR SPOILER

(2015-2023 MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Rear Spoiler
- (4) M6x1.00 Bolts
- (4) M6 Flat Washers
- (2) Alcohol Prep Pads
- (2) Adhesion Promoter Prep Pads
- (4) Drill Templates
- (4) Foam Pads

TOOLS REQUIRED

- Phillips Screwdriver
- 10mm Socket & Ratchet
- Drill & 7/32" Drill Bit
- Trim Panel Removal Tool
- Painters Tape

SKU # 444669