

SPEEDFORM

BILLET ALUMINUM FUEL DOOR COVER

(2024+ MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS


(1) Fuel Door

TOOLS REQUIRED

Flathead Screwdriver/Pry Tool

SKU # 446084 / 446085
Edited: 06/27/2024

SPEEDFORM

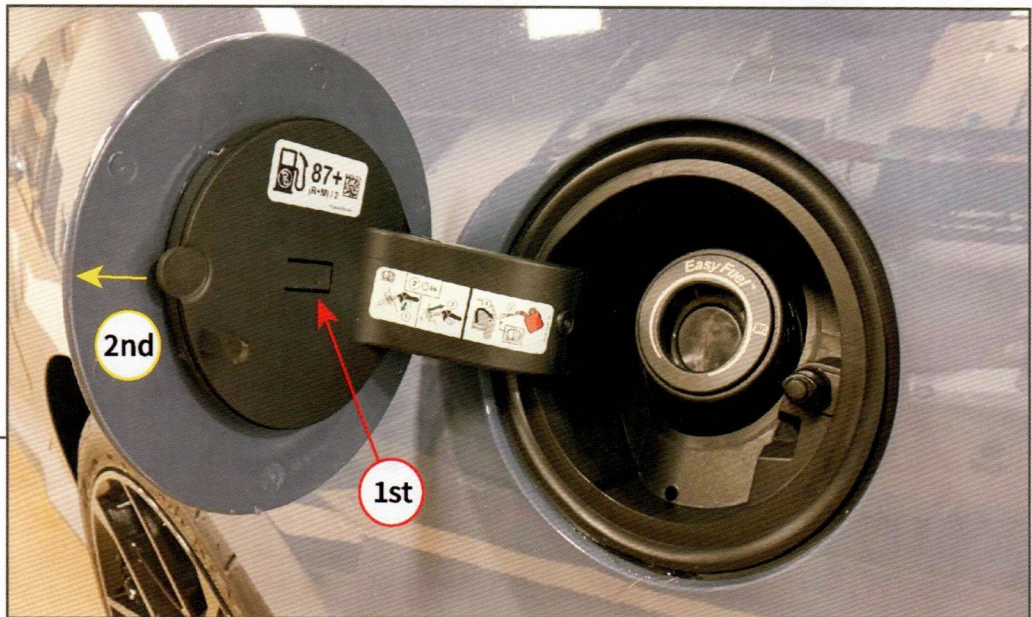

STEP 1

Open the vehicle fuel door. Locate the slot in the hinge panel. Using a flathead screwdriver/pry tool, gently pull back on the slot to disengage the fuel door lock tab. With the tab lifted, slide the fuel door off the hinge panel away from the vehicle.



STEP 2

Carefully slide the new fuel door onto the hinge panel, ensuring all edges properly align into the guides. Fully slide the fuel door until fully seated. Slowly close the fuel door initially to ensure proper fitment.

Installation is now complete.