



Installation Guide

Mach 1 Front Upper Grille
For 2013-2014 Ford Mustang
SKU # AMFMCA00614 & AMFMCA00616




STEP 1

Remove the little pushpins to take off the radiator cover. Then remove the 6 screws to take off this piece.




STEP 2

Forcefully push out the old grille that is held by some clips. Install the mach 1 grille on the factory studs, line it up on all of the tabs.

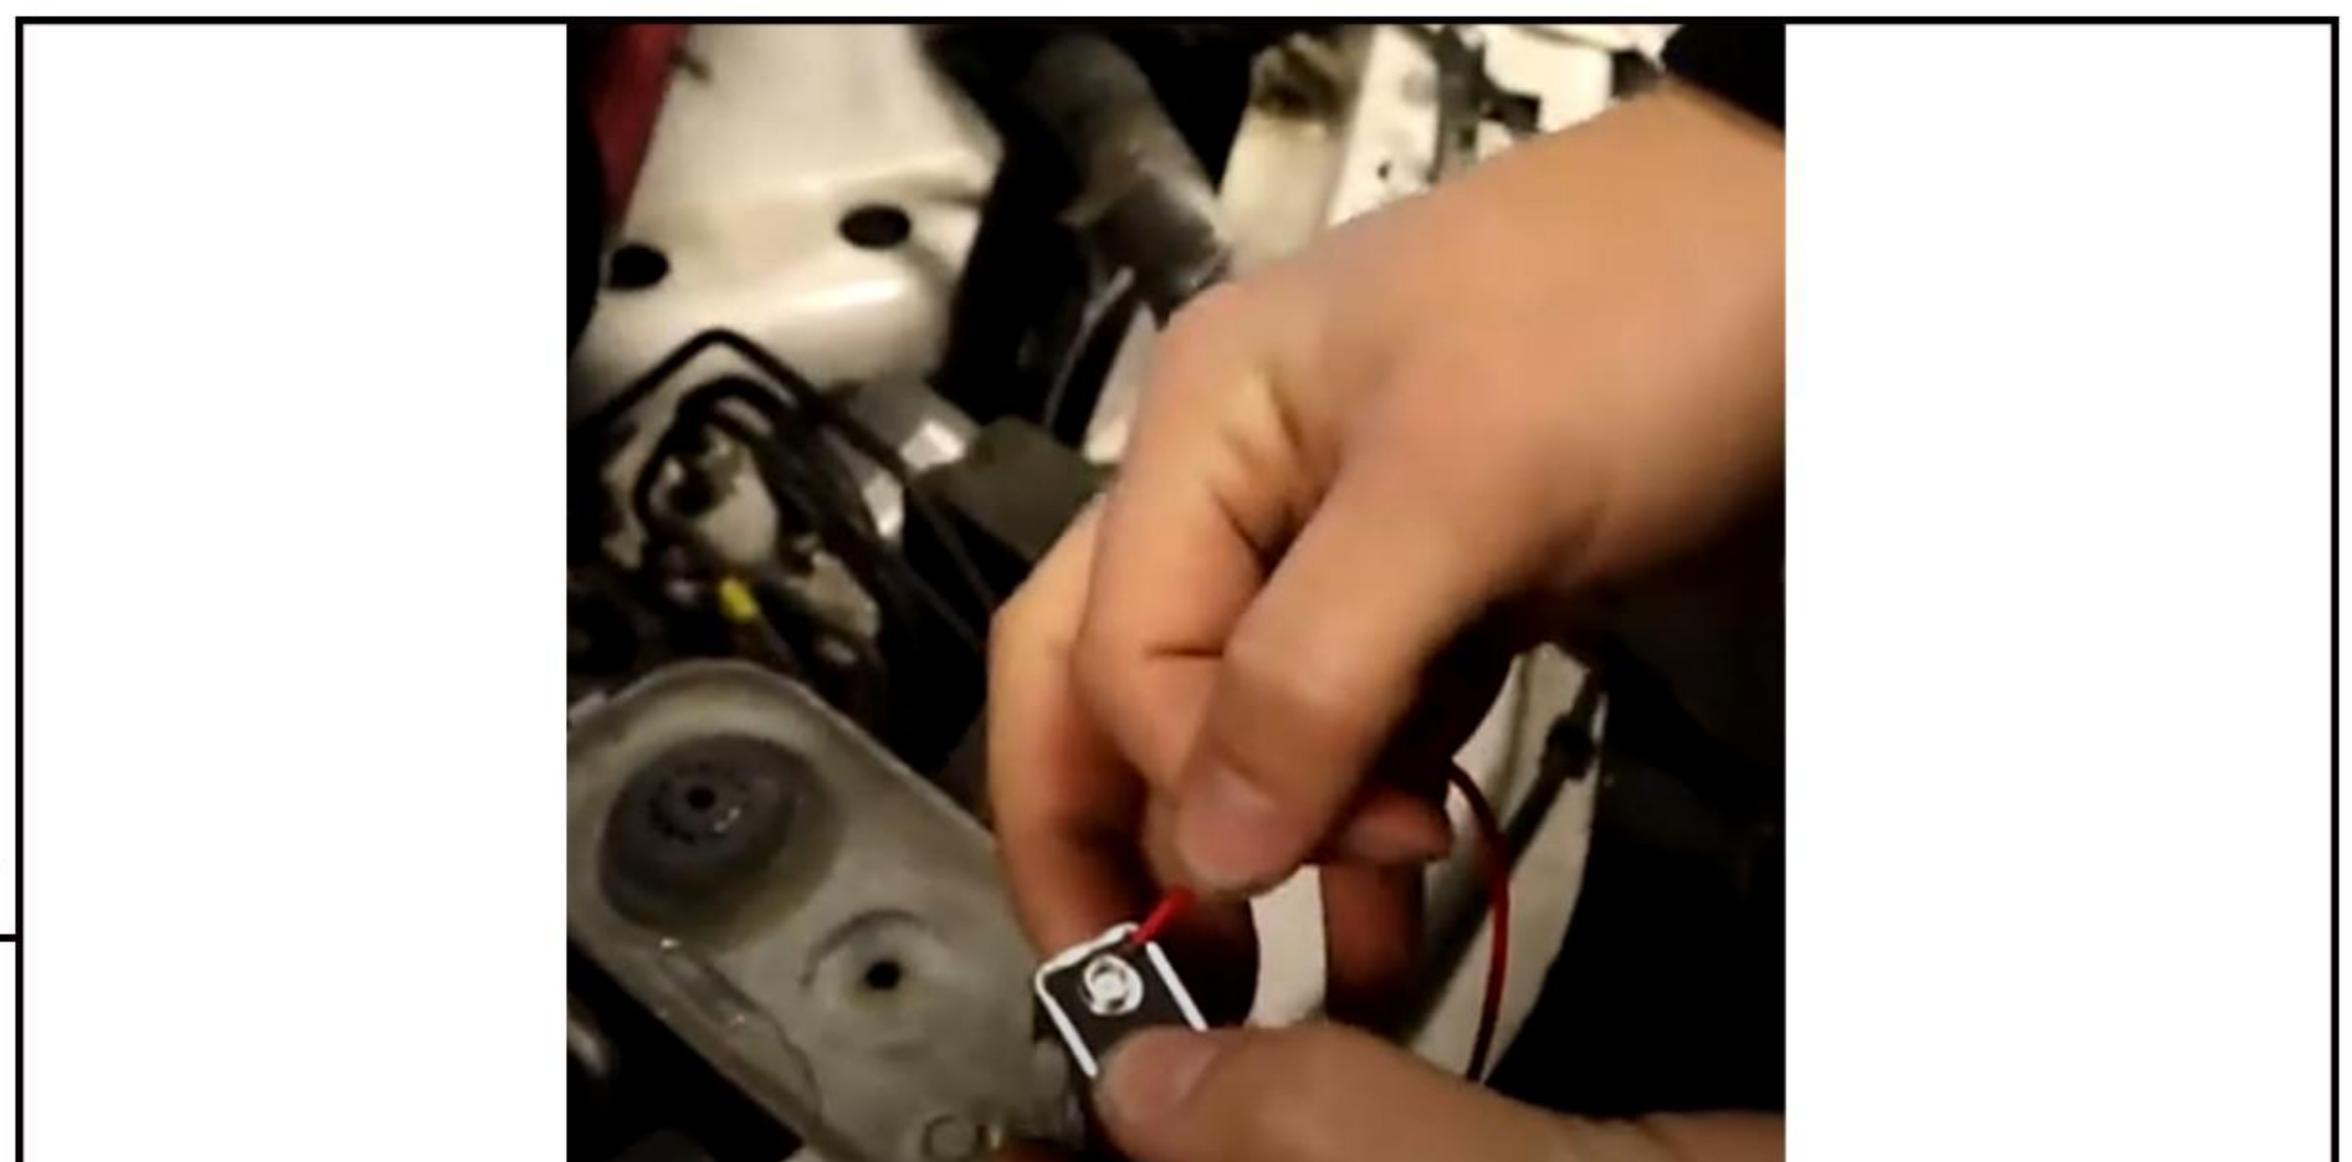

STEP 3

About Wiring:
The red wire connects to the ACC, the black wire connects to the negative of the battery, the yellow wire connects to the turn signal.

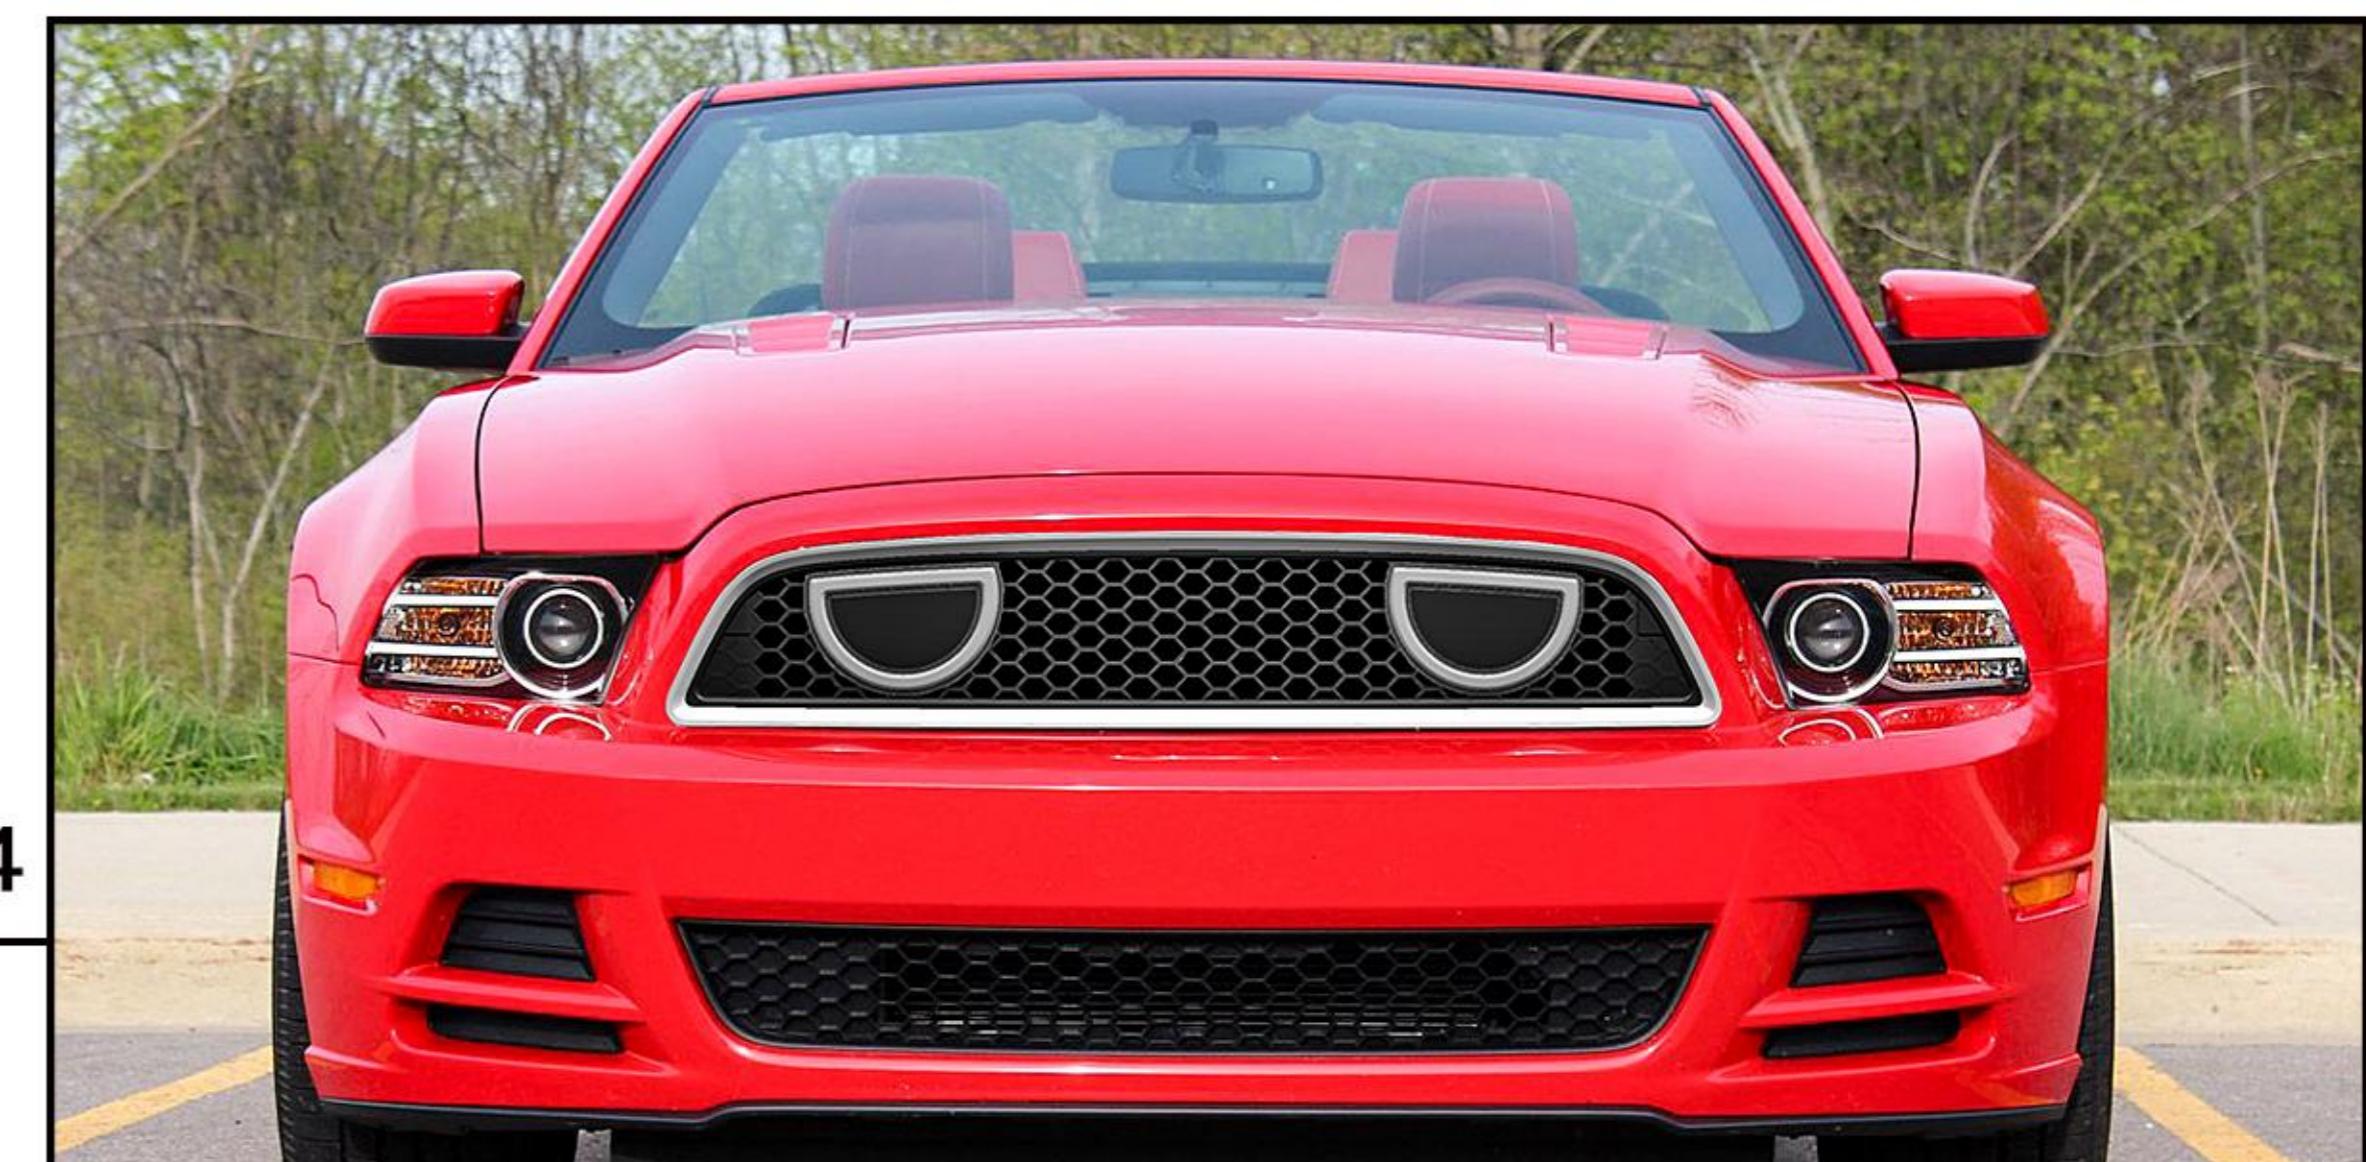

STEP 4

After connecting the wires, follow the step 1 in reverse order to complete the final installation.