



Installation Guide

Mach 1 Front Upper Grille For 2015-2017 Ford Mustang

SKU # AMFMCA00615 & AMFMCA00617

STEP 1



Remove all the little pushpins to remove the plastic rated air cover; Then remove 6 large screws and 2 more small screws underneath the weather strip.

STEP 2




Remove the little pushpin clips on and underneath the fender to pull the splash shield out, then you will reach the bolt and remove it. Repeat the process on the other side.

STEP 3



Move underneath the car to remove the 6 splash shield screws, and remove the forklift. Then you can remove the bumper from the car.

STEP 4

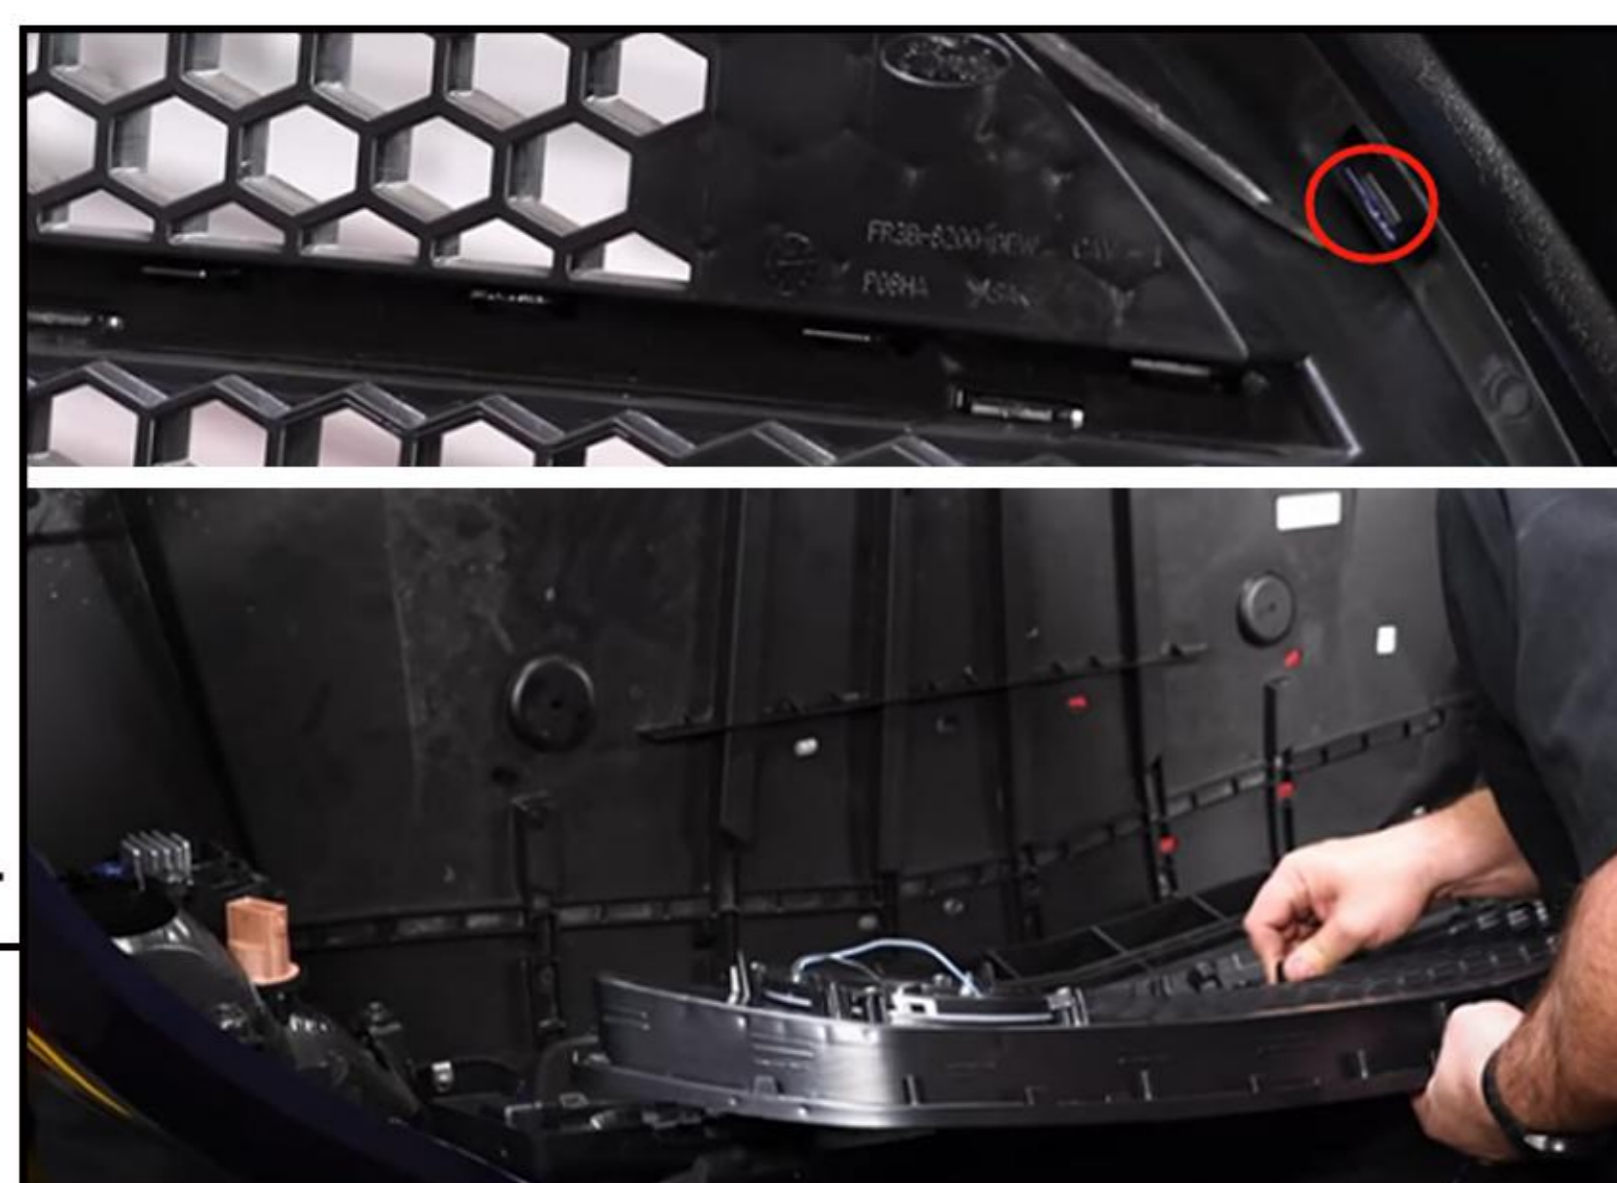

Remove the clips on the inside to separate the original grille; Install the Mach 1 grille on the factory studs, line it up on all of the tabs.

STEP 5



Wire up the DRLS to the headlight wiring harness. Or the red wire connects to the ACC, the black wire connects to the negative of the battery, the yellow wire connects to the turn signal.

STEP 6



After connecting the wires, put the new grille with bumper back on the car and follow the step 1-3 in reverse order to install the bumper. Finally, complete the installation.