
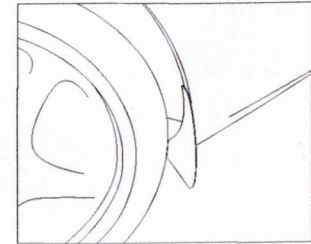
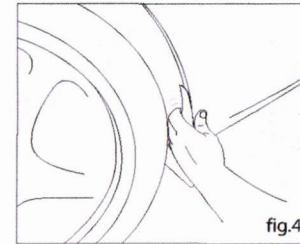
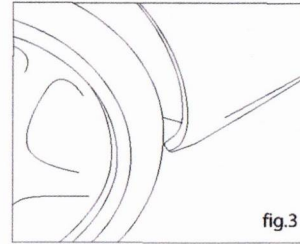


Installation Instructions JFlaps™ Splash Guards

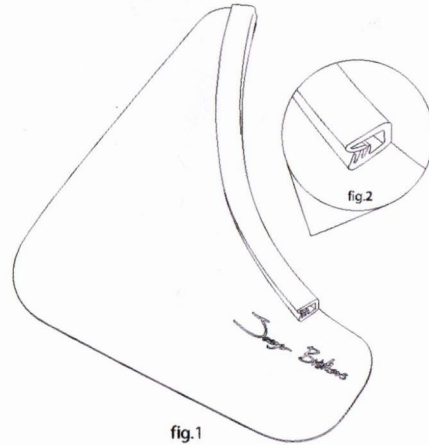

Be sure that the JFlaps (fig.1) and the fender edge (fig.3) where they will be mounted, are clean and dry.

Beginning at the bottom of the JFlap, position the u channel (fig.2) over the fender edge and carefully push it on along its entire length (fig.4). After checking for good alignment on the vehicle, push firmly along the u channels entire length for secure fit. **Be sure the molding is fully seated against the edge.**

If the u channel feels as though it fits too tightly or loosely the width of the u channel may be adjusted by hand, by removing the JFlap and gently widening or squeezing the u channel for better fit.

Clean the JFlaps using mild soap and water, rinse and dry thoroughly.

We recommended that the splash guards are removed and cleaned every time the vehicle is cleaned.





Always remove the splash guards before using an automatic or drive-through car wash.

Supplement for 2020 Mustang GT500 JFlaps™

The 2020 Mustang GT500 uses three reusable plastic rivets (fig.1) in the front wheel well (fig.4), the upper most rivet must be removed and then reinstalled once the front flaps are in place.

Insert a small flat tool (fig.2) in the recess located on the perimeter of the fastener and twist, the center of the fastener (fig.3) should lift easily and then allow the entire fastener to be removed.

Install the flap as described in the Jflaps installation instructions, then reinstall the rivet through the hole in the splash guard and press the center of the fastener to expand it.

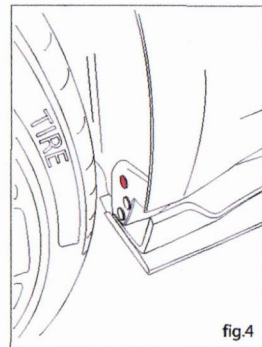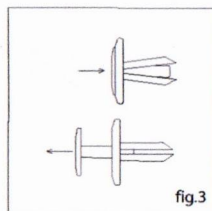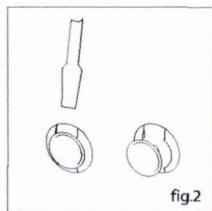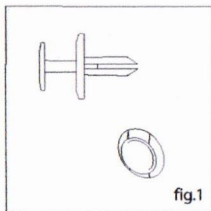

Remove the rivet shown in RED

We include two spare plastic rivets, just in case you lose or break one.

We recommended that the splash guards are removed and cleaned every time the vehicle is cleaned. Always remove the splash guards before using an automatic or drive-through car wash.

©2022 Jaeger Brothers Automotive Accessories, Inc.

For more information please visit: jflaps.com

Jaeger Brothers



Made in the USA

Splash Guards

Foam Bumpers:

We have found that the exact position of the rocker may be slightly different from car to car, therefore, it is necessary for you to place the foam bumper on the splash guard for the best appearance, for your car.

Attach the foam to the splash guard in the location indicated in RED on the diagram. Peel the paper backing from the foam strip, the splash guard should be easy to pull away from the rocker allowing enough room to place the foam. After assuring the foam is in the desired location press it firmly to fully activate the adhesive.

