



CARBON FIBER SIDE SKIRTS

(2024-2025+ MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) LH Side Skirt
(1) RH Side Skirt
(4) Rolls of Double Sided Tape
(14) Phillips Screws
(6) Adhesion Promoter Prep Pads
(6) Alcohol Prep Pads

TOOLS REQUIRED

Drill
Phillips Drill Bit
Floor Jack
Jack Stands



STEP 1

Safely lift and support the side of the vehicle from the ground to access the top and bottom of the OEM side skirt.

Using isopropyl alcohol, thoroughly clean the top and bottom of the vehicle OEM side skirt.

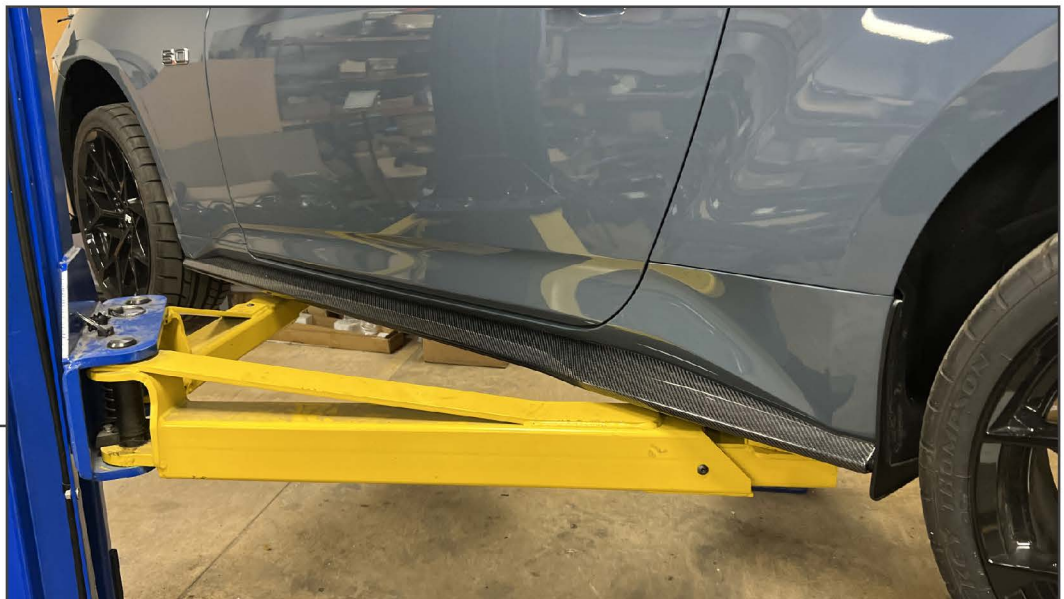


STEP 2

Prep the side skirt panel with isopropyl alcohol and adhesion promoter (prep pads included) for double sided tape installation. Using (2) rolls of double sided tape, apply the tape to the outer perimeter of the side skirt.

STEP 3

Test fit the side skirt to the vehicle OEM side skirt, and familiarize fitment (screw locations). Once familiar with fitment, peel the tape backing from the tape and firmly press the side skirt to the vehicle. Then, secure the side skirt using (7) Phillips screws into the OEM side skirt.

STEP 4

Repeat steps 1-3 for the remaining side skirt.

Installation is now complete.