



# ROOF SPOILER

(2024+ MUSTANG)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) Roof Spoiler
- (2) Alcohol Prep Pads
- (2) Adhesion Promoter Prep Pads


### TOOLS REQUIRED

---

- Glass Cleaner
- Microfiber Cloth

SKU # 460348

**STEP 1**

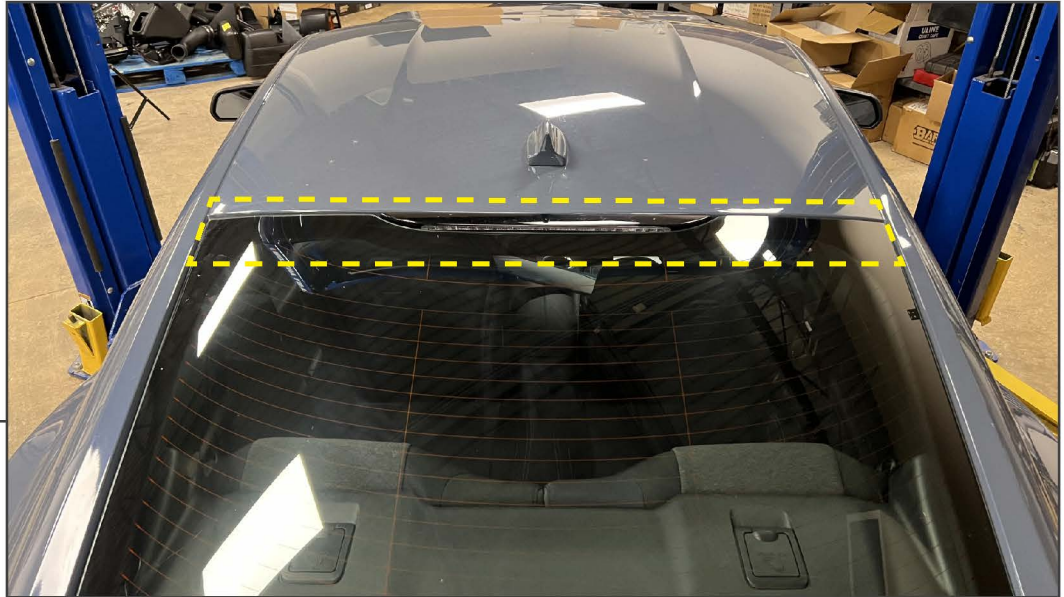

Using glass cleaner and a microfiber cloth, clean the top of the rear window, as well as the top of the third brake light.

**STEP 2**



Before removing the roof spoiler tape backing, test fit the spoiler to the vehicle to familiarize fitment. The spoiler is intended to fit to the roof body line/glass edge.



---

### STEP 3

Once familiar with fitment, remove the spoiler. Clean the vehicle roof with the included (2) alcohol prep pads, following with the (2) adhesion promoter prep pads. Ensure the window surface is dry before using each prep pad.

Peel the red tape backing from the roof spoiler, and align the spoiler to the vehicle. Once aligned, firmly press the spoiler into place to encourage adhesion. The center of the spoiler will adhere to the top of the third brake light, while the outer-sides adhere to the rear glass.

Installation is now complete.