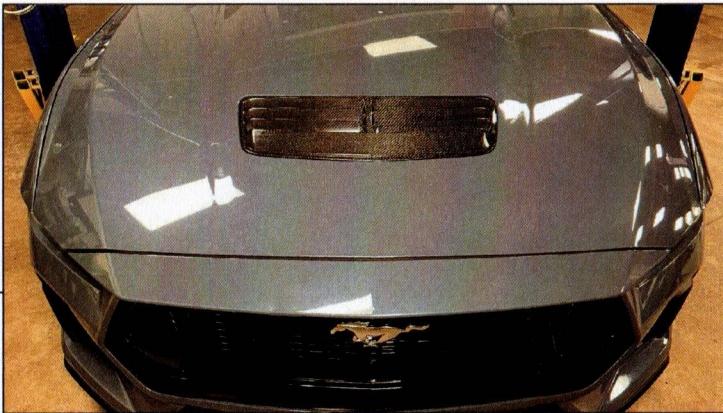
**STEP 5**

Fit the vent to the hood, and engage the (6) tabs to the inside of the hood.

Note: If the tabs are difficult to press into the hood, use a small pry tool along the inside structure of the hood to press the hood upwards while pressing the outside of the hood down. Using double sided tape around the perimeter of the vent is also acceptable.

With the vent tabs fitted, secure the vent using (4) Phillips screws and (4) flat washers.

**STEP 6**

Installation is now complete.

CARBON FIBER HOOD VENT

(2024+ MUSTANG - GT & DARK HORSE)

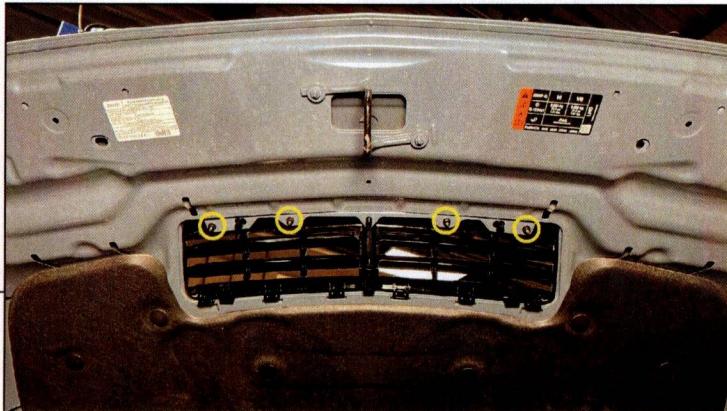
INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Hood Vent
- (4) Phillips Screws
- (4) Flat Washers
- (4) Screw Clips

TOOLS REQUIRED

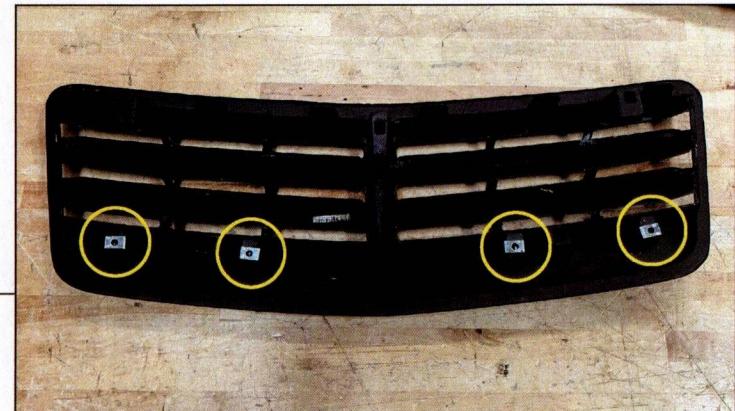
- 9mm Socket
- Ratchet
- Phillips Screwdriver
- Exterior Detailer
- Isopropyl Alcohol
- Microfiber Cloth

**STEP 1**

Open the vehicle hood. Remove (4) 9mm nuts from the bottom of the hood vent.

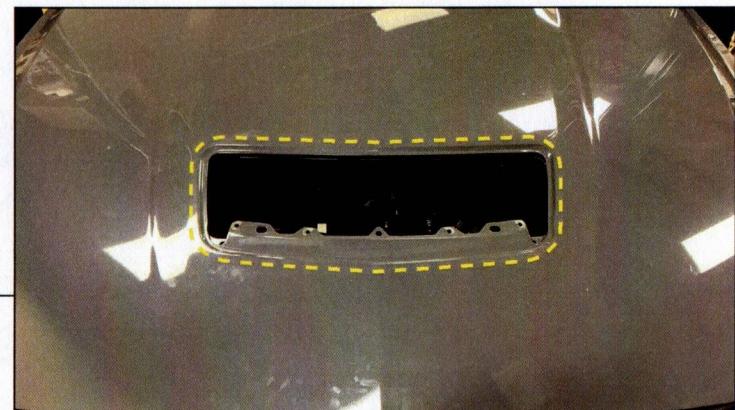
**STEP 2**

Gently press back on the (6) retaining tabs while pressing the vent towards the outside of the hood. With all tabs pressed, remove the vent through the top of the hood and set aside.

**STEP 3**

Place the new vent on a soft workable surface.

Fit the (4) screw clips onto the grille posts, ensuring the clip hole aligns with the drilled hole in the post.

**STEP 4**

Clean the hood vent area on the outside of the hood using exterior detailer and a microfiber cloth.