



INTERIOR TRIM KIT

(2015-2023 MUSTANG - NON-PERFORMANCE PACK ONLY)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Headlight Switch Trim Panel
- (1) Dashboard Trim Panel
- (1) LH Door Handle Trim Panel
- (1) RH Door Handle Trim Panel
- (1) LH Window Switch Trim Panel
- (1) RH Window Switch Trim Panel
- (1) LH Lower Dash Trim Panel
- (1) RH Lower Dash Trim Panel
- (9) Alcohol Prep Pads
- (9) Adhesion Promoter Prep Pads

TOOLS REQUIRED

Interior Detailer
Microfiber Cloth

SKU # 460945

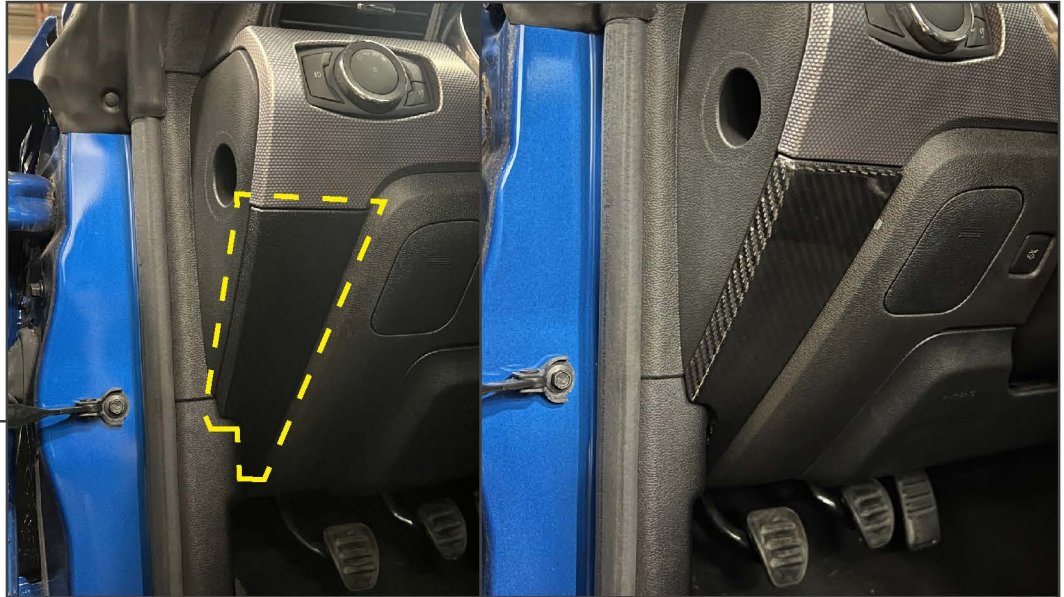
STEP 1
(Door Latch)

Clean the area around the door latch & lock buttons using the included (1) alcohol prep pad, followed by (1) adhesion promoter prep pad. Test fit the trim panel to familiarize fitment, and peel the white tape backing from the trim panel. Align and firmly press the trim panel into place to encourage proper adhesion.

STEP 2
(Window Switch)

Clean the area around the door handle & window switch/mirror buttons using the included (1) alcohol prep pad, followed by (1) adhesion promoter prep pad. Test fit the trim panel to familiarize fitment, and peel the white tape backing from the trim panel. Align and firmly press the trim panel into place to encourage proper adhesion.

Note: The front of the carbon panel will tuck under the leather portion of the door panel to prevent the carbon panel from overlapping the mirror buttons.

STEP 3
(Lower Dash
Trim)

Clean the area along the bottom of the dashboard using (1) alcohol prep pad per side, followed by (1) adhesion promoter prep pad per side. Test fit the trim panel to familiarize fitment, and peel the white tape backing from the trim panel. Align and firmly press the trim panel into place to encourage proper adhesion.

STEP 4
(Headlight
Switch)

Clean the area along the headlight switch using (1) alcohol prep pad, followed by (1) adhesion promoter prep pad. Test fit the trim panel to familiarize fitment, and peel the white tape backing from the trim panel. Align and firmly press the trim panel into place to encourage proper adhesion.

STEP 5
(Dashboard)



Using interior detailer and a microfiber cloth, clean the dashboard panel and headlight switch trim.

Clean the same area with (2) alcohol prep pads, followed by (2) adhesion promoter prep pads. Ensure each cleaning product is fully dry before applying the next prep product.

STEP 6
(Dashboard)



Test fit the trim panel before removing the tape backing to familiarize fitment. Once familiar, peel the white tape backing from the double sided tape pre-installed to the trim panel. Once all the tape backing is removed, align and press the trim panel to the dashboard. Apply firm even pressure to the trim panel to encourage tape adhesion. *It is recommended to adhere the top of the trim panel to the dashboard first, and then press the bottom of the trim panel into place.

Installation is now complete.