



PERFORMANCE PACK STYLE REAR SPOILER

(2024+ MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Rear Spoiler
- (1) LH Spoiler Post
- (1) RH Spoiler Post
- (1) Center Spoiler Post
- (1) LH Post Cap
- (1) RH Post Cap
- (6) M6 x 16mm Phillips Head Bolts
- (4) M6 x 16mm Flange Head Bolts
- (6) M6 Flat Washers (12mm OD)
- (2) M6 Flat Washers (19mm OD)
- (1) Drilling Template

TOOLS REQUIRED

- 10mm Socket
- Ratchet
- Phillips Head Screwdriver
- Plastic Pry Tool
- Heat Gun
- Masking Tape
- Exterior Detailer
- Microfiber Cloth
- Razor Knife
- Drill & 8mm Drill Bit (optional)

SKU # 463000/463001
Edited: 08/29/2024



STEP 1

Open the vehicle trunk. Locate and remove the (2) rubber grommets at each end of the vehicle trunk panel.


Remove the (2) 10mm bolts securing the spoiler to the trunk.



STEP 2

Using a plastic pry tool and a heat gun, heat the spoiler edges to loosen the adhesive and gently pry upwards to disengage the spoiler tape from the trunk lid.

Remove the spoiler from the vehicle and set aside.

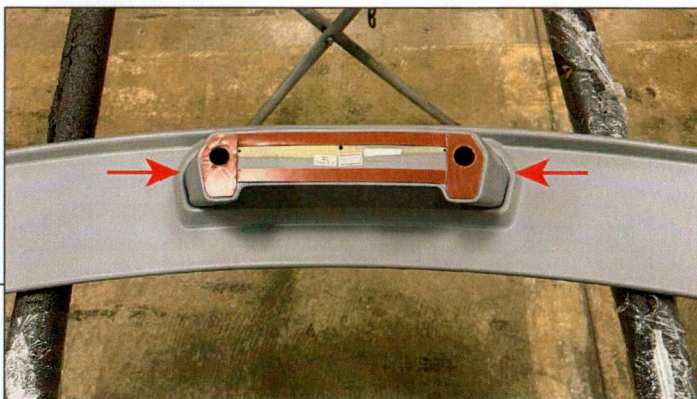

STEP 3

Place the new spoiler on a soft workable surface. Place the center post onto the bottom of the spoiler, and secure into place using (2) M6 flange head bolts.

Note: It is recommended to use masking tape to loosely hold the bolt in the socket during installation.



STEP 4

Fit each end post to the spoiler, and secure each post into place using (3) M6 Phillips bolts and (3) M6 flat washers (12mm OD).

With the spoiler outer posts secure, install the covers over the bolts using the pre-installed double sided tape. Ensure to properly clean the spoiler around the bolts with isopropyl alcohol to ensure proper tape adhesion.



STEP 5

Clean the vehicle trunk lid using exterior detailer and a microfiber cloth.

Fit the included (2) 4.5mm spacers into the vehicle trunk recessed holes.

For vehicles without OEM Rear Spoiler, see Step 6.



STEP 6

Vehicles without OEM Rear Spoiler: Using the included template, align the template to the outer-most side of the trunk panel. Then, align the top of the template to the metal portion of the decklid panel. Tape the template into place. Drill the hole using a 8mm drill bit.

Once drilled, remove the template and flip the template over to repeat the process for the opposite side of the decklid panel.



STEP 7

Partially peel the red tape backing away from each mounting post. Ensure to pull the backing past each mounting bolt hole. With a helper, fit the spoiler to the vehicle mounting holes. Loosely secure the spoiler using the (2) M6 flange head bolts and (2) M6 flat washers (19mm OD).

Peel the red tape backing, and then tighten the M6 bolts until the spoiler is secure. Then, press the bumper to the trunk to encourage tape adhesion.



STEP 8

Installation is now complete.