

SPEEDFORM

GT350 STYLE REAR SPOILER

(2024-2025+ MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Rear Spoiler
- (1) Drilling Template
- (2) M6 x 16mm Flange Bolts
- (2) M6 Flat Washers
- (2) Spoiler Spacers
- (2) Alcohol Prep Pads
- (2) Adhesion Promoter Prep Pads

TOOLS REQUIRED

- 10mm Socket
- Ratchet
- Plastic Pry Tool
- Exterior Detailer
- Microfiber Cloth
- Drill & Drill Bits (Optional)
- Razor Knife (Optional)

SKU # 464384
Edited: 02/19/2025

SPEEDFORM

STEP 1



Open the vehicle trunk. Remove (2) rubber grommets from each end of the trunk lid. Remove (2) 10mm bolts from the under-side of the vehicle spoiler.

Note: If the vehicle was not equipped with the vehicle rear spoiler, the drilled holes will align with these grommets.

STEP 2



Using a plastic pry tool and a heat gun, heat the spoiler edges to loosen the adhesive and gently pry upwards to disengage the spoiler tape adhesive from the trunk lid.

SPEEDFORM

STEP 3



Clean the vehicle of any remaining double sided tape residue. Then, clean the trunk panel using (2) alcohol prep pads, and allow to fully dry. Once the trunk is dry, clean the trunk panel again using (2) adhesion promoter prep pads.

STEP 4




Vehicles with OEM rear spoiler: Fit the included (2) spoiler spacers into the trunk panel hole.

Vehicles without OEM rear spoiler: Skip to Step 5.

SPEEDFORM


STEP 5

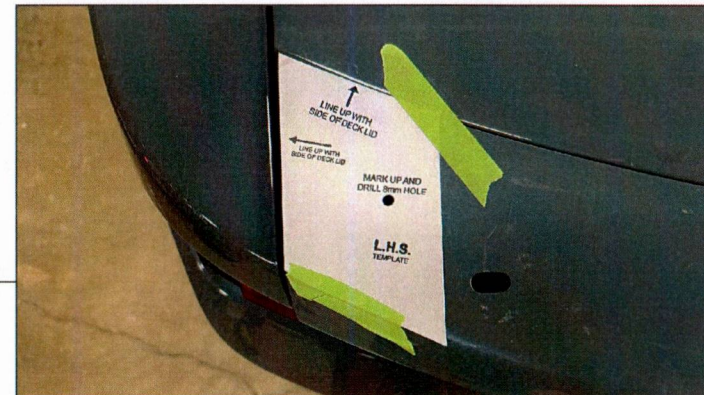

Vehicles without OEM rear spoiler: Align the provided drilling template to the trunk panel, and secure into place using masking tape. The edge of the template will meet with the outer-most and the top edge of the trunk panel. Drill using a 8mm or 5/16" drill bit.

With one side drilled, remove the template and turn the template upside-down and drill the opposite side. The template is labeled for Left Hand (LH) & Right Hand (RH) side orientations.

STEP 6

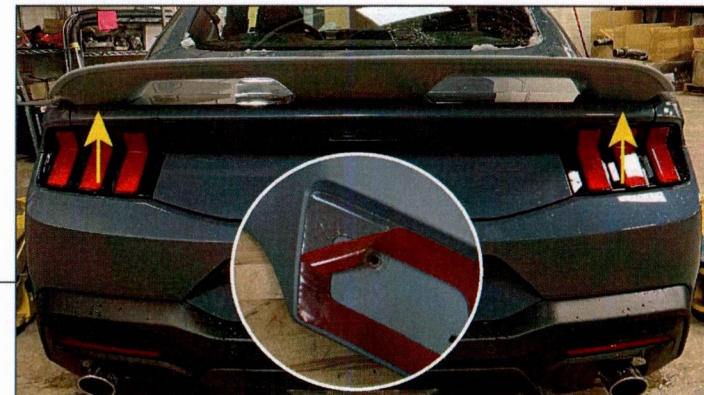

Peel the red tape backing from the pre-installed spoiler double sided tape. Then, with a helper, hold the spoiler above the trunk, and thread the provided (2) M6 flange bolts w/ flat washers into the spoiler.

Once the M6 bolts are started, place the spoiler down to the trunk. Tighten the (2) M6 flange bolts, then firmly press the spoiler down to encourage double sided tape adhesion.

SPEEDFORM



STEP 7

Re-install the OEM trunk grommets into place inside the trunk.

Installation is now complete.